



02320

Please read the following instructions and warnings carefully.

Keep this instruction manual for future reference.

Tools required:

Phillips head screwdriver (not included)

In portable mode, Baby's Unit requires 3 "AAA" batteries (not included) and the Parent Units each require one rechargeable battery (included).

For Technical Support Call 1-800-268-6237 or E-Mail at customerservice@summerinfant.com

For use with children from birth and up.

! WARNING:

Adult assembly required.
Exercise care when unpacking and assembling product.



INSTRUCTION MANUAL

SECURE SOUNDS 2.4 GHz DIGITAL MONITOR WITH 2 PARENT UNITS

Thank you for buying the Secure Sounds™ 2.4 GHz Digital Monitor from Summer Infant. Two parent units are included for either multi-room monitoring or so that both parents can monitor their baby from anywhere in the home. The 2.4 GHz digital technology provides a secure and private transmission, minimizing interference. Auto-channel scan selects a free and secure channel for parents so the only sounds you hear are from you and your baby. Rechargeable batteries are included in both parent units as well as belt clips for maximum portability.

WARNING:

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.

- Prevent cord entanglement – do not place transmitter in crib or within arm's reach of baby. Never use extension cords with AC adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test monitor before first use, periodically, and when changing location of the components.
- Do not use monitor near water (such as bathtub, sink, etc.).
- Keep monitor away from heat sources (such as stoves, radiators, etc.) and make sure there is proper ventilation (not on sofas, cushions, beds, etc. which may block ventilation).
- Nursery monitors use public airwaves to transmit and receive signals. This monitor may pick up signals from other monitors or similar devices, and signals broadcast by this monitor may be picked up by other receivers.
- This product is not a toy. Do not allow children to play with it.

BATTERY WARNING:

 
- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Remove batteries and unplug the rechargeable battery pack pigtail when product is stored for a long period of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Use only the original rechargeable battery pack. Warranty void if other batteries are used. Please contact Summer Infant, Inc. for a replacement battery pack, contact information can be found at the end of the instruction booklet.

CAUTION:


- 2 KEEP SMALL PARTS OUT OF CHILD'S REACH.**

FEATURES & COMPONENTS:


Parent's Unit (2):

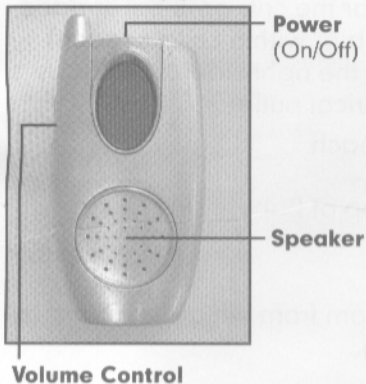


Parent's Unit (Back View):

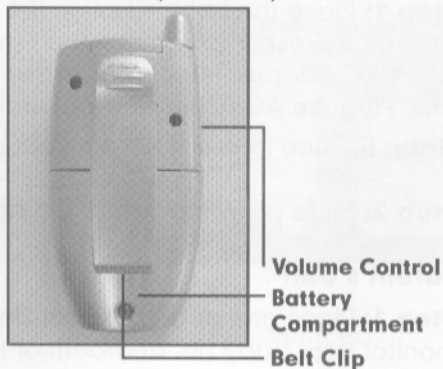 


Baby's Unit:

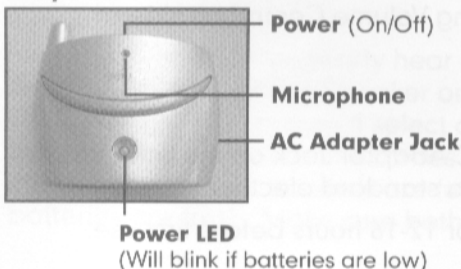 


Baby's Unit (Back View):

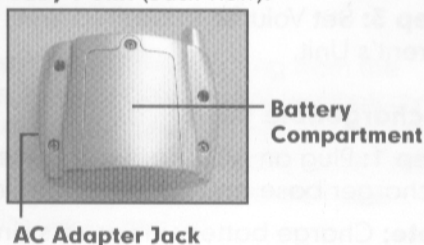 


Function of Sound LEDs:

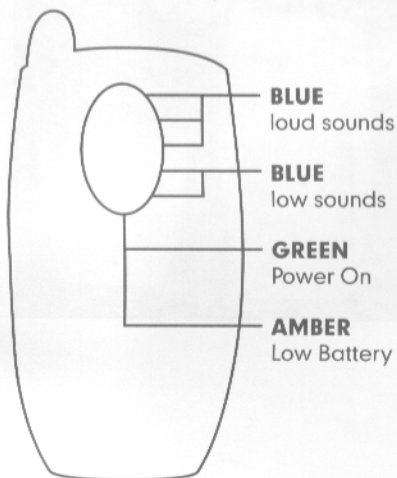 

Parent's Unit Rechargeable Base (2):

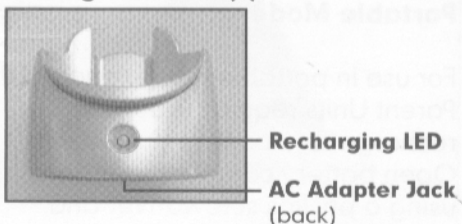 

AC Adaptors (3)

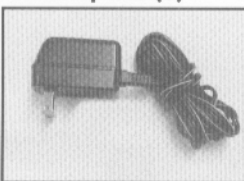 

Parent's Unit will beep after 10 seconds if Baby's Unit is too close, out of range or turned off.

SET UP & USE:

Baby's Unit

Step 1: Place the Baby's Unit in the nursery near the crib on a flat surface, such as a dresser, bureau or shelf (not in the crib or within child's reach). Insert AC Adapter into the AC Adapter Jack on the right side of the Baby's Unit. Plug the AC Adapter into a standard electrical outlet.

Note: Be sure to keep all cords out of baby's reach.

Step 2: Slide power switch to On position on top of Baby's Unit.

Parent's Unit

Step 1: Place one or both Parent Units in the room from which you want to monitor your baby (ie. bedroom or living room).

Step 2: Slide power switch to On position on top of Parent's Unit.

Step 3: Set Volume to desired level using Volume Control on side of Parent's Unit.

 
Rechargeable Base

Step 1: Plug an AC Adapter into the AC Adapter Jack on the back of the recharger base and the other end into a standard electrical outlet.

Note: Charge battery in Parent's Unit for 12-16 hours before first use.

To use the Parent's Unit in Portable Mode


For use in portable mode, each of the Parent Units require one 4.8 V rechargeable battery (included). Open battery compartment door using a phillips screwdriver and make sure battery is connected. Replace battery compartment door. When the power LED is amber color, the battery needs to be recharged.

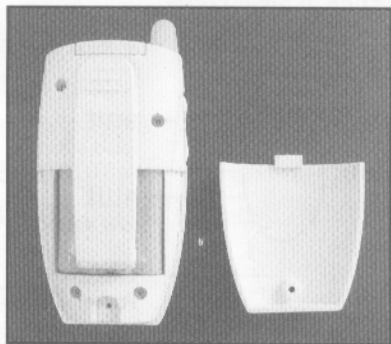

SET UP & USE (continued):

To use the Baby's Unit in Portable Mode

 For use in portable mode, the Baby's Unit requires 3 "AAA" batteries (not included). Open battery compartment door using a phillips head screwdriver and insert 3 "AAA" batteries. Replace battery compartment door.

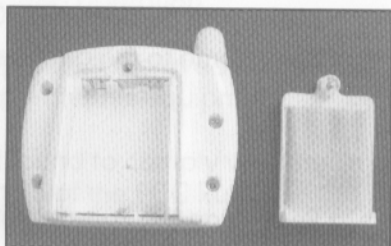

Power LED on Baby's Unit will blink if batteries need to be replaced.

Caution: When using Baby's Unit in portable mode, be sure to keep it out of the child's reach.

Testing the Product

You should be able to clearly hear all levels of sound coming from the Baby's Unit through the Speaker on the Parent's Unit. Digital technology will automatically scan and select a free and secure channel so you only hear your baby. If no sound comes from the Speaker of the Parent's Unit check to make sure all cords are fully plugged in and connected and batteries are fresh. Make sure both Units are turned on.

Belt Clip:

For convenience and portability, you can clip the Parent's Unit to your belt or waistband.



PROBLEM SOLVING:

No sound coming from speaker

- Make sure all Units are "ON."
- Set volume to a higher setting.

Static

- Reposition the Parent Units, or move the Parent Units closer to the Baby's Unit.

Squealing noise

- Parent Units and Baby's Unit too close together – move further apart.
- Turn down the volume on Parent Units or both Units.

Beeping noise

- Beeping noise every 3 seconds coming from Parent's Unit indicates that Child Unit is not turned on.

Weak reception or no reception

- Make sure both Units are turned on.
- Move Parent's Unit closer to the Baby's Unit.
- Make sure the battery is charged.

NOTE: Digital technology will automatically scan multiple channel frequencies and select a free and secure channel.

If you experience a problem that is not noted in this manual, please do not return the product to the store. Our Customer Service Department may have a simple solution to your problem. Please contact us 1-800-268-6237 or e-mail us at customerservice@summerinfant.com.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by Summer Infant Inc. may void the users authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Note: Use only the original rechargeable battery pack. Warranty void if other batteries are used. Please contact Summer Infant, Inc. for a replacement battery pack, contact information can be found on the next page.

Summer Infant, Inc. Monitor Warranty Policy

Summer Infant Inc. will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the unit is defective in workmanship or materials. To claim your repair/replacement, the product must be returned to Summer Infant along with a copy of the original purchase receipt. In the absence of the purchase receipt, the warranty will be 12 months from the date of manufacture.

This warranty does not apply to normal wear or damage from misuse, abuse, improper storage and handling, installation, accident, unauthorized repair or alteration.

Please contact our Customer Service Department by phone at 1-800-268-6237 or via email at customerservice@summerinfant.com for details.



visit us at

www.summerinfant.com

We at Summer Infant stand behind all of our products. If you are not completely satisfied or have any questions, please contact our Customer Service Department at 1-800-268-6237 or e-mail us at customerservice@summerinfant.com.

Summer Infant, Inc.

582 Great Road
PO Box 829
Slatersville, RI 02876-0899 USA
1-800 268-6237

Summer Infant Europe, LTD.

20 Sparrows Herne
Bushey, Hertfordshire
WD23 1FX UK
44(0) 208 420 4429

©2005 Summer Infant, Inc.
Please retain information
for future reference.
Colors and styles may vary.
MADE IN CHINA. 9/06