

LOOKOUT™ with No-Hole PrestoMount™

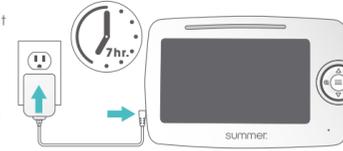
DIGITAL ZOOM NIGHT VISION DIGITAL PRIVACY TALK BACK

Thank you for purchasing the LookOut™ with No-Hole PrestoMount™ Digital Color Video Monitor by Summer Infant. Keep this instruction manual for future reference. Please read the following instructions and warnings carefully.

1 SETTING UP THE CAMERA & HANDHELD SCREEN

Charge the Handheld

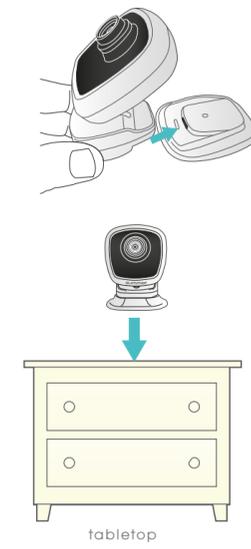
Charge for 7 hours before first use. After the initial charge, recharge when necessary for 7 hours. We recommend charging overnight. NOTE: While powered off, you will not see an indicator that the handheld is charging.



Install the Nursery Camera on tabletop

LookOut™ comes with a camera stand for use on tabletop or dresser. This can also be handy for travel. NOTE: For best picture focus, place camera 6 to 8 ft. from crib.

For tabletop use:

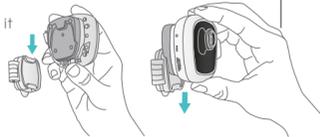
1. Attach camera to the stand. Make sure it securely clicks into the stand. Plug in camera and follow instructions in the Secure the Camera Cord section.
 2. Place camera on a flat surface, such as a dresser or shelf.
- 

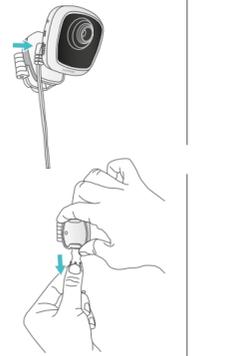
Install the Nursery Camera on wall

NOTE: For best picture focus, place camera 6 to 8 ft. from crib.

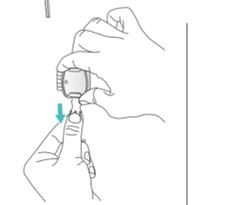
For wall mount use:

1. Before mounting your wall-mount to the wall, check to make sure that you like the view on your handheld screen.
 2. Peel the paper backing from the back of the wall mount, discard paper, and then push mount for 30 seconds against wall. For best performance, let the adhesive cure for 60 minutes before putting the camera onto the wall mount.
- 

3. Slide camera onto mount until it clicks into place.
- 

4. Plug cord into left side of camera. proceed to next page to the Secure the Cord section.
- 

To remove wall mount:

1. Remove camera from the mount and pull tab at bottom of mount and remove from the wall. Caution: keep one hand on mount while pulling tab with other hand.
- 

Read all warnings prior to using this product.

WARNING

STRANGULATION HAZARD: Children have strangled in cords. Keep this cord out of the reach of children (more than 3 ft. (0.9m) away).

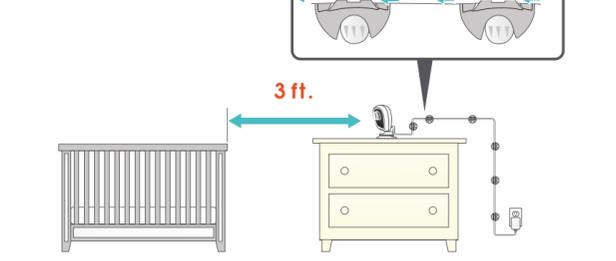


Secure the Camera Cord

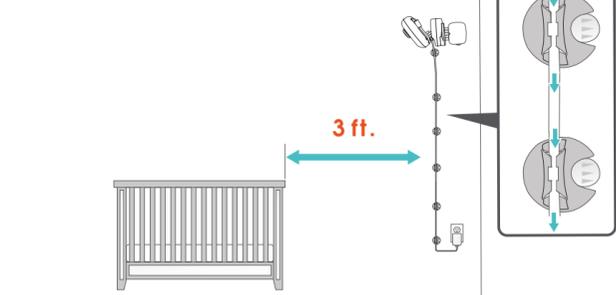
NEVER place the camera or cords within 3-feet of the crib. Secure the cord to your wall using the 6 security clips included to keep the cord away from baby's reach.

Place one clip close to the camera and at same height as camera, approximately 3-4 inches away, going away from the camera and from the crib. This clip will serve as an added measure to help prevent the camera from falling. Remove and discard the paper backing from the back of the security clip and press for 30 seconds against wall.

Table top use:

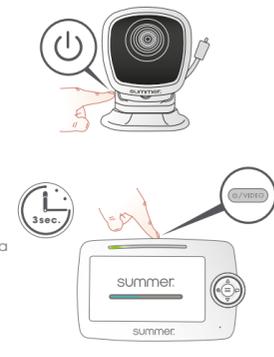


Wall mount use:



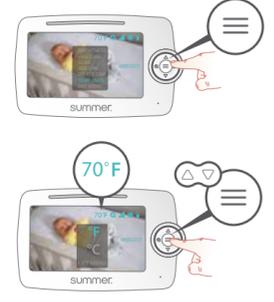
If you ever need to remove the security clips, the clips remove by pulling on the exposed tab. Caution: keep one hand on security clip while pulling tab with other hand. You can order more security clips or wall mounts through our Customer Relations.

Power on the Nursery Camera & Parent Handheld

1. Press the POWER button  on the camera and hold for 3 seconds. A green light will appear near the lens.
 2. Press and hold the POWER/VIDEO button on the handheld unit for 3 seconds. The handheld will automatically sync with the camera.
- 

NOTE: The handheld unit and the camera are paired at the factory for privacy reasons. (If the handheld and camera are not paired with each other for any reason, see "Adding a Camera" section.)

Setting Nursery Temperature Units (°F or °C)

1. Press the MENU/SELECT button .
 2. Select TEMP UNIT from the menu and press the MENU/SELECT button .
 3. Press the UP and DOWN buttons  to select °F or °C. Temperature units will change to selected unit in the upper bar.
 4. Navigate to EXIT in the menu, then press the MENU/SELECT button .
- 

Menu screen will return to camera mode after 8 seconds of inactivity.

For most efficient use, MAKE sure to move the temperature sensor away from the nursery camera.



Congratulations! You are now ready to use your LookOut™ with No-Hole PrestoMount™ Digital Color Video Monitor!

2 GETTING TO KNOW YOUR HANDHELD

Screen Icons

- 70°F Nursery Temperature Display
 - Talk-back
 - Zoom
 - Reception
 - Current Viewing Camera (1-4)
 - Battery Life/Plugged In
- 

Function Buttons

- Power/Video
 - Menu/Select
 - Volume Up
 - Volume Down
 - Talk-back
 - Zoom
- 
- Flip out the kick-stand and place the monitor on a stable, level surface.

3 VIEWING YOUR BABY

Adjusting the Handheld Screen Brightness

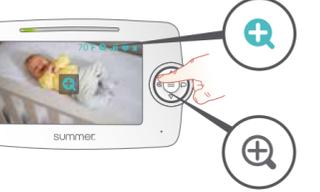
1. Press the MENU/SELECT button .
 2. Select BRIGHTNESS from the menu and press the MENU/SELECT button .
 3. Press the UP and DOWN arrow buttons  to increase or decrease brightness.
- 

Video On/Off Power Save Mode

This feature helps conserve battery life when not plugged into an A/C adapter. The audio feature will remain activated, allowing you to monitor sounds. 1. To activate POWER SAVE, turn off the handheld's video by pressing the POWER/VIDEO button . The screen will go dark. 2. Press the POWER/VIDEO button  again to wake up the screen. When the handheld is not plugged in, the screen will automatically enter power save mode after 30 seconds.



Zoom In and Out

1. Press the ZOOM button  to zoom in.
 2. Press the button again to zoom out.
- 

4 HEARING & SOOTHING YOUR BABY

Sound-Activated Lights

The LED light bar on top of handheld will light up as it picks up noises, even in power save mode. When battery is low, the first LED flashes red and the handheld beeps.



Talk-back to Baby

Reassure and soothe baby with the sound of your voice and press of a button. 1. Press and hold the TALK-BACK button  to talk to your baby. 2. Release the button to end talk-back mode.



Volume

Press the UP/DOWN arrow buttons  to increase and decrease the volume.



5 ADDING AND VIEWING CAMERAS

Adding a Camera

Your digital video monitor accepts up to 4 cameras total. You can select the one you want to view OR use the auto-scan mode to cycle through each camera on an 8-second rotation.

1. Make sure the power is on for the camera you want to add.
2. Press the MENU/SELECT button ≡ to enter menu screen.
3. Using the DOWN button ▽, scroll to ADD CAM and press the MENU/SELECT button ≡ to select.
4. Using the UP or DOWN buttons Δ▽ scroll to the camera number you would like to add and press MENU/SELECT button ≡ to select.
5. Press the SYNC button on the back of the camera. Three bars will appear next to the camera icon to indicate syncing.



If unsuccessful, repeat the above steps. Extra Cameras: To order an additional camera (item #36164), please contact our Consumer Relations Team at 401-671-6551 or visit www.summerinfant.com/contact.

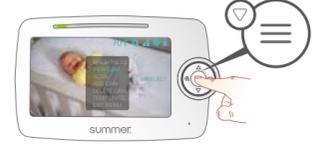
Deleting a Camera

1. Press the MENU/SELECT button ≡.
2. Press the DOWN button ▽, highlight DELETE CAM and press the MENU/SELECT button ≡ to select.
3. Use the UP or DOWN buttons Δ▽ to highlight the camera you want to delete.
4. Press the MENU/SELECT button ≡ to delete that camera.



Selecting a Camera to View

1. Press the MENU/SELECT button ≡.
2. Press the DOWN button ▽, highlight VIEW CAM and press the MENU/SELECT button ≡ to select.
3. Press the UP and DOWN buttons Δ▽ to select an available camera. Blue color indicates paired cameras.
4. Press MENU/SELECT button ≡ to confirm selection.



Scanning Cameras

1. Press the MENU/SELECT button ≡.
2. Using the DOWN button ▽, select SCAN and press the MENU/SELECT button ≡. Scanning cameras will begin, cycling through each active camera every 8 seconds.
3. To stop scanning, press the MENU/SELECT button ≡.



⚠ WARNING

Adult assembly required. Keep small parts away from children when assembling.



⚠ WARNING

- THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.
- STRANGULATION HAZARD - Children have STRANGLED in cords. Keep this cord out of reach of children (more than 3 feet (0.9 m) away from the crib). Use enclosed Security Clips to help secure cord away from baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.
 - When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
 - Test monitor before first use, periodically, and when changing location of the Camera.
 - Do not use monitor near water (such as bathtub, sink, etc.).
 - Keep monitor away from heat sources (such as stoves, radiators, etc.).
 - Make sure there is proper ventilation around all monitor components. Do not place on sofas, cushions, beds, etc. which may block ventilation.
 - This product is not a toy. Do not allow children to play with it.
 - This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product.

⚠ WARNING

- BATTERY:**
- Use only the original rechargeable battery provided. Please contact Summer Infant (USA), Inc. for replacement battery. Contact information can be found on the back page of these instructions or on the battery itself.
 - Do not short-circuit supply terminals.
 - Only the recommended battery or equivalent are to be used, volts and size.
 - Remove battery when product is stored for long periods of time or when battery is exhausted.
 - Dispose of exhausted battery properly.
 - Keep all batteries away from children.

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by Summer Infant may void the users authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiver
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

CAUTION: 1. To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons. 2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference.(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

Summer Infant (USA), Inc. Monitor Warranty Policy

Summer Infant (USA), Inc. will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the unit is defective in workmanship or materials. To claim your repair/replacement, the product must be returned to Summer Infant along with a copy of the original purchase receipt. In the absence of the purchase receipt, the warranty will be 12 months from the date of manufacture. This warranty does not apply to normal wear or damage from misuse, abuse, improper storage and handling, installation, accident, unauthorized repair or alteration. Please contact our Consumer Relations Team by phone at 401-671-6551 or via e-mail at summerinfant.com/contact for details. For sale and use in the USA. The warranty is null and void if used outside its intended territory.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read Instructions - All the safety and operating instructions should be read before the product is operated.
- 2) Retain Instructions - The safety and operating instructions should be retained for future reference.
- 3) Heed Warnings - All warnings on the product and in the operating instructions should be adhered to.
- 4) Follow Instructions - All operating and use instructions should be followed.
- 5) Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6) Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7) Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 8) Accessories - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9) Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surfaces. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 10) Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 11) Power-Cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- 12) Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 13) Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 14) Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

15) Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

16) Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged,
- b) If liquid has been spilled, or objects have fallen into the product,
- c) If the product has been exposed to rain or water,
- d) If the product does not operate normally by following the operating instructions. Adjusting only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
- e) If the product has been dropped or damaged in any way, and
- f) When the product exhibits a distinct change in performance - this indicated a need for service.

17) Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

18) Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

19) Wall or Ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

20) Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

TIPS & TROUBLESHOOTING

- No picture or sound**
- Make sure the camera and handheld monitor unit are paired.
 - Make sure the camera and handheld monitor unit are turned on.
 - Make sure the AC adapters are plugged in.
 - Make sure the outlets are working.
- Sound but no picture**
- Press the Video On-Off Button once to turn on video mode.
 - Make sure nothing is blocking the camera.
 - Test reception by moving the handheld unit and/or camera to different locations.
 - Make sure the camera and handheld monitor unit are paired.
- Picture but no sound**
- Power the handheld completely off, then turn handheld back on.
 - Turn up the volume using Volume Control.
- Picture not clear**
- Wipe camera lens with microfiber or clean, damp cloth.
 - Position the handheld unit closer to the camera.
 - Move the handheld unit away from other electronic devices, cordless phones, etc.
 - Adjust the brightness using the Brightness Control.
 - Test reception by moving the handheld unit and/or camera to different locations.
 - Place camera 6 to 8 ft. from crib for optimized focus. Make sure to follow instructions and warnings for camera placement.

MONITOR OWNER'S GUIDE

TIPS & TROUBLESHOOTING (cont.)

- Squealing sound coming from speaker on Handheld Unit**
- Move the handheld unit and camera further away from each other.
 - Turn the volume down using Volume Control.
 - Power both the handheld and camera off completely. Remove and re-insert the handheld battery, then turn both back on.

- Handheld is beeping**
- If no video, turn on camera.
 - If battery is low, charge battery. After the initial charge, recharge when necessary for 7 hours. We recommend charging overnight.

Temperature listed as LL or HH

- Room temperature is outside of the thermometer limits. The thermometer is effective in between 32°F – 100°F (0°C – 38°C).

If you receive a false error message, please contact our Consumer Relations Team.

Camera isn't syncing with handheld

- Delete camera and add it back.

We're here to help!
If you have issues or questions not addressed in this Owner's Guide, contact us at 401-671-6551 or www.summerinfant.com/contact
Do not return the product to the store.



ORDERING REPLACEMENT PARTS

To order replacement parts or extra cameras, contact our Consumer Relations Team at 401-671-6551 or visit www.summerinfant.com/contact

- Camera AC Adapter:.....#29580-05
- Handheld AC Adapter:.....#29580-13
- Extra Camera:.....#36164
- Handheld Screen:.....#36134-02
- Wall Mount:.....#36134-21
- Cord Clips:.....#36134-22
- LookOut™ Tabletop Stand:.....#36134-20
- Rechargeable Ni-MH AAA size 4.8V 800mAh battery:....#29580-10

CONTACT US

Summer Infant (USA), Inc.
1275 Park East Drive
Woonsocket, RI 02895
401-671-6551

Summer Canada, Ltd.
200 First Gulf Blvd., Unit C
Brampton, Ontario,
Canada L6W 4T5
905 456-8484



© 2018 Summer Infant (USA), Inc.
Colors and styles may vary.
Please retain information
for future reference.
Made in China.