

# COBY®

**True Wireless  
Party Speaker**



**Instruction Manual  
CSTW530**



# Table of Contents

<b>Read Me.....</b>	<b>3</b>
<b>English .....</b>	<b>4</b>
Introduction.....	4
Package Contents .....	4
Product Overview .....	5
True Wireless Pairing .....	5
Connecting Via Bluetooth® .....	6
Music Controls.....	6
Radio .....	7
AUX, Memory Card & USB Mode .....	7
Specifications.....	8
<b>Español .....</b>	<b>8</b>
Introducción .....	8
Contenidos del paquete .....	9
Descripción del producto .....	10
Verdadero emparejamiento inalámbrico .....	10
Conexión a través de Bluetooth® .....	11
Controles de la música .....	11
Radio .....	12
AUX, tarjeta de memoria y modo USB .....	12
Especificaciones.....	13
<b>SUMMIT ELECTRONICS LLC ONE YEAR LIMITED .....</b>	<b>13</b>
Contact Us .....	15

# Read Me

Read these instructions.  
Keep these instructions.  
Heed all warnings.  
Follow all instructions.  
Do not use this apparatus near water.  
Clean only with dry cloth.  
Do not block any ventilation openings.  
Install in accordance with the manufacturer's instructions.  
Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.  
Protect the power cord from being walked on or pinched particularly at plugs, and the point where they exit from the apparatus.  
Only use attachments/accessories specified by the manufacturer.  
Unplug this apparatus during lightning storms or when unused for long periods of time.

## FCC Notice to Users

FCC ID: 2AMSOSTW001

Caution: Changes or modifications not expressly approved by the Party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection Against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, however there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

If repairs are necessary, please use qualified service personnel. Repairs may be necessary if the device has been damaged in any way. Such as the power-supply cord or plug being damaged, the device being exposed to rain or moisture, objects falling into the device, the device does not operate normally, or has been dropped. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for Help.

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Summit Electronics LLC is under license. Other trademarks and trade names are those of their respective owner.

# English

## Introduction


Thank you for purchasing the CSTW530. This instruction manual is intended to help you better understand and use your Bluetooth® Speaker. Terms covered in this manual will become more familiar to you as you use your speaker.

Before using this device for the first time, please fully charge the battery by plugging the provided Micro USB cable into the port of your speaker and plugging the other end into a local power source. The LED indicator will glow red to indicate that the speaker has begun charging and will turn off when the speaker is fully charged.

## Package Contents

1 x CSTW530 Party  
Speaker 1 x Charging Cable  
1 x User Manual

# Product Overview

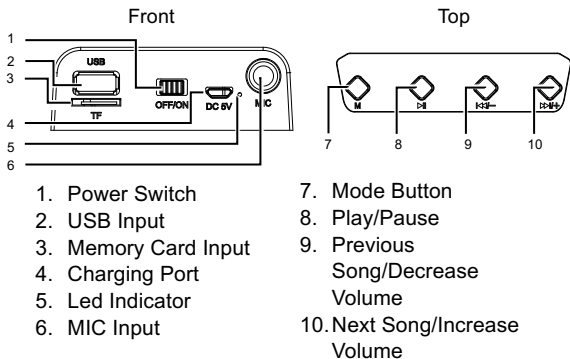

## True Wireless Pairing

Your CSTW530 speaker supports True Wireless Pairing, meaning you may transmit music from your device to two CSTW530 speakers at the same time with no wires connecting the two speakers.

To pair or unpair two speakers with each other press and hold the *Mode Button* on either speaker. Once the speakers are connected to each other connect your Bluetooth® device as instructed in *Connecting Via Bluetooth®* on page 6.

To *reconnect* while music is playing you must hold the *Mode Button* on the *primary* speaker.

**Note:** The speaker that you initiate True Wireless Pairing on by holding the Mode Button will become the primary speaker. If you turn off the primary speaker, both speakers will turn off.

True Wireless Pairing only works in Bluetooth® mode.

## Connecting Via Bluetooth®

Open the Bluetooth® settings on a Bluetooth® enabled device (phone, tablet, laptop, etc.) and turn on the devices Bluetooth® functionality. Select CSTW530 when it appears, and you will hear an indication tone to alert you that the device has connected to your speaker successfully.

**Note:** On some devices you may need to scan or search for devices. Please reference your devices user manual on connecting Bluetooth® devices if you are unsuccessful

## Music Controls

After you connect your device to the CSTW-530 music and podcasts will be playable through your app of choice.

To pause or resume your music in Bluetooth® mode, USB Input mode, and Memory Card Input mode press the *Play/Pause* button.

Single press the *Previous Song/Decrease Volume* or *Next Song/Increase Volume* to skip

to the next song or go to previous song respectively.

Adjust the volume by pressing and holding the *Previous Song/Decrease Volume* or *Next Song/Increase Volume*.

## **Radio**

To begin scanning FM radio stations press the *Play/Pause* button. This will scan through all available stations and save them to your speaker's memory. To manually switch radio stations, press *Previous Song/Decrease Volume* or *Next Song/Increase Volume*.

## **AUX, Memory Card & USB Mode**

To connect on non-Bluetooth® enabled devices you can use an AUX cable, USB Drive, or Memory Card to play music directly on your speaker. See *Music Controls* on page 6 to make music and volume adjustments as necessary.

**Note:** When an AUX cable is connected, or memory card/flash drive are inserted, your speaker will automatically unpair from any actively paired Bluetooth® device.

## Specifications

<b>Bluetooth® Version</b>	5.0
<b>Bluetooth® Range</b>	33 Feet
<b>Bluetooth® Pairing Name</b>	CSTW530
<b>Playtime</b>	Up to 10 Hours
<b>Charge Time</b>	1 Hour
<b>Frequency Response</b>	100Hz - 20KHz
<b>Driver Unit Size</b>	3 Inches
<b>Impedance</b>	3 $\Omega$
<b>USB &amp; Memory Card Storage</b>	Up to 32 GB
<b>FM Radio</b>	87.5 MHz - 108.0 MHz
<b>Battery Capacity</b>	800mAh
<b>Battery Type</b>	Rechargeable Lithium-ion
<b>Charge Voltage</b>	5V/1A
<b>Output Power</b>	5W

## Español

### Introducción

Gracias por comprar el CSTW530. El objetivo de este manual de instrucciones es ayudarlo a comprender y utilizar mejor su altavoz Bluetooth®. Los términos cubiertos en este manual le resultarán más familiares a medida que use su altavoz.




Antes de usar este dispositivo por primera vez, cargue completamente la batería enchufando el cable Micro USB provisto en el puerto de su altavoz y conectando el otro extremo a una fuente de alimentación local. El indicador LED se iluminará en rojo para indicar que el altavoz ha comenzado a cargarse y se apagará cuando el altavoz esté completamente cargado.

## **Contenidos del paquete**

- 1 x altavoz de fiesta CSTW530
- 1 x cable de carga
- 1 x manual de usuario

# Descripción del producto

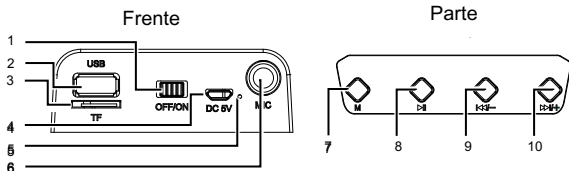

- |                                  |                                       |
|----------------------------------|---------------------------------------|
| 1. Interruptor de alimentación   | 7. Botón de modo                      |
| 2. Entrada USB                   | 8. Reproducir/pausar                  |
| 3. Entrada de tarjeta de memoria | 9. Canción anterior / Bajar volumen   |
| 4. Puerto de carga               | 10. Siguiente canción / Subir volumen |
| 5. Indicador LED                 |                                       |
| 6. Entrada MIC                   |                                       |

## Verdadero emparejamiento inalámbrico

Su altavoz CSTW530 admite el *Botón de modo* emparejamiento inalámbrico verdadero, lo que significa que puede transmitir música desde su dispositivo a dos altavoces CSTW-530 al mismo tiempo sin cables que conecten los dos altavoces.

Para emparejar o desvincular dos altavoces entre sí, mantenga presionado el en cualquiera

de los altavoces. Una vez que los altavoces estén conectados entre sí, conecte su dispositivo Bluetooth® como se indica en *Conexión a través de Bluetooth®* en la página 11.

Para volver a conectar mientras se reproduce música, debe mantener *Botón de modo* en el orador principal.

**Nota:** El altavoz en el que inicia el emparejamiento inalámbrico verdadero manteniendo presionado el botón de modo se convertirá en el altavoz principal. Si apaga el altavoz principal, ambos altavoces se apagarán. El emparejamiento inalámbrico verdadero solo funciona en modo

## Conexión a través de Bluetooth®

Abra la configuración de Bluetooth® en un dispositivo con Bluetooth® (teléfono, tableta, computadora portátil, etc.) y active la funcionalidad Bluetooth® del dispositivo. Seleccione CSTW530 cuando aparezca, y escuchará un tono de indicación para avisarle que el dispositivo se ha conectado a su altavoz exitosamente.

## Controles de la música

Después de conectar su dispositivo a la música CSTW530 y los podcasts se reproducirán a través de la aplicación que elija.

Para pausar o reanudar su música en modo Bluetooth®, modo de entrada USB y modo de entrada de tarjeta de memoria, presione el

## Mode Button

Play/Pause *Play/Pause* botón.

Solo presione el *Canción anterior / Bajar volumen* o *Siguiente canción / Subir volumen* para saltar a la siguiente canción o ir a la canción anterior respectivamente.

Ajuste el volumen presionando y sosteniendo *Canción anterior / Bajar volumen* o *Siguiente canción / Subir volumen*.

## Radio

Para comenzar a buscar estaciones de radio FM, presione el botón Reproducir / Pausa. Esto explorará todas las estaciones disponibles y las guardará en la memoria de su altavoz. Para cambiar manualmente las estaciones de radio, presione *Canción anterior / Bajar volumen* o *Siguiente canción / Subir volumen*.

## AUX, tarjeta de memoria y modo USB

Para conectarse a dispositivos no habilitados

para Bluetooth®, puede usar un cable AUX, unidad USB o tarjeta de memoria para reproducir música directamente en su altavoz. Ver controles de música en la página 6 para hacer ajustes de música y volumen como necesario.

**Nota:** Cuando se conecta un cable AUX, o cuando se inserta una tarjeta de memoria / unidad flash, su altavoz se desconectará automáticamente de cualquier dispositivo Bluetooth® activamente emparejado.

## Especificaciones

<b>Versión Bluetooth®</b>	5.0
<b>Alcance Bluetooth®</b>	33 pies
<b>Nombre de emparejamiento de Bluetooth®</b>	CSTW530
<b>Tiempo de juego</b>	Hasta 10 horas
<b>Tiempo de carga</b>	1 hora
<b>Respuesta frecuente</b>	100Hz - 20KHz
<b>Tamaño de la unidad del conductor</b>	3 pulgadas
<b>Impedancia</b>	3 Ω
<b>Almacenamiento de USB y tarjeta de memoria</b>	Hasta 32 GB
<b>Radio FM</b>	87.5 MHz - 108.0 MHz
<b>Capacidad de la batería</b>	800mAh
<b>Tipo de Batería</b>	Recargable de iones de litio
<b>Voltaje de carga</b>	5V/1A
<b>Potencia de salida</b>	5W

# SUMMIT ELECTRONICS LLC ONE YEAR LIMITED

**WARRANTY SUMMIT ELECTRONICS LLC LIMITED WARRANTY ("Warranty")** — For Product Categories Listed in Chart Below (as applicable, "Product") Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully. If you are still having trouble with your Product, please contact Technical Support at [support@summitcegroup.com](mailto:support@summitcegroup.com)

Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children.

Subject to the terms and conditions herein, SUMMIT ELECTRONICS LLC (hereinafter called "SUMMIT ELECTRONICS LLC") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects"). Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period for one year, to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, SUMMIT ELECTRONICS LLC will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable) either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/ or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and SUMMIT ELECTRONICS LLC's sole liability for breach of the limited warranty contained herein.

This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than SUMMIT ELECTRONICS LLC or a party authorized in writing by SUMMIT ELECTRONICS LLC; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions; or (g) any acts of God. Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use.

In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. SUMMIT ELECTRONICS LLC disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product and agrees to indemnify SUMMIT ELECTRONICS LLC for any damages claimed against SUMMIT ELECTRONICS LLC for such uses. EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS", AND SUMMIT ELECTRONICS LLC DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (I) OF MERCHANTABILITY, (II) OF FITNESS FOR A PARTICULAR PURPOSE, OR (III) OF NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL SUMMIT ELECTRONICS LLC BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL,

CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF SUMMIT ELECTRONICS LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, SUMMIT ELECTRONICS LLC'S AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING THE DAMAGES, IF ANY. This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. To obtain Warranty service, Customer must email SUMMIT ELECTRONICS LLC Technical Support prior to making a Product return. Customer must include with Product return the following items (failure to enclose any of these items may result in a delay in the processing of your Warranty claim): (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of Customer's problem with Product; (iii) Customer's full name, phone number, and return address, and; (iv) a money order made out to SUMMIT ELECTRONICS LLC Electronics Corporation to cover return shipping charges to US destinations only, for the applicable dollar amount shown for the Product in the table above. SUMMIT ELECTRONICS LLC will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to Customer. Return your Product freight-prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim (6 to 8 weeks from November to February).

<b>PRODUCT CATEGORY</b>	<b>SHIPPING* (USD)</b>
Adapters, Converters, Chargers, Headphones, Microphones, Cellular Accessories	\$7.99
Alarm Clocks, Portable CD Players, Radios, Corded Telephones, MP3 Players, Digital Photo Frames (screen size less than 5")	\$7.99
Portable Stereo Systems, Speaker Systems, Cordless Telephones, Home DVD Players	\$14.99
Home Theater DVD Systems, Portable DVD Players, Portable Media Players, Digital Photo Frames (screen sizes 5" to 11")	\$21.99

You must email SUMMIT ELECTRONICS LLC Technical Support prior to making a return. Please ask if you are unsure of which category your product falls under.

\*US destinations only.

## Contact Us

Contact us at [support@summitcegroup.com](mailto:support@summitcegroup.com) for return information and customer support!