



Index

Installation and Commissioning	4
Important information Security.....	6
Environmental Recycling	10
Locating controls	11
Keys and features	13
Screen icons	15
Installing the SIM card and Battery	15
On and off.....	19
Use function menu	20

Basic functions	21
Text Input	27
Texting	29
Agenda	34
Adjustments	39
Profiles	45
Calendar	46
Calculator	48
Alarm	49
Do any doubt	50
DoC	51

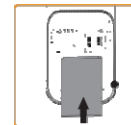 
Installation and Commissioning



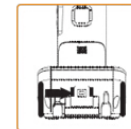
1. press lightly and remove the battery cover



2. Insert the SIM card matching the gold contacts on the phone and the card



3. Insert the battery by aligning the gold contacts on the phone and battery



4. to load the terminal, connect the charger to the charging socket and any home. Check the orientation of the connector and do not force the connection if it is not immediate. Place the phone on this base



5. press and hold for a few seconds to turn the phone. Enter the



6. dial the phone number with the numeric keypad and press to make a call

Important safety

Before using the appliance please read this manual startup, especially the safety instructions.

! safety warnings

The working temperature is from -10°C to 55°C.

In each country may be different rules in force regarding the use of mobile phones (for example, while driving, in hospitals, service stations or aircraft).

Observe the laws regarding the use of existing mobile phone at home and turn off the device when its use is prohibited or when it may cause interference or danger situations.

Use the device only in accordance with its intended use and only in places where a phone call in no danger.

Use only the power adapter and battery manufacturer. If an unsuitable or not properly adapter is used, there is danger of explosion.

The battery should not be opened or exposed to flame. Dispose of used batteries according to the current regulations.

The correct operation of medical appliances may be altered by the use of mobile phones. Pacemaker manufacturers recommend that a minimum distance of 20 cm between devices when the mobile phone is on. Do not carry your phone in your pocket next to the chest.

⚠ Attention

Do not expose the unit to moisture or extreme heat (strong sunlight or direct radiation), or cold (persistent frost). Do not drop the unit and avoid subjecting it to shock, impact or pressure.

Do not drop the unit and avoid subjecting it to shock, impact or pressure.

The phone may cause interference to be near televisions, radios and other electrical appliances.

Do not ever spray with spray cleaners as it can penetrate through the holes and damage the appliance.

Hearing Protection



When listening to music, adjust the volume to a moderate level.

Continuous exposure to high volume may impair your hearing.

Environmental Recycling

Never pull the phone with household waste.

Ask your municipality about proper disposal possibilities do not ruin the environment. The cardboard box, the plastic contained in the packaging and the pieces in the mobile phone can be recycled in accordance with the rules in force in Spain on recycling.

Always follow the existing rules on the subject.

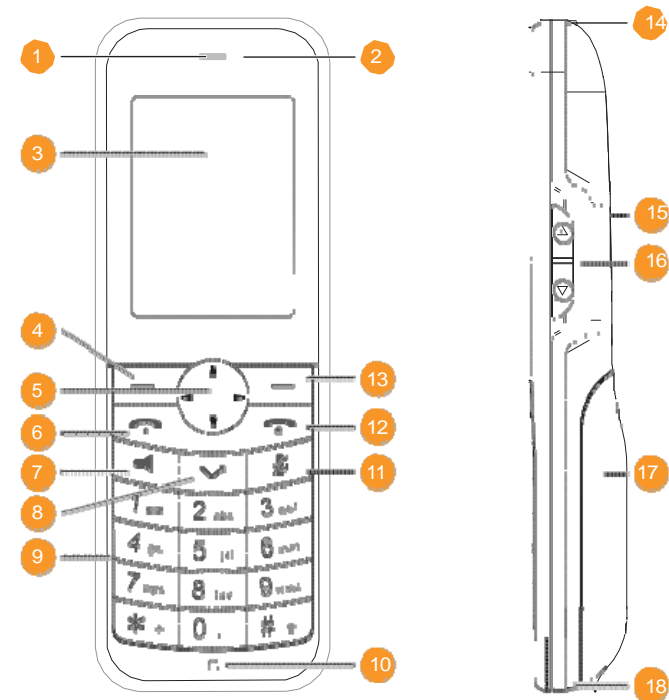
Violators are subject to sanctions and measures established by law.



The bin symbol the cross, located on the device means that when the equipment has reached the end of its useful life, must be brought to collection centers, and that treatment must be separated from waste urban.

To protect the environment, when you replace the batteries, remember to use public recycling bins for batteries

Hardware



note:

The pictures of your phone for reference only.
Product appearance may vary by phone model
acquired.

- 1 Headset
- 2 Light (LED)
- 3 Screen
- 4 Left soft key
- 5 Navigation Keys
- 6 Key Mark / Pickup
- 7 Speakerphone Key
- 8 Transfer key
- 9 Keypad
- 10 Microphone
- 11 Mute button
- 12 Key On / Off / End Call / Reject /
Return to initial screen
- 13 Right soft key
- 14 Headphone jack
- 15 Speaker
- 16 Keys control audio volume, timbre
- 17 Battery compartment and SIM card
- 18 Power Connector

Keys and features

Left soft key

Access Agenda in standby mode.
Select the option on the bottom left of the
screen.

Right soft key

Access the main menu in standby mode.
Select the option on the bottom right of the screen.

Navigation keys

In standby mode, press:

1. up / down to access the phonebook
2. left to write a new text message
3. right to access the profiles

You can modify these shortcuts in Menu /
Settings / Phone / Shortcuts.

Key call / redial

Make or answer a call.
In standby mode, view the history of calls made.

Speakerphone key

During a conversation, press to activate / deactivate hands free speaker.

Ignition key

Press and hold to turn on / off the phone.
End a call or reject an incoming call.
Back to standby.







Mute button

During a conversation, press to activate / deactivate the microphone.

Key transfer

With a hold and another call in progress, press to transfer the call.

Screen icons

icon	description	icon	description
	Signal		Connected headphones
	Level of battery		handsfree activated
	set alarm		new message

Installing the SIM card and battery

Insert the SIM card

1. Press the battery cover and slide it down
2. Remove the battery and insert the SIM card into the slot under the battery.
3. make sure that the gold contact on the SIM card is facing down and the beveled edge is aligned with the corresponding edge of the SIM card slot

■ PIN and PUK:

The personal identification number (PIN) protects your SIM card against unauthorized use. The PIN Unblocking Key (PUK number) can unlock a PIN locked.

The PIN and PUK are supplied with the SIM card. For more details, contact your network operator.

Put the battery

1. Insert the battery into the compartment matching phone contacts and battery
2. place the lid on the compartment and slide it up.

Phone charging

To charge the phone:

2. connect the adapter provided in the box on any socket in your home
3. place the handset on the base to charge the battery
4. a message will be displayed if the connection is correct

Important Notice on loading:

For the first installation, charge the battery between 12 and 16 hours.

Subsequently, if the phone is left on the base during the night will be enough to keep the battery charged.

To extend battery life, it is recommended not to leave the phone charging on the basis for long periods of time (vacations, etc.). Preferably the battery from a full discharge.

If the phone is not in use for a long time, remove the battery.

If the battery has not been used for a long time or if you are exhausted, it is likely that the phone screen does not work when you reload. Once the battery has been charging for a while, you can switch the phone to use it..

Danger of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Battery indicator light

When charging the battery the red light will be fixed and the bars of battery icon will move.


When the battery is fully charged, the red indicator light will turn off and the battery icon is displayed in full screen.

Low battery warning:

When the battery is nearly exhausted, the battery indicator will be empty, the phone will beep and display a message on screen. You must place the handset on the base or connect the power adapter to charge the battery.

If the phone is no battery power will go out, and can not make or receive calls.

Battery indicator

 fully loaded

 loaded 80%

 loaded 60%

 loaded 40%




 loaded 20%


 Battery empty

On and off

 






To turn on your phone:

1. hold down the power key  (12) until the display lights
2. enter each digit of the PIN number if so requested by the team. If you enter an incorrect digit, press the button  (13) to delete.
3. Press the button  (4) to accept.




To turn off the phone, hold the power key  (12) until the screen turns off

Use function menu

1. In standby mode, press  (13) to access the main menu.
2. use the navigation keys to scroll through the menu
3. press  (4) to open a menu of options and view the content
4. again use the navigation keys to scroll through this menu and
5. press  (4) to select the desired option
6. press  (13) to return to the previous menu or press  (12) to return to the home screen.

Basic functions

 


Make a call

- 1 when the phone in standby mode, dial the number you want to call using the alphanumeric keypad
- 2 if you have entered one digit incorrectly, press the  (13) to delete the last digit or press and hold to delete all digits
- 3 press the green start calling  (6) to dial the number. If the number is stored in the phonebook contact name appears on the screen
- 4 press the red end call  (12) to end the call



Important note:

If the phone keypad is locked, you must unlock it to make calls.

Make a call from the phonebook

1. When the phone is in standby, press the left soft key  (4) to access the calendar. The display will show the contact list in alphabetical order
2. use the navigation keys to scroll through the list to the desired contact
3. press the green start calling  (6) to dial the number.
4. press the red end call  .

Make a call from History

1. with the phone in standby, press  (6) to access the list of dialed or press the navigation keys up or down to access the list of missed calls
2. use the navigation keys to scroll through the list
3. select a file and press  (6) to dial the number

Make a call using speed dial

Press and hold the number key (2-9) set to fast memory. The contact name stored in the memory is displayed on the screen and the phone call that number.


note:

You need to configure the keys previously. See page 51 for more information.

Talk


During the conversation you can:

- Activate the loudspeaker:


1. press the speakerphone key  (7) during a conversation to activate handsfree
2. press the same key again to deactivate

- Mute the microphone:

You can mute the microphone during a conversation:

1. press the Mute  (11) during a conversation to mute the microphone
2. press again the same key to activate.

- Hold / Retrieve a call:

1. press the right button  (13) to hold / retrieve the call. A confirmation message is displayed when the call is retained appears / gets.
2. You can also do this by selecting the "hold" option in the options menu
3. When you have multiple simultaneous conversations you can switch from one to another, end one or all, etc., from the "Options" menu

- Setting up a conference:

This function allows you to talk to two people at the same time. A conference may be established when:


 


- With a call, receive a new call.
- With a call in progress, retains the current call, and looking for a contact in the phonebook to call.

In these cases, an active call and a held:

1. access the options by pressing "Options." and select "Merge calls"
2. the two calls will be active and you can talk to both parties.
3. access the menu again to separate calls and talks separately or end the conference

- Call Transfer:

This feature allows you to transfer a call to another phone number. To do this:



1. during a call, press the key  (13) to hold the call
2. then dial the number you want to transfer the call or look it up in the phonebook accessed by pressing the "Options"  (4) and selecting Menu /Phonebook
3. press the call key  (6) to mark
4. can transfer the call as you hear the dial tone or wait to respond
5. to complete the transfer, press the transfer  (8). The held call will be transferred to another phone number

Note:

The call transfer is a service provided by your operator. See him for more information.

Answer a call

When you receive a call the telephone rings and the display shows the number or contact name (if stored in the directory):



1. press the green call key  (6) to answer
2. press the red call end  (12) to reject the call or to hang up after the conversation

Text Input

The text entry mode is the font that is used for messages, enter contacts, etc. The options are: Sp (caps), sp (lowercase), SP (upper) and 123. Default is Sp (caps).


Change the text input mode


The indicator of the current input mode is displayed at the top right of the screen.

1. Press **#**  to see the available input modes.
2. use the navigation keys up / down to highlight the desired and press the key  to confirm

Character input

In either case, once press the key that contains the desired letters to enter the first letter on the key, twice for the second letter and so on.

Press once the key  (13) to delete the last character entered.

Hold down the button  (13) to delete all characters entered once.

Select "123" mode to enter only numeric values.

note:

 
If the letter you want is on the same key as the letter before, you can enter the last letter appears once again after the cursor or pressing the right key to move the cursor to the next space.

note:

In insert mode, "SP", "Sp" or "sp", press the "0" key once to insert a space and twice to enter "0".


In insert mode, "SP", "Sp" or "sp", press the "1" key repeatedly to select and introduce the most commonly used punctuation.


Introducing symbols

1. to display the list of symbols, press the key in any input mode * + in any input mode
2. press the arrow keys to select the symbol
3. press  (4) to enter the selected symbol


SMS text messages

New message received

When you receive a new text message, the phone will beep and show "New Message" screen . It also displays the icon at the top of the screen and the LED flash.

1. from the main menu, go to "Messages" and then to "Inbox". The list of received messages sorted from newest to oldest
2. new messages are marked with the icon of an envelope 
3. press "Select" to open and read the message

Note:

The LED will flash and the new icon message  remain on the screen if there are unread messages.


 
 


Read messages are marked with the icon of a SIM card or phone memory depending on where you have been saved. To change the storage memory can do so from the Settings submenu SMS / Save.

■ Message Options:

When you open a message, you can:

- delete - delete the current message
- answer - respond to the message with another message
- forward - forward the message to another contact
call - call the person who will sent the message
- move - save the message in another memory (SIM / Phone)
- copy - copy the message to another memory (SIM / Phone)
- add sender - add the sender's number to a new contact or an existing contact in the phonebook
- details - see the details of message delivery


Write and send a message

1. access the "Posts" menu in the main menu
2. Select "Write SMS" option
3. enter the recipient's number or search the directory by pressing the key . You can manually add multiple recipients, separated by a semicolon (;) and you can also do it from the agenda:
 - a. Highlight the desired contact, press  and Select
 - b. When you have marked all recipients, press , and select OK. All recipients are shown at the top of the message
4. press the down navigation key  to move to the text input
5. enter the text as explained in paragraph 12
Entering Text
6. Press the button  (4) to view the available options: Send, Insert template, Add contact, Save as Draft, output:

- Send: select to send the message
- Insert template: Use this option to enter a predefined text
- Add contact information: Select this option to add the contact information of his agenda in the message text
- Save As Draft: If you select this option, the message is saved in the "Drafts", "Messages" menu folder
- Output: Select to exit the menu. Confirmation is requested to save the message

 
Read saved messages

From the menu "Messages" can access the list of received messages, sent and drafts.

1. select the "Messages" in the main menu.
2. scroll to the desired option and press  (4) to select
3. will show the list of messages received / sent / drafts sorted from newest to oldest

Agenda

See the schedule

1. with the phone in standby, press the button  (4) to access the agenda
2. use the navigation keys up / Down to scroll through the list and see all contacts


Quick Search:

With the contact list screen, enter the first few letters of the contact you are looking for. Contacts that contain those letters are displayed..

For example: to find the contact Juan wish-list

1. press once → the five key contacts that contain the letter J is shown
2. press the 8 key twice → contacts that contain the letters shown JU
3. use the navigation keys up / down to scroll to the desired contact if they appear more than one in the list

Agenda options

 
Without there being a highlighted contact, press  (4) for options available agenda.

- a. New - Add a new contact to the list
- b. delete multiple - delete multiple contacts
- c. copy - copy contacts from the SIM card to the phone or vice versa
- d. other:
 - Speed Dial - make the contacts for speed dialing
 - Own Number - Enter your phone number
 - Service number - access the service numbers of your service
 - Memory status - see the status of the SIM and phone memory


Contact options

In addition to the above, if there is a contact highlighted, the following options will be displayed

- a. edit - edit contact information
 - b. New - Add a new contact
 - c. write SMS - write a message text to this contact
 - d. call - call the contact
1. in the main menu, select "Calendar" and then select "New"
 2. select the "Phone" option if you want the contact remains stored in the phone memory or select "SIM" to save the contact to your SIM card
 3. Four options are displayed:
 - a. name
 - b. number
 - c. group
 - d. tone


 

4. highlight the first option and press (4) to edit the name. Enter the name using the keypad and press  to confirm


5. Repeat these steps to enter the number

6. highlight the third option group, select the group that you want to include the new contact. You can leave it blank if you wish. Press  (4) to accept
7. repeat the above steps to select the default ringtone for this contact

Speed-dial

You can assign a speed dial number to the keys 2 to 9 For this reason, from this menu:

1. highlight the key you want to change and press  (4)
2. Select Edit and enter the phone number manually or press  (4) to open the calendar and select a contact
3. once set the number, press  (4) to accept

4. if the key is already set up with a number, press  (4) to see the detail, edit, select a contact from the phonebook, etc

To call using speed dial, from the phone's home screen, press and hold the set button. The phone dials the number automatically.

note:

Key 1 is configured by default to access voicemail. Ask your operator about the service

Adjustments

Phone

From the main menu, select "Settings" and then "Phone" to modify:

- date and time - set the date and time as well as the format you want to display
- Language - Spanish default setting, you can also select English as the language
- shortcuts - select the function displayed by pressing the navigation keys and function keys left and right
- auto on / off - set a time for the phone turn on or off automatically
- battery level - check the battery level of the terminal
- Reset to Defaults

If selected, the terminal will change current settings to the default. They therefore change parameters as wallpaper, shortcuts, ringtones, volume level, etc.

The information stored in the phone memory will be maintained.

This option is password protected (1234).

Screen

From this menu you have access to modify:


 
 
- Wallpaper - select a picture as wallpaper
- Home screen - select the fields you want on the home screen
- backlight level - change the backlight level with the cursor left and right navigation
- backlight duration - select the duration of light on the screen. If you select "Always On", the screen never turn off. Note that this will consume the battery faster

- Keyboard Illumination - Choose duration of light in keyboard

- Keypad Lock

This option is disabled by default.

From this menu you can select the idle time after which the keypad locks to prevent unwanted keystrokes.

- when the phone is locked "Unlock" is displayed on the left soft key  (4)
- to unlock the phone, press the button  (4) (Unlock) followed by the  (OK) key.

Safety

 
Since this option will access the security settings of the phone and the SIM card.

- PIN:


Access this option to enable / disable / change the PIN on your SIM card. You need to know the current PIN before you can change it.



■ Phone Lock

If you wish you can lock your phone with a code to prevent others from accessing your data. This code is required to turn on the phone.

1. Press the button  (4) to activate the
2. the key will be requested (default 1234)
3. follow the same steps to disable the lock

■ Lock with key Hang

 
This option allows you to lock the phone by pressing the power key / End  (12) when the phone is in the home screen.

To unlock, press the button  (4) followed by  (OK).


■ blacklist

Add to blacklist all those contacts you do not want to receive calls or messages.

Within the Blacklist menu, go to the first option

to check the contacts added to this list. Press the button  (4) for:

- new - add a new number to blacklist
- edit - edit a contact from the list
- remove - remove contact seleccionado
- Contact import - import a contact from your phonebook
- erase all - erase all contacts from the list

Within the Blacklist menu, select the second option to block calls and / or messages from contacts blacklist. Highlight the desired option and press  (4) to confirm.

Call

Since this option will have access to features such as forwarding, blocking, call restriction, etc.

Contact your mobile operator about the availability of these services.


Within this menu will show the following options:

 
- a. call forwarding - Incoming calls can be diverted to another phone number. Check with your operator for more information
- b. Call Waiting → with this feature enabled, the phone will alert you of a new incoming call while a call is in progress
- c. Restricted calls - since this option to block incoming and / or outgoing calls. Activation and deactivation of this option is locked with code (default 0000). Check with your operator for more information
- d. other - access to extra features such as call duration notification, automatic redial and Reply with SMS

Profiles

The terminal has the following audio profiles: General, Silent, Interior and Exterior.

You can modify each of these profiles according to your preferences. for this:


- Select one of the profiles, press the button  (4) and then select Settings. A new menu from where you can be displayed:
 - rename - change the current profile name
 - tone settings - select the ring tone and message
 - adjust the volume - Select the volume of the ringtone, message, alarms, etc.
 - tone type - select the type of tone (ringing or silence) for calls, messages, etc
 - Other Alert Tones - modify other tones

You can also create new profiles. To do this press the button  (4) and click Add. Follow the steps above to complete the profile definition.

Calendar


1. In the main menu, select the "Calendar" option. The display shows a view of the current month with the current day highlighted in another color
2. use the navigation keys to scroll through the calendar.

3. Press the button  (4) to access the options:

- a. new task - create a new task / reminder. Complete the information requested on the screen and press  (4) to save the changes. The selected day will show a colored corner and the information of the day's work will be displayed under the calendar
- b. see tasks - displays the day's work highlighted
- c. all tasks - displays the list of all saved jobs
- d. today delete tasks - delete tasks for the selected day
- e. delete all tasks - delete all saved jobs
- f. go to date - enter a date in the calendar to view
- g. Weekly - change the view to weekly
- h. daily - view the selected day divided by hours

Calculator




Access this option to perform basic arithmetic operations.


Use the navigation keys to select the operations add, subtract, multiply, divide and press the call button  to get the result.


Since options have access to save the values obtained in memories and so further operation with the stored values.



Alarm

From this option, you can set up 3 different alarms and select the ring for them.

1. use the navigation keys to highlight an alarm
2. use the arrow left and right navigation to Enable / Disable the selected alarm
3. Press the button  (4) to edit the alarm. A list of fields on the screen will be shown. Use the navigation keys up / down to move from one field to another:
 - a. Message - Enter a name for the alarm
 - b. Time - Enter the time for the alarm
 - c. Timbre - defaults to the "Ring 1". Press the button  (4) to open the list of rings. Use the navigation keys up / down to hear all the bells and select the desired
 - d. Repetition - defaults to "once". Press the button  (4) to show the repeat options: Once, Daily, labor. Press (4) to confirm

- e. Message to the highlighted option, press the button  (4) to save the alarm. Confirmation is requested. Press the key to confirm

- 4. when the alarm is set the icon is displayed in the icon bar  at the top of the screen

When the time of the alarm will sound, and can be turned off by pressing the button  (4) or delay it by pressing  (13). In the latter case the alarm will sound after 5 minutes.

FM radio

From this option, you can save and listen to your favorite radio channel.

- 1. In the main menu, select the "FM radio" option.
- 2. To turn on the radio, you should plug in the headphone
- 3. Turn off FM Radio: In the FM radio home menu select Exit FM radio.

Set Frequency:

Enter the bandwidth frequency of your favorite FM radio station.

- 1. In the FM radio main menu, press Menu>Manual search>OK.

- 2. Input the band width frequency between 88 and 108MHz.

- 3. To save the channel in the Channel list, press Options>

Save as preset.

Channels:

Press Menu>FM Radio>Select>Options>Channel list

>OK>Options>Channel to play /edit / delete the selected channel.

Auto Search:

- 1. In the FM radio home menu, press Select>Options>Auto search and save.
- 2. In the prompt, press "OK" to commence.
- 3. The phone will scan for clear FM radio channels and stores them in the Channel list memory.

Press Up or Down key to change channel.

Do any doubt

- The phone can not turn on

Make sure the battery is inserted properly and charged.

Hold down the power key for a few seconds until the screen lights


- The display shows "emergency calls only"

The SIM card is not inserted in the phone or has been placed incorrectly.

Turn off the phone, remove the back cover of the phone and then remove the battery....

Correctly insert the SIM card. The SIM card is not correct. see your operator.

- You can not make calls

Make sure you are in a coverage area. If the coverage indicator has no bar  means no cover. You have to move to another place with

better signal

Make sure your SIM card has enough to make calls and your phone number will not be blocked or unsubscribed balance. Check with your mobile operator

We hereby declare that (all essential radio test suites have been carried out and that) the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The Conformity assessment procedure referred to in Article 10 and detailed in Annex III or IV of Directive 1995/5/EC has been followed with the involvement of the following Notified Body(ies):

Identification mark: **CE ******

FCC Statement:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless Tablet PC is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless Tablet PCs employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the Tablet PC transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the Tablet PC while operating can be well below the maximum value. This is because the Tablet PC is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a Tablet PC model is available for sale to the public, it must be tested and certified to the FCC

that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model Tablet PC when tested for use at the ear is **0.995W/Kg** and when worn on the body, as described in this user guide, is **0.205W/Kg**(Body-worn measurements differ among Tablet PC models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 1.006W/Kg. While there may be differences between the SAR levels of various Tablet PC and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model Tablet PC with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model Tablet PC is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: 2ACSKSC-397-GH3G Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for Tablet PC used by the public is 1.6watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 15mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.