

---

## Table of Contents

1 Outlook Description .....	1
2 Power Button Usage.....	2
3 Touch-Screen Navigation .....	2
4 Ethernet / USB Adapter.....	3
5 Using Micro SD Card.....	3
6 Getting Started .....	4
7 Home Screen .....	5
8 Screen Lock .....	6
9 Home Screen Function Menu.....	6
10 Application Management .....	8
1. Pre-installed Apps: .....	8
2. Install Apps:.....	8
3. Uninstall Apps: .....	9
11 News & Weather .....	9
12 Clock .....	9
Alarm.....	9
13 Browser .....	11
14 Camera.....	11
Menu Function .....	11
Take Pictures .....	11
Take Videos.....	12
15 Calendar.....	12
Add Event .....	12
16 Calculator .....	13

17 Email .....	13
Add Email accounts .....	13
Email Inbox .....	14
Edit Email Account .....	15
Delete Email Accounts .....	15
18 My Pad .....	16
Copy Media between Computer and Tablet .....	16
Delete files .....	17
19 Music Player .....	17
Play Music.....	17
20 Video Player .....	18
Play Video.....	18
21 QuickPic .....	18
22 Contacts .....	19
Add New Contacts .....	19
Add Contact to Favorites.....	19
Edit Contacts.....	19
Delete Contacts.....	19
23 APK Manager .....	20
24 YouTube.....	20
25 Wi-Fi Settings .....	20
26 Ethernet.....	21
27 3G Network Settings.....	21
28 Settings .....	21
Frequently Asked Questions .....	25
Battery Management .....	26

Important Safety Precautions .....	27
FCC STATEMENT.....	30

System: Android2.3  
Processor: Infotmic  
Edition: V01

# 1 Outlook Description

Front:



Right side:



Left side:



Top:



---

## 2 Power Button Usage

**Turn On:** Press the power button and hold for 2 seconds.

**Turn Off:** Press the power button and hold for 2 seconds, →tap **Power off**.

**Sleep Mode On/Off:** Press & release the power button quickly to turn sleep mode on and off.

**Force Off:** If the device does not respond, press and hold the power button for 8 seconds. (**Note: Force Off** is not recommended. Use it only if necessary. You should follow the steps to perform the shutdown.)

**Reset Button:** Press the reset button to reset the device. Reset will erase all data on the device, please use this option with caution. (**Note:** Reset button cannot be used as restart, after reset you need to press the power button to re-boot the device.)

---

## 3 Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation on all applications.

☆ *The smaller the point that comes in contact with the screen, the more precise object selection can be. If you do not have long enough fingers nails to be used for precise tapping, we recommend using a stylus (included) or non-sharp pointed instrument to increase the precision of navigation.*



Throughout the User Guide, you are instructed to use the following tap or touch navigation methods:

**Tap:** Quick tap & release on an item on the screen.

**Finger slide:** Touch & slide your finger across the screen and then release.


**Touch & hold:** Touch and hold in place approx 2 seconds, and then release to display an options window.

☆ *To avoid scratches on the screen, do not place objects on the touch screen surface.*

---

#### 4 Ethernet / USB Adapter

You must use the Ethernet / USB adapter if you want to use a Flash drive for accessing/storing your photos, music, video or other files.

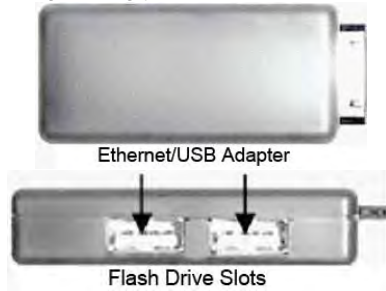


##### Flash Drive

Insert your Flash Drive to the Ethernet / USB Adapter, → insert the Ethernet / USB Adapter into the Tablet.

☆ *Don't insert and remove the Flash Drive repeatedly in a short time, as this may cause damage to the U-disk.*

**The Ethernet / USB Adapter can also be used for Ethernet network connections.**

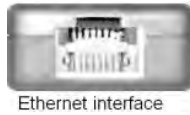


---

#### 5 Using Micro SD Card

☆ *The device supports a maximum 32GB Micro SD card.*

Insert your card into the Micro SD Card slot until it clicks in.

##### Remove Micro SD Card

Use one of the following methods for removing the Micro SD card. Close all applications or documents which have been opened on the card. Tap  → **Settings** → **Storage** → **external sdcard** → **Unmount external SD card**. Press the card lightly; it is

partially ejected allowing you to pull the card out.

- ☆ *Don't insert and remove the Micro SD Card repeatedly in a short time, as this may cause damage to the card.*
  - ☆ *We recommend using major brands of memory cards to avoid incompatibility.*
- 

## 6 Getting Started

### Charge the device

- ☆ *You cannot charge the battery using USB cable.*
- ☆ *You can use the device while the battery is charging, although the charging time is longer when operating and charging at the same time.*

ON MODE: The battery indicator light will turn green after fully charged when unit is ON mode;

OFF MODE: The battery indicator light will turn off after fully charged when unit is OFF mode.

- ☆ *In order to optimize your tablet's battery life, it is highly recommended to charge the battery fully (charge time being approximately 4hrs) before its first use.*
- ☆ *Drain the battery completely before its subsequent charge.*
- ☆ *Over charging the battery reduces your battery life.*

### Turn the device on


Press and hold the power button for 2 seconds until an image appears on the screen.

Release the power button and let the software load on the tablet.

Please allow at least 45 seconds for the tablet to fully start-up.


### Wi-Fi Network Setup

Since many features of your Tablet require internet connection, we recommend you set up your Wi-Fi network immediately.


1. Tap , → **Settings**, → **Wireless & networks**.

2. Select **Wi-Fi** to turn on.

The device automatically scans and lists all local Wi-Fi Networks

found. A  indicates secure network that require a password to connect.

Tap the desired network you want to connect to, → enter the **Network Password** if applicable, → tap **Connect**.

3. Tap  to return to the Home screen.

☆ *If your Wi-Fi network is set as hidden, it won't be found by auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.*

---

## 7 Home Screen



① Return to Home Screen from other apps

② Battery charge status

③ Current Time

④ Picture capture icon


⑤ Volume reduction icon

⑥ Volume increase icon

⑦ Function Menu icon

⑧ Back icon




- ☆ To move an icon to the **Home** screen, touch & hold on the icon, and then release it when it appears on the **Home** screen.
- ☆ Touch, hold and then slide icons to reposition them, and then release the icon.
- ☆ Touch, hold and slide icons onto  to delete them.


## 8 Screen Lock


Your Tablet can be set up for automatic screen lock. You can also lock your screen by pressing and quickly releasing the power button to manually lock screen.





## 9 Home Screen Function Menu

On the **Home** screen, you can tap  to display the **Function Menu**.



 <p><b>Add</b></p>	<p>Home screen displays only 16 icons at a time. In order to add more item, finger slide the screen horizontally to expose available space, and then tap the <b>Add</b> button again.</p>
---	---

	If the screen is full, the Add icon option won't respond.	
	<b>Shortcuts</b>	Add quick launch shortcuts on the <b>Home</b> to applications, bookmarks or settings. ★ <i>If you select items that are shortcuts already on the Home screen, they will be duplicated, resulting in multiple icons for the same item.</i>
	<b>Widgets</b>	<b>Analog clock:</b> Add a round analog clock. <b>Calendar:</b> Add a calendar widget to display current date & events. <b>Music Player:</b> Add a music widget to quickly begin playing music without launching the music application.
	<b>Folders</b>	<b>New Folder:</b> Add a folder into which you can add applications as desired. To move applications on the Home screen into the folder, touch, hold & drag the icons directly on top of the folder icon. To add applications from the <b>All Application</b> screen, first tap on the folder to open it, open the <b>All Application</b> screen, and then touch & hold on an application icon. It is copied into the folder.
 <b>Wallpaper</b>		Select wallpaper from <b>Picture</b> and <b>Wallpapers</b> .

 <b>Search</b>		Perform a quick Google search. Tap in the entry field, → enter the desired search text, → tap  .
 <b>Notifications</b>		List any pending notifications (i.e., new email, calendar events, etc).
 <b>Settings</b>		See “Settings” on page 28.

---

## 10 Application Management

Tablet gives you access to exciting world of Android apps. While, some of these apps are pre-installed on your tablet, you can download host of additional apps through built in libraries, SlideME Market or other online sources.

### 1. Pre-installed Apps:

Your tablet has pre-installed apps like Facebook, You Tube, Twitter etc. Just Tap the app you like to access, and follow on-screen directions (as applicable).

### 2. Install Apps:

- Access applicable apps library.
- You can find the apps using Categories or by manually searching for them.
- Once you locate the desired app, tap on the app.
- Tap “Download” (allow a few seconds for app to download)

- Tap “Install” (allow a few seconds for app to get installed)
- App is now installed on your tablet.

### 3. Uninstall Apps:

- Tap “Settings” – “Applications” – “Manage Applications”
- Tap on the app you wish to uninstall.
- Tap “Uninstall”
- Tap “Ok” (allow few seconds for app to get uninstalled)
- You have successfully uninstalled the app.



### 11 News & Weather



Tap the **News & Weather** application icon.

#### General setting

You can make Weather settings, News settings and Refresh settings.




### 12 CLOCK





Tap the **Clock** application icon. You can see the time and date.

#### Alarm

You can use your Tablet as an alarm clock by setting multiple alarms.

☆ This clock icon  displayed at the top of screens indicates that one or more alarms have been set and are active.

#### Add Alarm

1. Tap the  **Clock** application icon.
  2. Tap  → **Add alarm**.
  3. Set up your alarm as desired.
- ☆ *If you don't select a repeat, the alarm is automatically deleted after it is activated.*
4. Tap **Turn alarm on**.
  5. Tap **Done**.

#### **Turning off an Alarm Alert**



When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap Snooze if you want to be reminded again in 10 minutes.


Tap Dismiss to cancel the alert.

#### **Turn Alarm on**



If you wish to temporarily turn on or off the repeat alarms, rather than deleting them, follow the below mentioned steps:

1. In the Alarm screen, tap  on the alarm(s) you want to turn off.
2. Tap  to turn on again.

#### **Edit Alarm**

1. Tap the  **Clock** application icon.
2. Tap on the alarm you want to edit, → make desired edits.


#### **Delete Alarm**

1. Tap the  **Clock** application icon.
2. Tap on the alarm you want to delete.
3. Tap  → **Delete alarm**.



### 13 BROWSER

Users can connect to the Internet through a browser.

Tap the browser icon on the Home , and then you can open the Web browser. Browser will take you to the Home page (www.Google.com). Type in the desired website in the address bar to view the respective website.




### 14 CAMERA



Tap the  Camera icon.

#### Menu Function




1. Tap **Menu** button to access the menu list, including: Switch to video/camera or My Photo/My Video.
2. In **Camera**, tap **My Photo** to scan pictures.
3. In Camcorder, tap **My Video** to access the list of the video.

#### Take Pictures

1. In **Camera** → tap  to take pictures.
2. The picture will be saved.

3. Tap the picture thumbnail  to enter **My Photo** to scan the picture.
4. Tap **Back** to the go back to **Camera**.
5. Tap  to exit the **Camera** and back to the **Home**.

#### Take Videos

1. Tap  switch to video, and you can record videos.
2. Tap  to begin and Tap  to stop.




#### 15 CALENDAR

Tap the  **Calendar** application icon.


While accessing the **Calendar** for the first time, you need to add an Exchange account. Enter account email address and password. Tap **Next** and follow the prompts to complete the account configuration. Then you can use the **Calendar**.

#### Add Event

1. On the **Calendar** screen, tap on the date to which you want to add an event.
  2. Tap on the event time, → tap in each entry field to enter the desired event information.
  3. Tap **Done**.
  4. Tap  to select desired **Calendar** screen.
- ☆ *Dates with green bars indicate scheduled events.*



## 16 CALCULATOR

1. Tap the  Calculator application icon.
2. Tap the numbers and symbols (+, x, - etc) to perform calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.




## 17 EMAIL

☆ *POP3 and SMTP accounts are supported.*

### Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.

1. Tap the  **Email** application icon.
2. On the **Your Accounts** screen, tap **Next**.
3. Tap on the **Email** address entry field, → enter your email address.
4. Tap on the **Password** entry field, → enter your email password.
5. Tap **Done**.
6. **Manual Setup** (*optional*): The server settings are automatically populated based on your email account provider (*i.e., gmail.com, etc*). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
7. Tap **Next**.
8. Optional: Enter a name for the account.



9. Enter name for outgoing message, → tap **Done**.
- ☆ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

### Email Inbox





1. Tap the **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account, → tap **Inbox**.

### Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a Micro SD card / Flash Drive.
3. To replay, tap **Reply** or **Reply all**.
  - a. Tap in the Compose Mail entry field to compose an email.
  - b. Tap Send to send.
  - c. Save as draft to save without sending or Discard to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.




### Compose New Email Message

1. On the Inbox screen, tap  → **Compose**.
2. Tap in the **To** entry field and then enter the recipient's email address.
3. Optionally, if you want to add Cc or Bcc recipients, tap  → Add Cc/Bcc, and then enter the recipient's email address.
4. Tap in the **Subject** entry field to enter your desired subject title.
5. Tap in the **Compose Mail** area to enter your personal

message.



6. If desired, tap  → **Add Attachment** to attach a file.
7. When ready to send the email, tap  → **Send**.

### Edit Email Account

1. Tap the  Email application icon.
2. On the Inbox screen, tap  → Account settings.
3. Set your desired preferences to customize your email account.
4. Tap  to return to the Inbox screen.



### Delete Email Accounts

☆ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed will automatically set as the default.*

1. Tap the  **Email** application icon.
2. On the **Inbox** screen, tap  → **Accounts**.
3. Touch & hold on the account you want to delete.
4. In the pop-up **Account options** window, tap **Remove account**.
5. Tap **OK** to confirm the deletion.

### Set Default Email Account


You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  **Email** application icon.
  2. On the Inbox screen, tap  → **Account Settings**.
  3. Tap **Default Account** to select it.
- If you delete the account that was designated as the default

account, the next email listed is automatically designated as default.



## 18 My Pad

Tap the  **My Pad** application icon to view the files on all storage devices (*Internal memory, Micro SD card, Flash Drive*).

Use the icons across the top of the screen as follows:




Local disk (Internal Storage)



Micro SD card



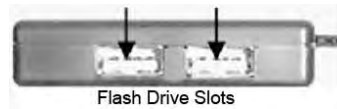


Flash drive (using the included Ethernet / USB Adapter)



### Copy Media between Computer and Tablet

You can use the My Pad to copy files from external storage devices and your Tablet. You must first copy the desired files onto a Micro SD card or Flash Drive.

- ☆ *The internal device storage is titled "LocalDisk", a memory card "sdcard", and a Flash Drive is titled "udisk".*
- ☆ *The instructions below are for copying from a Micro SD card or Flash Drive into the Tablet. You can use the same method to copy from the Tablet to a Micro SD card or Flash Drive, and then connect the storage device to your Tablet to transfer the files into the desired folder of your Tablet.*

1. Tap the  or  to display the contents of your storage device.
2. Tap and hold in the folder/file you want to copy, → tap **Copy**.
3. Tap on the , → tap on the folder into which you want to copy the file, → tap **Paste**.

☆ *You can reverse the process to copy files from internal memory and paste to external devices like (SD Card / Flash Drive).*

### Delete files





Tap and hold on the folder/file you want to delete, → tap **Delete** → **OK** to confirm the deletion.



## 19 MUSIC PLAYER

☆ *Audio file formats supported: MP2, MP3, APE, FLAC, WAV, AAC, WMA.*

### Play Music

1. Tap the  **Music Player** application icon.
2. Select an audio file from Music/Favorite/My List to play it.
3. To stop the music, tap the **Pause**  icon.
4. To leave the music playing and return to previous screens, tap  or tap  to return to the **Home** screen.





## 20 VIDEO PLAYER

☆ Video file formats support multiple 1080P formats as: AVI, 3GP, MP4, RM/RMVB, and FLV.

### Play Video



1. Tap the  **Video Player** application icon.
2. Select a video file from Movies/Favorites/History to play it.
3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
4. Tap **Back button** or  to return to the **My Video** screen.



## 21 QuickPic

☆ You can view all **Photos** and **Videos** through the **QuickPic**. Media files are sorted into groups by local disk, SD Card and camera.






## 22 CONTACTS



You can create an address book of your personal contacts, including personal notes.

### Add New Contacts




1. Tap the  **Contacts** application icon.
2. Tap  → **New Contact**.
3. Tap in the name fields to enter the contact's first & last name.
4. Tap  on the right of options to access additional choices.
5. Tap on the option name to access choices.
6. Tap in the option entry fields to enter the contact's information.
7. Tap **Done**.

### Add Contact to Favorites

1. In the **Contacts** screen, tap on the desired contact name.
2. Tap  in the upper right corner.
3. Tap  to return to the **Contacts** screen.
4. Tap **Favorites** to view list of favorite contacts.

### Edit Contacts

1. In the **Contacts** screen, tap on the desired contact name you want to edit.
2. Tap  → **Edit Contact**.
3. Make desired changes, → tap **Done**.

### Delete Contacts

1. In the **Contacts** screen, touch & hold on the contact, → tap **Delete contact** or in the **Contacts** screen, tap on the contact you want to delete, tap  → **Delete Contact**.

2. Tap **OK** to confirm the deletion.




### 23 APK MANAGER

It is a free apk installer and uninstaller. With this lightweight tool you can manage your apps easily and quickly.



### 24 YouTube

1. Tap the  **YouTube** application icon to view *YuTube.com* videos.
2. Tap on a video to launch it.
3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
4. Tap **Back button** to return to the **YouTube** screen.



### 25 Wi-Fi Settings

Tap  **Wi-Fi Settings** application icon.

1. Select "Wi-Fi" to turn on.
2. All the networks in range will be listed, tap to select the network you would like to connect to.
3. If the network was successfully connected to, before, the network information will be saved in the pop-up window. Select "Connect" to connect to the network. Choose "forget" to remove network information;
4. If the Network is not encrypted (password protected), in the

- pop-up window, select "Connect" to start connection;
5. If the Network is encrypted (password protected), enter the password in the pop-up window, and tap "Connect" to start connection;
  6. When internet connections are successful, the wireless connection icon in the status bar appears.

---

## 26 Ethernet

Connect the Ethernet / USB Adapter to its port (slot) of the device, and then plug the network cable (LAN) into the Ethernet port of the Ethernet / USB Adapter. And, the upper right corner of the screen displays "ETH".

Tap Settings → Ethernet configuration to turn on Ethernet.

The device can automatically access network IP address connection. And you can choose manual setup IP address to get a connection.

---

## 27 3G Network settings

Connecting to the internet by external 3G USB Dongle:

The tablet device supports EVDO and WCDMA 3G USB Dongle.

The following models can work with our device: EVDO: Vtion E1916, ZTE: AC2736 and Huawei E1750.






---

## 28 SETTINGS

<b>Wireless &amp; networks</b>	<b>Wi-Fi</b>	Turn on Wi-Fi.
	<b>Wi-Fi Settings</b>	Set up & manage wireless access points.
	<b>VPN settings</b>	Set up & manage Virtual Private Networks (VPNs)
	<b>Mobile networks</b>	Set options for roaming, networks, APNs.



<b>Ethernet</b>		Configure Ethernet.
<b>Sound</b>	<b>Silent mode</b>	Silence all sounds except media & alarms.
	<b>volume</b>	To adjust the Media volume, Alarm volume and Notification volume. Tap & slide  and then tap <b>OK</b> .
	<b>Notification ringtone</b>	Select desired ringtone sound.
	<b>Audible selection</b>	Select to enable a sound when making a screen selection.
	<b>Screen lock sounds</b>	Play sounds when locking and unlocking the screen.
<b>Display</b>	<b>Brightness</b>	Tap & slide  to adjust the screen brightness as desired, and then tap <b>OK</b> .
	<b>Auto-rotate screen</b>	When selected, the orientation of the screen switches between Portrait and Landscape automatically when you rotate the device.
	<b>Screen timeout</b>	Adjust the delay before the screen automatically turns off.
	<b>Suspend timeout</b>	Adjust the delay before the device automatically suspend after the screen turn off.
<b>Location &amp; security</b>	<b>Use wireless networks</b>	Location determined by Wi-Fi and/or mobile networks
	<b>Set up screen lock</b>	Lock screen with a pattern, PIN, or password.
	<b>Visible passwords</b>	Show password as you type.

	<b>Select device administrators</b>	Add or remove device administrators.
	<b>Use secure credential</b>	Allow applications to access secure certificates and other credentials.
	<b>Install from SD card</b>	Install encrypted certificates from SD card.
	<b>Set password</b>	Set or change the credential storage password.
	<b>Clear storage</b>	Clear credential storage of all contents and reset its password.
<b>Applications</b>	<b>Unknown sources</b>	Allow installation of non-Market applications.
	<b>Manage applications</b>	Manage and remove installed applications.
	<b>Running services</b>	View and control currently running services.
	<b>Storage use</b>	View storage used by applications
	<b>Battery use</b>	What has been using the battery
	<b>Development</b>	Set options for application development.
<b>Accounts &amp; sync</b>		Add accounts and edit, and back up contacts when you're on the move

<b>Privacy</b>	<b>Factory data reset</b>	<p>Tap to reset the device to its initial factory state, erasing all data and downloaded applications. Tap <b>Reset Device</b> to proceed with reset, or tap to cancel and return to previous screen.</p> <p><b>WARNING!</b> The following will be erased during the factory reset:</p> <ul style="list-style-type: none"> <li>~ Google account</li> <li>~ System and application data and settings</li> <li>~ Downloaded applications</li> </ul> <p>The factory reset will NOT erase:</p> <ul style="list-style-type: none"> <li>~ Current system software and bundled applications</li> <li>~ Micro SD card files, such as music or photos</li> </ul>
<b>Storage</b>	<b>External sdcard</b>	External sdcard space
	<b>Internal storage</b>	Available space
	<b>User space</b>	Available space
<b>Language &amp; keyboard</b>	<b>Select language</b>	Select the language and region according to your location.
	<b>Android keyboard</b>	Onscreen keyboard settings.
<b>Voice input &amp; output settings</b>	<b>Voice output</b>	Text-to-speech settings
<b>Accessibility</b>	<b>Accessibility settings</b>	Accessibility related applications installed
<b>Date &amp;</b>	<b>Set date</b>	Set the date.

<b>time</b>	<b>Select time zone</b>	Select the time zone.
	<b>Set time</b>	Set the time.
	<b>Use 24-hour format</b>	You can choose to use 24-hour format or 12-hour format.
	<b>Select date format</b>	You can select the date format.
<b>Touchpanel calibration</b>		Calibrate the touch screen.
<b>About device</b>		View Status (Battery, Wi-Fi, etc), Battery use, Legal information, Model number, Android version, Kernel version and Build number.

---

### Frequently Asked Questions

**Q: What Android OS version is on my Device?**

A: Android 2.3

**Q: Do I have to charge the battery before use?**

A: You should charge the battery, but you can use the device while it's charging. Use the included power adapter to charge the battery; this device does not charge via the USB cable. In order to optimize your tablet's battery life, it is highly recommended to charge the battery fully before its first use. Drain the battery completely before its subsequent charge.

**Q: Can I use any of my personal email addresses to send/receive email?**

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on your tablet. Check with your

email provider to see if your account is supported.

**Q: Which media cards are compatible with my Device?**

A: Micro SD cards.

**Q: What type of music files can I play on my device?**

A: MP2, MP3, WAV, AAC, WMA

**Q: How do I add music files to my device?**

A: Copy the music files from your computer onto a SD card or Flash Drive, and then use the My Pad application to copy the files onto the device. Or, you can download files from the web.

**Q: What type of photo files can I view on my device?**

A: JPG, JPEG, BMP and PNG.

**Q: How do I add photo files to my device?**

A: You can tap pictures through your tablet. These files would get saved on the internal memory of your tablet. Or copy the photo files from your computer onto a SD card or Flash Drive, and then use the My Pad application to copy the files onto the device. Or, you can download files from the web.

**Q: What type of video files can I play on my device?**

A: Standard 1080P video: AVI, 3GP, MP4, MPG, RM, RMVB, FLV.

**Q: How do I add video files to my device?**

A: You can record videos through your tablet. These files would get saved on the internal memory of your tablet. Or, copy the video files from your computer onto a SD card or Flash Drive, and then use the File Browser application to copy the files into the device. Or, you can download files from the web.

**Q: Do I need a Wi-Fi adapter to connect to the Internet?**

A: No. The Wi-Fi adapter is built-in to the device.

---

## **Battery Management**

The battery is not fully charged out of the box, so it is recommended that you charge the battery (fully) for 4 hours before you start to use the device.


The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Never overcharge your battery.
- Always keep the device and the battery away from heat.

### **Charge battery**

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (approx. 4hour).

☆ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as: .

A fully discharged battery takes approximately 4 -5 hours to fully charge. You can use the tablet while its charging.

---

### **Important Safety Precautions**

Always follow these basic safety precautions when using your tablet.

This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against

them. Pay particular attention to the point where the cord attaches to the device.

- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

### **Maintenance**

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

---

**Note: The list above is for reference only; the actual application of the keyboard may vary.** Because Android system is different from other systems, the keys such as Pause Break, Scroll Lock, PrtSc SysRq, Page Up, Page Down and Insert have no function under the standard keyboard . Please pay appropriate attention to these aspects during the process of usage!

## **LIMITED WARRANTY**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.



**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

#### **FCC STATEMENT**

1. This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:**

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without RF striction.