Table of Contents

Basic Introduction	1
Outlook description	1
Basic specification	1
Quick Start	2
Boot and Shutdown	2
Connect with PC	3
Interface Introduction	4
Bottom bar of the Interface	4
The HOME Screen menu	4
Desktop	5
Basic Operation	6
Wireless Connection:	6
Sound Settings	7
Display settings	8
Date and time settings:	g
Applications install and uninstall	10
Browser	11
Video player:	12
Music player:	12
Photo Browser	13
Camera	13
Sound Recorder	15
Google Play Store	16
Frequently Asked Questions	16
Important Safety Precautions	17

System:Android4.1

Processor: Boxchip A13

Edition:V01

DA50

Outlook description



Basic specification

- CPU: Boxchip A13 Cortex A8-1.0Ghz
- LCD Screen: 7 " 800 *480 LED backlight
- Camera: Front 0.3M/Rear 0.3M pixel camera.
- Operating System: Google Android 4.1
- Network Connection: Built-in 802.11b/g/n wireless Wi-Fi
- Audio format: MP3,WMA,MP2,OGG,AAC,M4A,MA4,FLAC,APE,3GP,WAV
- Video format: max 2160p full HD video
 - $(AVI, 3GP,\!MP4,\!MPG,\!RM,\!RMVB,\!MOV,\!FLV,\!WMV,\!MKV)$
- TOUCH PANNEL: Multi-touch Capacitive screen
- Language: support multiple languages

- Ports: micro USB*1, Earphone * 1, TF card slot * 1,DC IN*1,MIC*1
- **Buttons:** Power/Vol+/Vol-

Quick Start

Boot and Shutdown

Boot: Press and hold the power button, the system will enter the boot process.

System has been started, entering the Android system:



System into the main interface.



Shutdown: Press the power button, pop-up Power off ,Click OK, you can safely shut down.

Connect with PC

By Micro USB (OTG) interface of the device, You can connect with PC by Micro USB cable attached with the device. USB Data transferring is available. You can operate the files through the PC.

When your device is connected successfully, to pull up the notification area of the status bar, can see the following icon.



Then click

Select to copy files to/from your computer. to enter the next.



Click Turn on USB storage, Then the device can transmission data with PC.

Note: The device also supports the FAT32 format for external devices, for example U disk, Micro SD card to Transfer data.

Interface Introduction

Bottom bar of the Interface



- A. Back, Home, Recent run the application, Menu virtual buttons.
- B. Connect USB, can realize the tablet and PC file transfer.
- C. USB debugging connected. Select to disable USB debugging.
- D. Time display: Display the time of the current system, which has been set.
- E. WIFI signal status icon: If connected to the WIFI wireless network, the icon will be displayed.
- F. Battery status icon: Displaying the current battery level and the charging status.

The HOME Screen menu

Press the menu icon on the device, it will display a home screen menu as following:



Wallpaper: Users can replace the wallpaper with you wishes.

Manage apps: It can quickly open a list of all applications.

System Settings: Fast access to system settings, user can choose "Wireless & networks", "Display", "Date & time" etc, for personalized settings.

Desktop

When sliding around with your finger to switch the main screen, the desktop fixed on the main screen, will not move. User could drag the application icon placed on the desktop area in the main screen.



Basic Operation


Click the "Settings" icon in the main applications area, you can open the system settings interface, as shown below:



Select the appropriate operation of the relevant items, such as: wireless and network, Display, date and time settings, about Device, etc

Wireless Connection:

Click the main menu "Settings" icon, go to "Settings" screen, click on "Wireless and networks" into the "Wireless and networks settings" interface. Turn on Wi-Fi switch, the Wi-Fi module built-in the device will search AP lists automatic, click the searched AP can be used, will pop up settings dialog, please follow the prompts to complete the WIFI network links. Some encrypted network, need to enter a valid key. As shown below:

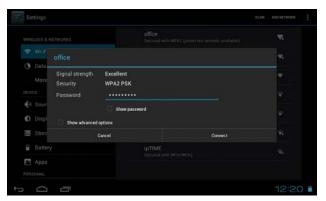

According to the above method to complete a WIFI connection, as shown below:



Sound Settings

Click "Sound " to enter the Sound Settings interface:

Click "Volumes" into Volumes set, pull the progress bar can complete Music, video, games, and other media sound Settings.



Display settings

In the settings interface choose "Display " to enter the display settings interface, select "Brightness", Pull the progress bar to adjust the brightness ,as below interface:



Click Sleep, Adjust the inactivity time of the device. You can press power key to activate the device. When display "Screen locked" interface, follow the prompts to unlock it.



Date and time settings:

Click "Date & time" to enter the Date and time settings interface:

Select to set the date, select the time zone, set the time, time format, date format and other information.

For example, choose to set the date, as follows:



For instance, Select setup time, as shown below:



Applications install and uninstall


Install applications

 $1. \ First you should select the \ Unknown sources which allow installation of non-Marekt apps$



2. Copy the APK installer software to Micro SD or NAND FLASH.



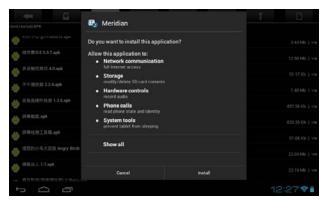

Users can "Android market" online installation, or download via the computer, or online through the machine built-in browser to download and install.

Uninstall applications

Pitch on the item "Settings - Apps -DOWNLOAD", select the appropriate application has been installed, click the applications which you need to uninstall

Browser

When the network connected, open the Web browser enter the URL, you can quickly browse the Web; or through the main desktop search bar enter the URL, open the web page.



Video player:

Online video: The product supports flash 11.0 online video playback.


Local video: Click the Super-HD Player icon

The Player can loading new albums and photos automatically which stored in local disk or micro SD card, then select the videos to playback

Music player:

Click the music icon you can enter the music player interface.

Click the music files you will enter the player to play music

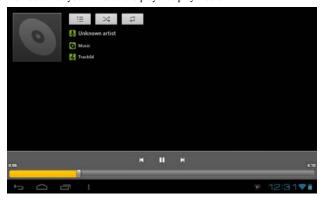

Click " $\hfill \hfill$ " : Play the previous music, long press to fast reverse.

Click " : Click it to suspend, the icon turn to " , click and return to the normal playing again.

Click " To play the next song, long press to do function.

Click " : To display the present playing list.

Click " : To select the random playing mode.

Photo Browser

Click to g

to get into Photo Browser directly. there will list all the picture files and

video files. As shown below:




Select a picture file; enter the picture playback interface, as shown below. Can the following operation: double click image scaling, in the dropdown menu has "delete", "slideshow" and "Edit", "Crop," "Set picture as", "Details".



Camera

 Photo Mode:




- 1. Click switch to camera, and you can take picture.
- 2. Click conversion lens.
- 3.Click the camera shutter to take photos .



Video mode:

- 1. Click switch to video, and you can take videos.
- 2. Click conversion lens.
- 3. Click to begin and tap to stop

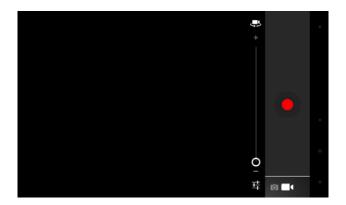

Sound Recorder

Click the recorder icon in the applications menu, as show below:



Click "Recording voice.

Click "Stop recording voice.




Can choose to give up or save the completed recording voice.

Google Play Store

should create a Gmail account



Select "Accept" to enter market, as shown below

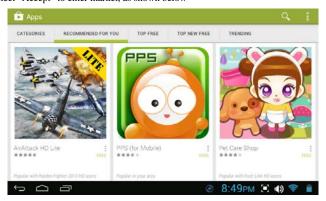

Frequently Asked Questions

Android

Q: What Android OS version is on my Device?

A: 4. 1

APK

Q: What is APK?

A: APK is Android Package acronym that Android installation package.

Q: How to obtain the APK?

A: You can download via PC-side installation, you can also "Android market" online to download and install.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported.

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP3,WMA,MP2,OGG,AAC,M4A,APE,FLAC,APE, WAV

Photo

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP, JPG and PNG.

Video

Q: What type of video files can I play on my device?

A: AVI, 3GP, MP4, MPG, RM, RMVB, MOV, FLV, WMV,MKV(max 2160p full HD video)

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Important Safety Precautions

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- > Do not expose this product to rain or moisture.
- > Keep the device out of direct sunlight and heat sources.
- > Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.

- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
 - Do not remove the cover. There are no user-serviceable parts inside.
- Clean your Device.

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

Safety Precautions

Read these simple guidelines before using your device. Not following them may be dangerous or illegal.

◆ Aircraft

Switch off in aircraft and follow any restrictions. Wireless devices can cause interference in aircraft.

♦ Vehicles

Never use your device while driving. Place it in a safe place.

Position your device within easy reach. Be able to access your device without removing your eyes from the road.

♦ Electronic devices

In some circumstances your device may cause interference with other devices.

Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Pacemakers and other medical devices

Pacemaker manufacturers recommend that a minimum separation of 8 inches be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker.

Operation of any radio transmitting equipment, including wireless phones may interference with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your device in heath care facilities when any regulations posted in these areas instruct you to do so.

Operating environment

When connecting to other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

Do not place your device in the air bag deployment area.

Use the device only in its normal operating positions as explained in the product documentation.

Always switch off your device when its use is prohibited or when it may cause interference and danger.

Areas with posted regulations

Switch off your device when any regulations posted in these areas instruct you to do so.

Care & Maintenance

- use only manufacturer-approved accessories. Use general accessories may shorten
 the life of your device or cause device to malfunction.
- keep your device dry. Humidity and all types of liquids may damage device parts or electronic circuits.
- Do not use or store the device in dusty, dirty areas.
- Do not store the device in hot or cold areas.
- Do not store your device near magnetic fields.

- Do not store your device with such metal objects as coins, keys and necklace.
- ◆ Do not drop your device or cause impacts to your device.

◆ FCC STATEMENT

- 1. This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2)This device must accept any interference received, including Interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits For a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits Are designed to provide reasonable protection against harmful interference In a residential installation. This equipment generates, uses and can radiate Radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in aparticular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.--Increase the separation between the equipment and receiver.
- --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help.
- 3. FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure requirement. The device can be used in portable exposure condition without RF striction.