

## Bluetooth Speakerphone



## Bluetooth Speakerphone User Manual

ENGLISH

|   |    |
|---|----|
| About Bluetooth Speakerphone                | 2  |
| Charging                                    | 2  |
| Getting to Know Your Bluetooth Speakerphone | 3  |
| Installing the battery                      | 4  |
| Button Functionality                        | 5  |
| LCD Indicators                              | 5  |
| Powering Up                                 | 6  |
| Pairing                                     | 6  |
| Connection/Link                             | 7  |
| Using the Speakerphone                      | 8  |
| Restore to Default                          | 11 |
| Care and Maintenance                        | 12 |
| Safety Information                          | 13 |
| Product Specifications                      | 13 |

-1-

### 1. About Bluetooth Speakerphone

 
The Bluetooth LCD Speakerphone is compatible with most Bluetooth® mobile phones. Fully portable, it is an ideal wireless communication solution for in-car or office use within a maximum range of 10 meters. Built-in with Echo Cancellation and Noise Suppression, the Bluetooth LCD Speakerphone provides you with impeccable sound quality in full duplex mode.

### 2. Charging

Make sure that your LCD Speakerphone is fully charged before using it. Use only the charger provided- do not use chargers from any other devices as this might damage the device. A full charge is approximately 3 hours.


To Charge Your LCD Speakerphone:

- (1) Connect to a mains charger or a USB charging cable to charge.
- (2) A "Charging" indication is displayed on the LCD when it is charging.
- (3) The LCD indication "Full Charge" comes on when the device is fully charged.

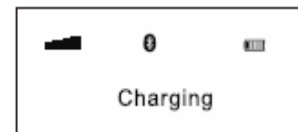

(1)

 
(2)

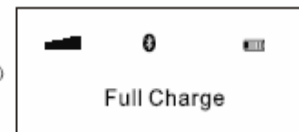

ENGLISH


-2-

### 4. Getting to Know Your Bluetooth Speakerphone

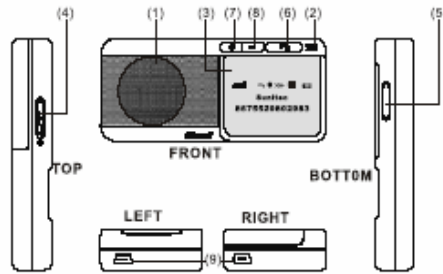 


- (1)Speaker
- (2)Microphone
- (3)LCD
- (4)ON/OFF
- (5)Mode Button
- (6) "MFB" Button(Multi-Function Button)
- (7)Volume Increase(V+)
- (8)Volume Decrease(V-)
- (9)Charging Socket (5-pin USB)

### 5. Installing the battery

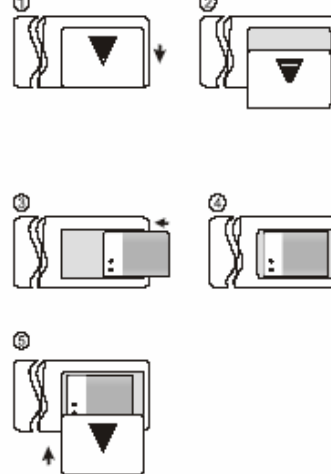 

### 6. Installing on a Sun Visor

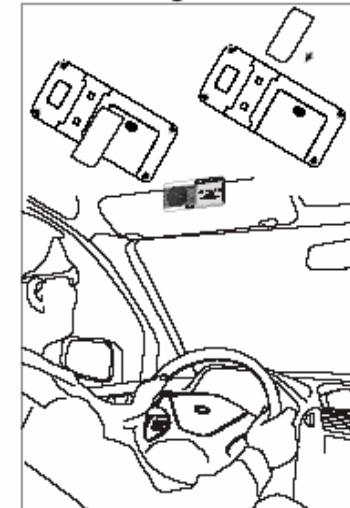 

### 7. Function Key Definition

|                       |  |
|-----------------------|--|
| "ON/OFF" Button       | Power ON/OFF                           |
| "MFB" Button          | Pairing                                |
|                       | Connecting                             |
|                       | Answering Call                         |
|                       | End Call                               |
|                       | Reject Call                            |
|                       | Voice Dial                             |
|                       | Redial                                 |
| "V+" and "V-" Buttons | Transfer Call                          |
|                       | Volume Adjustment                      |
|                       | Check Incoming Calls                   |
|                       | Delete Phonebook<br>Restore to Default |
| "MODE" Button         | Privacy Handset                        |
|                       | Get Phonebook                          |
|                       | Check Phonebook                        |
| Passkey Code          | Fixed Passkey<br>Code: 0000            |

### 8. LCD Indicators:

|  |                               |
|--|-------------------------------|
|  | Volume Level                  |
|  | Call Indicator                |
|  | Bluetooth Indicator           |
|  | Searching or Paring Indicator |
|  | Connection Indicator          |
|  | Battery Indicator             |
|  | Unanswered Call Indicator     |

### 9. Powering Up

#### (1)To turn ON the Bluetooth Speakerphone

Slide the ON/OFF button to its "ON" position and the LCD Indicator comes on displaying "Welcome" .

#### (2)To turn OFF the Bluetooth Speakerphone

Slide the ON/OFF button to its "OFF" Position and the LCD light indication goes off.



### 10. PAIRING

 
#### (1) Pairing With Bluetooth Mobile Phone

Pairing is the process of connecting your Speakerphone with your mobile phone . Before using the Speakerphone with your mobile phone, you must pair both devices. If you wish to use your Speakerphone with a different mobile phone , you must reinitiate the pairing process with your intended Bluetooth mobile phone .


#### (2) Pairing Speakerphone to Mobile Phone

1. Switch to pairing mode by holding onto the "MFB" button for approximately 3 seconds until a long "beep" sound is heard. The LCD Display shows "Pairing" and the Speakerphone is now ready for pairing.

2. Turn on your mobile phone and place it within 10 meters to the Bluetooth Speakerphone.
3. Initiate the mobile discovery feature on your mobile phone. Refer to your mobile phone's user guide.
4. Enter the default pin code "0000" ,when prompted by your mobile phone system for pin code.
5. The LCD shows "Paired" when both devices are successfully paired.




 (4)



(5)

## 11. Connection Link/Between Speakerphone And Mobile Phone

 

(6)

Your Speakerphone will always indicate a connection icon whenever it is paired to a mobile phone. Your mobile phone will also indicate a connection icon whenever your Speakerphone is paired. If the icon is not present , a reconnection

-7-

can be established by manually selecting the Speakerphone from your mobile phone's Bluetooth menu. If your Speakerphone is set as an authorised Bluetooth device on your mobile phone, an automatic reconnection can be established by pressing the Speakerphone's "MFB" button once.

### Note:

Your Speakerphone will be automatically switched off when it is disconnected from a paired device for more than 10 minutes. This special feature is incorporated to maximise your Speakerphone's standby/talk time. To reinstate the connection, simply repeat the process for turning the Speakerphone on.

## 12. Using The Speakerphone

### (1) Making Calls

You can initiate calls from your mobile phone, or directly from your Speakerphone using voice dialing commands(if this feature is supported by your mobile phone) or from the Speakerphone's phonebook Feature.

### (2) Making Calls from your mobile phone

Dial directly from mobile phone. The call is automatically connected to your your Speakerphone.

### (3) Receiving Calls

When your mobile phone rings, press the "MFB" button on the Speakerphone to connect the call.

### (4) Ending Calls

When you have finished your call, press the "MFB" button on the receiver to disconnect the call.

-8-

### (5) Rejecting Call

Hold onto the "MFB" button 3 seconds to reject an incoming call.

### (6) Redial Last Outgoing Call

Press the "MFB" button twice, the LCD displays "Redial" and the call is connected .

### (7) View last 10 incoming calls

The Speakerphone automatically captures entries of last 10 incoming calls (received and missed calls ). To view them, press the "V+" or "V-" when the Speakerphone is in standby mode. Pressing the "MFB" button on the selected name/number will place the call out.

### (8) Making calls using voice dialing (Dependent on mobile phone support)

1. Press the "MFB" button once and the LCD shows "Voice Dial" .
2. Call out the name of the person for the call to be place.

### (9) Transferring Calls

Speakerphone to Mobile Phone - During a call, simply press both "V+" and "V-" buttons once and the call is routed to your mobile phone. The LCD shows "Transferred to Phone"



(7)

Mobile Phone to Speakerphone - Press the "MFB" button once and the call is routed back to your mobile phone. The LCD shows "Transferred to Speakerphone" .

 
-9-



(8)

### (10) Privacy Mode

In the midst of a conversation, press the "Mode" button once and the speaker Volumes are automatically decreased to minimal levels where you can use the Speakerphone in the same mannerism as using any handheld phone.



(9)


### (11) Adjusting The Volume

 1. To increase the volume  
Press the "V+" symbol Volume button to increase volume by one level, repeat this procedure until you have reached the desired level.
2. To decrease the volume  
Press the "V-" symbol Volume button to decrease the volume by one level, Repeat this procedure until you have reached the desired level.

### (12) Transferring Mobile Phone's Phonebook to Speakerphone

Press the "Mode" button in the connecting status for 3 seconds and the LCD will show "Phonebook Retrieve" . When the process is completed, the LCD shows "Retrieve Complete" .

-10-



(10)



(11)

**Note:**

The Phonebook function varies from mobile phones and not every mobile phone supports this feature. Please refer to the compatibility list for details. Additionally, every new mobile phone connected will have its previous phonebook automatically deleted in the Speakerphone. Please repeat the process for Phonebook transfer on the intended mobile phone.

-11-

**(13) Dialling out from the Speakerphone's Phonebook**

Press the "Mode" button during standby mode and your contacts will appear on the LCD screen, scroll through your contacts by pressing "V+" or "V-". Press the "MFB" button on the desired contact and the call is connected.

**(14) Removing Phonebook Entries**

 
During standby mode, hold on to both "V+" and "V-" buttons for 3 seconds and the LCD will prompt "Phonebook Deleted".



(10)

**14. Restore to default**

To restore your Speakerphone to its original settings, press and hold both "V+" and "V-" for 10 seconds and the LCD shows "Master Reset". Press and hold both "V+" and "V-" for a further 3 seconds and the Speakerphone will power off automatically. This process is complete when 3 beeps are heard when you power on your Speakerphone again.



(12)

**15. Care and Maintenance**

- (1) Do not expose the Speakerphone to liquid, moisture or humidity, as it is not waterproof.
- (2) Do not use abrasive cleaning solvents to clean the Speakerphone.
- (3) Do not place the Speakerphone in high temperature, as it will result in an explosion.
- (4) Do not expose the Speakerphone contact with sharp objects as this will cause scratching and damage.
- (5) Do not stick anything inside the Speakerphone, as it does not contain serviceable components.
- (6) Do not attempt to disassemble the Speakerphone, as it does not contain serviceable components.
- (7) If you do not use the Speakerphone for long periods, be sure to store it in a dry place, free from extreme temperature, humidity and dust.

-12-

**16. Safety Information**

- (1) Check local laws regarding use of a mobile handset and while driving. If you use the Speakerphone while driving, ensure your attention and focus remains on your responsibility of driving safety.
- (2) Never allow children to play with the Speakerphone. Small parts may be a choking hazard.
- (3) Observe all signs that require an electrical device or Therefore radio product to be switched off in the designated areas. These could include hospitals, blasting areas, and potentially explosive atmospheres.
- (4) Turn off your Speakerphone prior to boarding an aircraft. Do not use your Speakerphone in the aircraft.
- (5) Never mount or store your Speakerphone over any air bag deployment area serious injury may result when an air bag deploys.

-13-

-14-

## **Warning:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limit set forth for uncontrolled Environment