



# MOCUTE GAMEPAD

## Operation Manual

Model: MOCUTE-061F






Many thanks for purchasing our product! This is a portable wireless gamepad, used for mobile phone, MID, TV box, smart TV, PC and so on. It is supported iOS, Android, VR, PC and so on.


**Disclaimer:** the third-party platforms or trademarks involved in this manual are used to explain the purpose of this product, and the intellectual property rights still belong to the copyright party.

**Important Note:** Products are subject to change without any notice. And this product has applied for patents, counterfeiting!


## I .Button and Interface Description

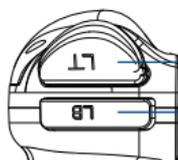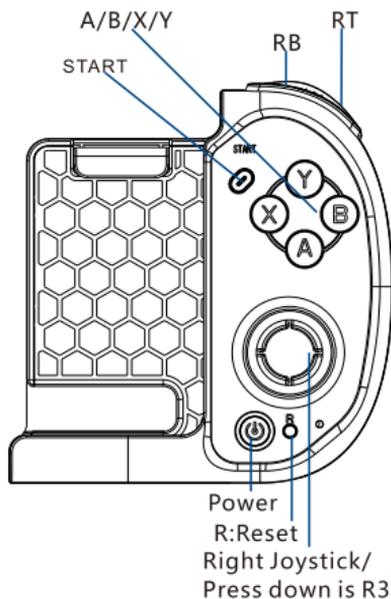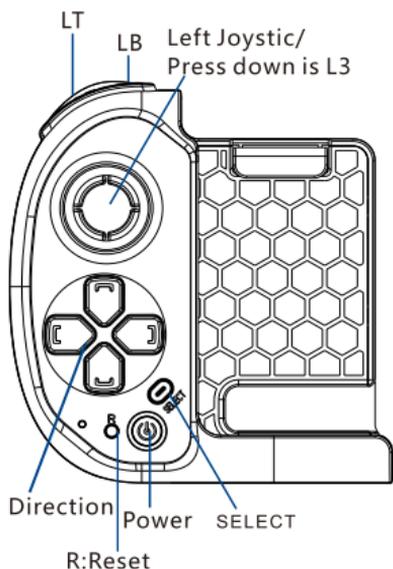

LT: iOS11-13.3 mapping  
LB: iOS13.4+ Single Joystick mode

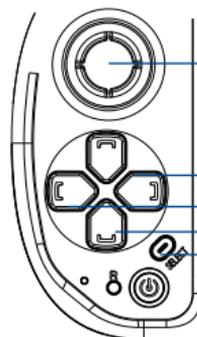

RIGHT+DOWN: FS OTA Mode  
【Left handle】

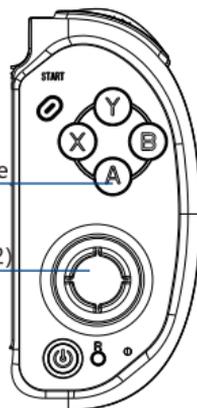

A+X: FS OTA Mode  
【Right handle】

## II.Startup & Shutdown and mode description

**Startup** Press and hold the power button (about 2 seconds) until the **blue work light** is on, and now the handle is turned on.Factory default a mode

**Shutdown** Press and hold the power button (about 5 seconds) until the **blue work light** is off and now the handle is turned off.

If the wireless device is not connected for 5 minutes after power on or no operation for 30 minutes after connection, the handle will turn off automatically.

**Pair and connect** After powering on, the work light flashes, and the handle enters the Wireless pairing mode.

Use the device to find the wireless name of the handle and click to connect. After the connection is succeeded, the work light will flash slowly. When you boot it for the next time, it will connect to the last paired wireless device automatically.

**Rematch mode:** In the off state, press and hold the Power button for more than 8 seconds to boot,and the work LED will flash, and then the handle will enter the rematch mode and will not connect to the last paired device.

**Left and right working mode:** after the left handle is turned on, it will enter the corresponding wireless pairing mode. After the connection is successful, the indicator light goes out. After the right handle is turned on in mode A (default), it will be automatically connected to the left handle. After connecting to the left handle, the indicator light will be on for a long time. If the left handle is not turned on normally, the right handle light will flash for 5 minutes and then turn off.

**Change mode:**In the power off state, press and hold the mode key first, and then press the power key. The LED is on, and the handle will switch to the corresponding mode. Cancel and search again, the current mode wireless name will be displayed. The next time you press the power button directly to start up, it will automatically enter the last conversion mode.

Boot mode	Description
Down: Xbox Wireless Controller	iOS13.4+:MFI Games: Call of duty... Android mode: Call of duty...
Right : MOCUTE-VTF-x-B	Android mapping: All,(MTK can't support)
Left: MOCUTE-HID-x-L	Android HID: CF/Simulator/ TV/Standard
LT : MOCUTE-x-iOS13.3	iOS11-13.3 mapping: All games.
LB : MOCUTE-Mouse-iOS	iOS13.4+Joystick: Mouse (left hand)
L3/R3 : MOCUTE-x-G1/G2	Android/iOS: Independent handle (FC)
SELECT: MOCUTE-PC	PC XINPUT: Steam/Store games..

USB wired mode	Description
Down : Xbox controller..	WIN10:XINPUT/Steam/Simulator
Left: MOCUTE-GAMEPAD	PC/TV/Android:DINPUT/Simulator

## III. Android device operating instructions

### ① XInput (Down:Wireless Controller) (Factory Default)

Press **[Down+Power key]** on the left handle, The handle **[blue LED]** will flash, cancel previous wireless pairing, find again, connected to **Xbox Wireless Controller**.

◆Support direct play of some games: Some games have built-in handle drivers, which can be opened directly to play. Such as: 《Minecraft》 《GTA》 《Call Of Duty》 etc. More games refer the web: <http://apps.gamevice.com/google>.

**Note:** Some old games and old mobile phone systems do not support this mode, such as chicken simulator, Crossing Fire, etc. Please refer to the following instructions. Press **[Left +Power]** start up and connect to the standard HID-L mode.

### ② HID mode(Left:MOCUTE-HIDxxx-L) (General)

Press **[Left+Power key]** on the handle, The handle **[blue LED on the left]** will flash, cancel previous wireless pairing, find again, connected to **MOCUTE-HIDxxx-L**.

◆Support direct play of some games: Some games have built-in handle drivers, which can be opened directly to play. Such as: 《Minecraft》 《GTA》 《Cross Fire》 etc. More games refer the web: <http://apps.gamevice.com/google>.

◆Support to play games with handle tools: Use <Octopus Assistant> to play popular games such as <Cross Fire>, <Fortnite> (Can't play "PUBG", may be suspended).

◆Can support "Chick Simulator" and Other standard game centers, etc. You can play simulator games with the simulator: NES/SFC/GBA/N64/PS/MAME..., Such as "Three Kingdoms" and "Dinosaurs" "Super Mario" "Contra".

**Note:** this mode is compatible with all Android phones, but does not support new games such as <Call of duty> .

### ③ Mapping mode (Right:MOCUTE-VTFxxx-B)

Press **[Right+Power key]** on the left handle, The handle **[blue LED on the left]** will flash, Cancel previous wireless pairing, find again, connected to **MOCUTE-VTFxxx-B**. Android devices will support MOCUTE-VT tool button mapping and macro definition function. Use custom mapping to play all suitable games, such as "PUBG", "Fortnite" etc., as well as customizable one-click combos and other advanced macro definition functions.

For more instructions, please scan the QR code on the back of the handle.

**Note:** This mode has no function on mobile phones with MediaTek CPU (some OPPO Xiaomi and other mobile phones). Please refer method 1/2 for MTK phones.

## IV. iOS device operating instructions

### ①. iOS13.4+ (Down: Wireless Controller)

Press **[Down+Power key]** on the left handle, and the handle **[blue LED]** will flash, Connect to **Xbox Wireless Controller**, Devices above iOS version 13 will support standard gamepad functions, Some official games (MFi Games) support standard controllers. Such as: 《Minecraft》 《Asphalt》 《Call Of Duty》 ..., This website has some games: <http://apps.gamevice.com>.


Support games in Arcade subscription in Appstore .In the iOS device menu **[Settings-General-Gamepad]**, press the button to set your own preferences.

**NOTE:** If the test handle has no function after the initial pairing, you can cancel the pairing (ignore the device) and re-pair it.

## ② .iOS11-13.3 (LT:MOCUTE-VTxx-iOS13.3:Mapping)

Press **[LT + Power key]** on the left handle, The handle **[blue LED]** will flash,Cancel previous wireless pairing,Find again, connected to MOCUTE-VTFxx-iOS13.3, iOS devices will support MOCUTE-VT tool button mapping Custom function and button macro definition function.After mapping, you can play any game, such as "PUBG" and "Fortnite" etc.. This function does not support IOS13.4 or above.

MOCUTE APP tool can be downloaded from APPStore,For specific instructions, please scan the QR code on the back of the handle ([www.migamepad.com](http://www.migamepad.com)).

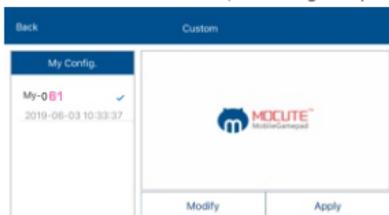

## ③ . iOS13.4+Joystick(LB:MOCUTE-x-Mouse-iOS)

Press the **[LB+ power key]** on the left handle to start up, and the handle **[blue light]** will flash, cancel the previous wireless pairing, and re find and connect to the wireless name of mocute mouse IOS.Devices above ios13.4 will support mouse mode to assist control, so that you can only use the left handle to simulate the trajectory of the rocker to play games. At present, you can play games such as "PUBG", and support joystick and fire button.

After connecting the wireless, enter **[settings] - [auxiliary functions] - [touch] - [Auxiliary touch]** of IOS device to open it. And adjust the **[tracking sensitivity]** under the auxiliary touch menu. It is recommended to adjust it to the maximum (rightmost).After entering the game, turn the joystick to display the cursor at the bottom left of the screen. If it is not at the bottom left, please rotate the IOS device again "Pubg" drag the firing button to the upper left corner (beyond the screen).



## V. Connection instructions of handle on PC

### ①. USB / Wireless - XInput (mode-Down / right)

**USB mode:** turn off the left handle and insert the USB cable, then press [Select + Power key] to start up.


**Wireless mode :** press [Select + Power key] or [Down + Power key] to start up. At this time, it is le XInput mode. Turn on BT Wireless on the computer (this product does not have a BT wireless receiver.) and connect to the **Wireless Controller**. Chick simulator of PC can only use **Select** mode.

### ②. USB / Wireless - DInput (Left)

In USB mode, insert the USB cable first when shutting down, and press [Left + Power] on the left handle to start up. At this time, it is DInput mode. The wireless mode connection name is **MOCUTE-HID-x-L**. This mode can be used for some simulators, game assistants or older computer systems.

## VI. Double FC Gamepad function

Press [L3/R3 + Power key] on the left/right handle to display the wireless name as MOCUTE-061-G1/G2, Both connect to an Android /iOS. The two handles can play in simulator game platform, select 2P mode, enter Play duel games, such as "Contra". Press [DOWN/A + Power button] return to the default mode.

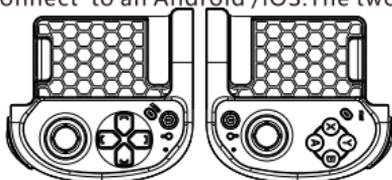

## XII. Firmware upgrade function description

**Android upgrade:** left handle [Right + Down + Power] / right handle [A + X + Power] to enter the wireless upgrade mode and enter MOCUTE-FS Application select the MOCUTE-FS-OTA, click [start upgrade]. After 100%, the handle will automatically shut down, and press the [LB+LT+Power]/[B + Y + Power] key to turn on, turn the double joystick at the maximum diameter for 2 turns, and then turn off the joystick to calibrate the joystick. (note that the handle must be fully charged and partially charged during the upgrade process. Some chargers have interference, Do not upgrade when charging. If the upgrade fails, repeat operate until successful.

**Note:** The left and right handles need to be upgraded separately. If they cannot be opened after upgrading Press the reset key R.



## VIII. Notes

- (1) If it **can't be turned on or turned off** due to unforeseen circumstances, please use a fine needle to tap the **reset button**.
- (2) If there is no function after connecting the handle, you can cancel ignoring pairing, repair again or cancel pairing all other wireless devices (such as headphones, etc.).
- (3) If Wireless is delayed and so on, please temporarily disconnect the mobile phone WIFI.


- 4). If there is no function after connecting the handle, you can cancel ignoring pairing and re pairing once, or cancel pairing all Other wireless devices (such as headphones, etc.). After the handle pairing function is normal, other headphones and other devices can be paired.
- 5).Some Android phones cannot work in the down mode, and the keys are disordered. Please use HID (left) mode to connect.

## IX. Charge description

This product has a built-in rechargeable lithium-ion battery. When the battery is too low, the [blue indicator LED on the left] will flash. Now plug in the 5V TYPE-C USB port for charging! The red indicator light on when charging, and the red indicator light off when it is fully charged.

## X.Product Specification

Items	Specifications
Machine model	MOCUTE-061F
Product size	126x94x45mm
Wireless protocol	Wireless 4.2 compliant
Wireless distance	2-10M
Support system	Android、iOS、PC
Battery	Rechargeable Li-3.7V 400mA
Continuous game time	about 32 hours
Working current	1-12mA

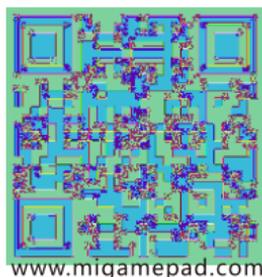

[www.migamepad.com](http://www.migamepad.com)

Scan the QR code to get more details help !

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition, compliance with exposure requirements.