






卡刀故障排除操作


1 先将切刀盖板向上打开, 2 再向下旋转切刀旋钮,

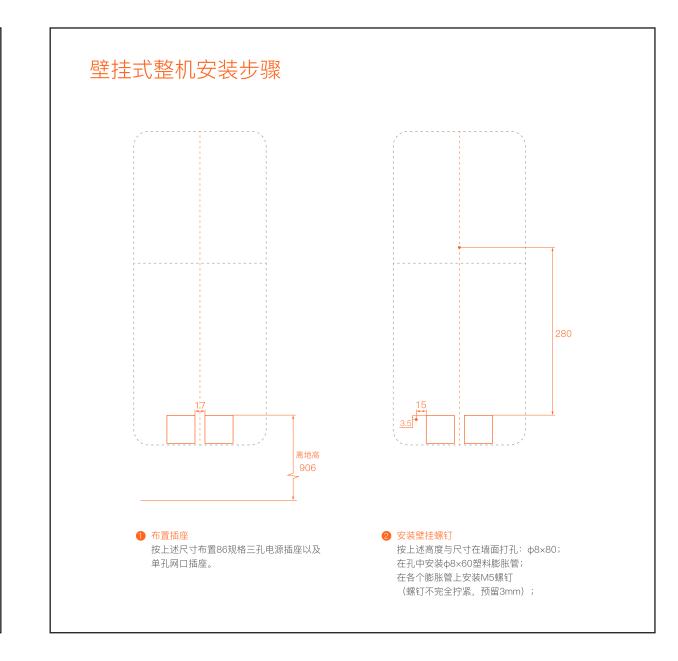


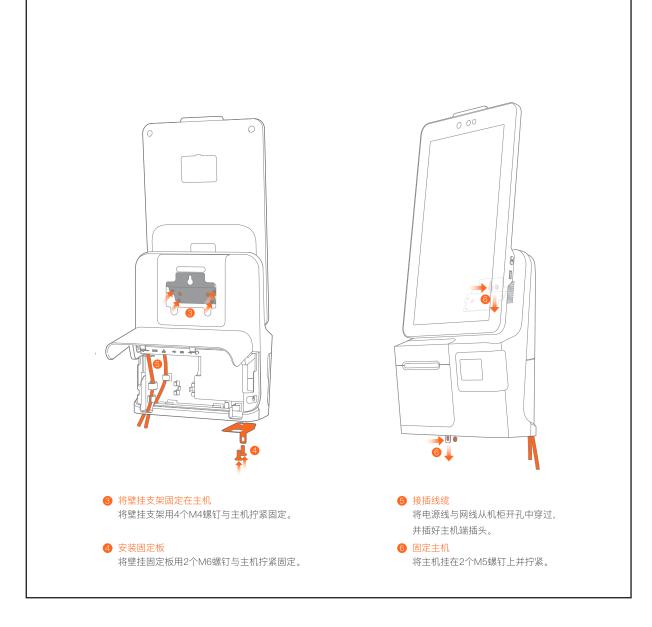


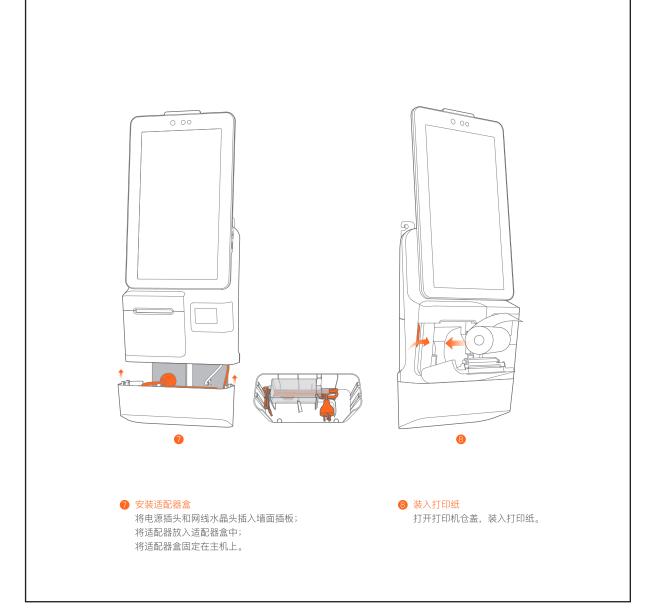





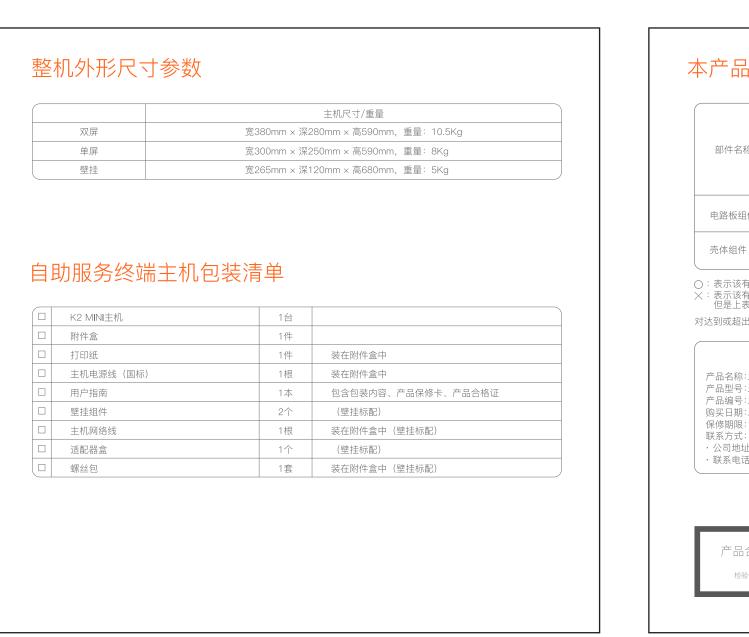


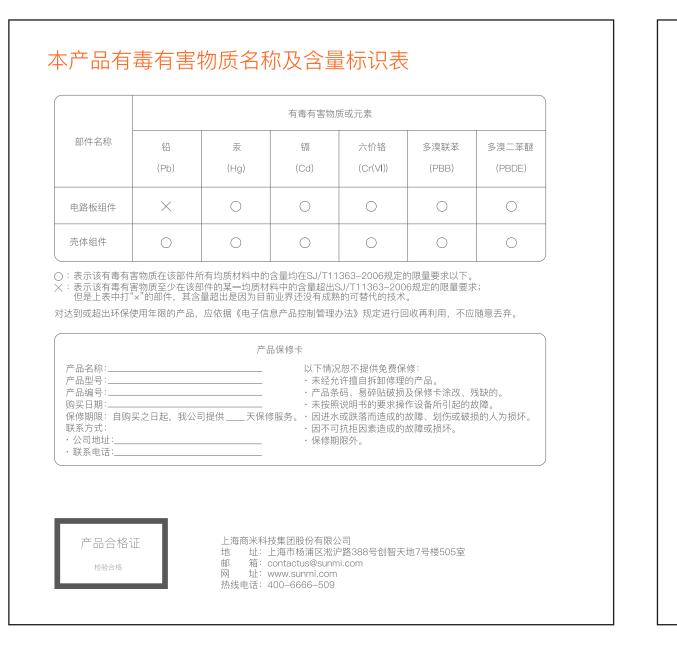

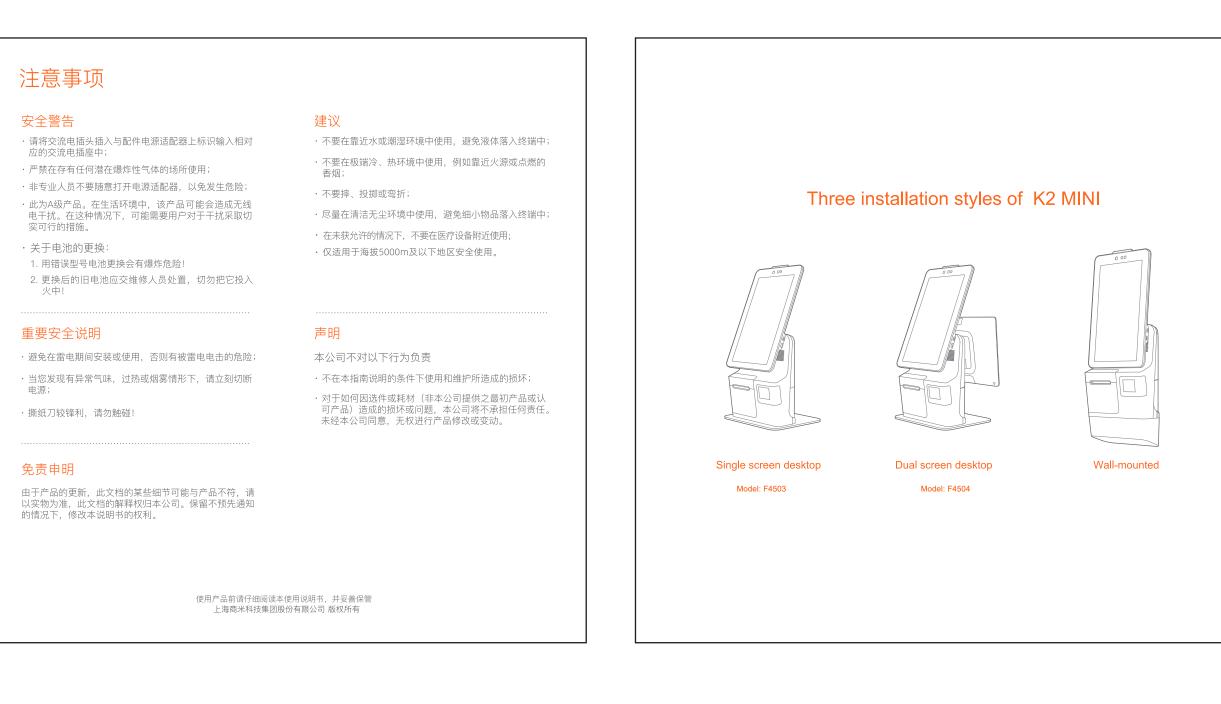


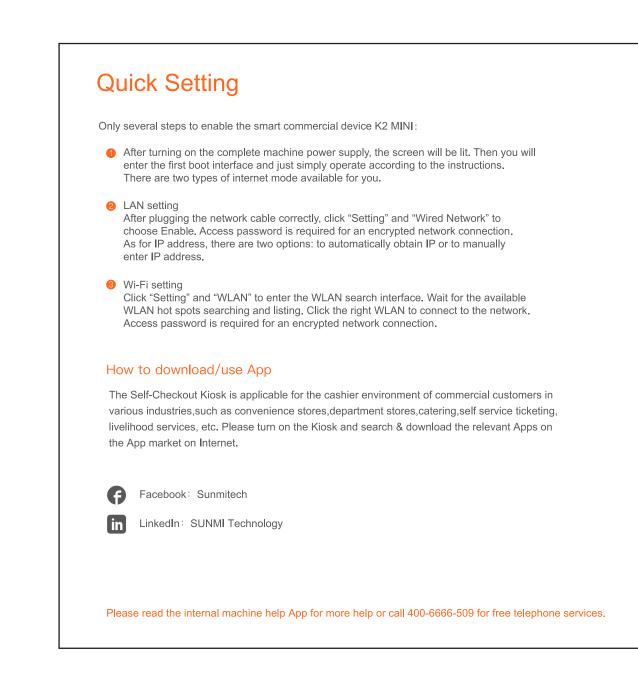


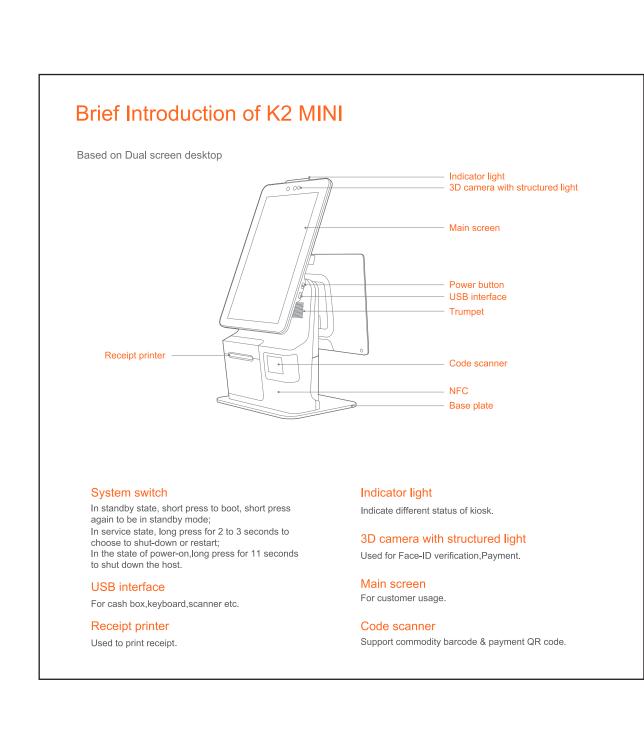


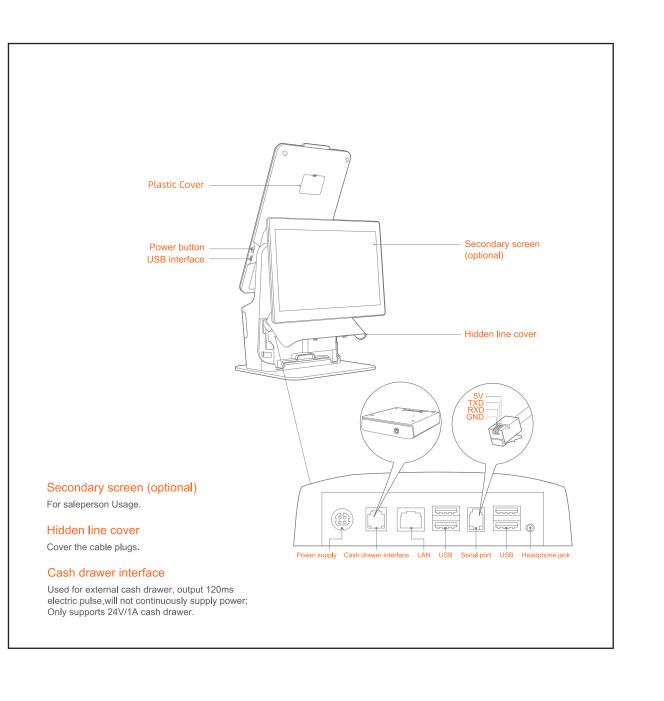





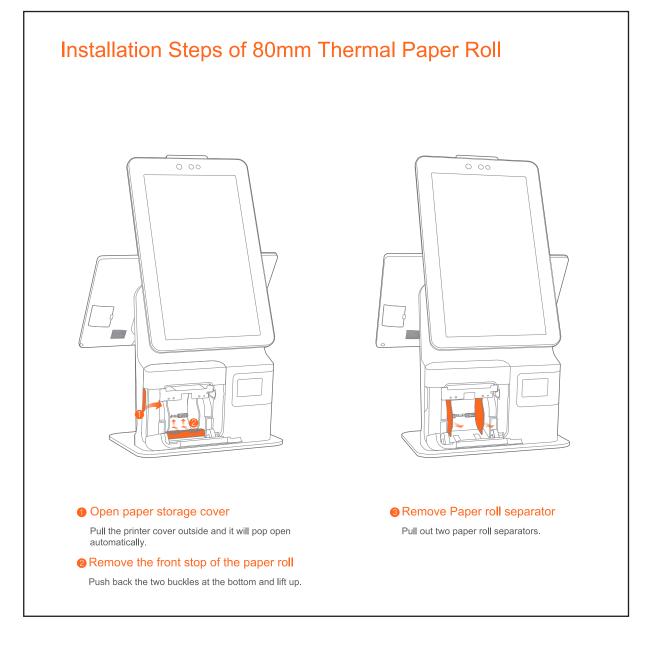


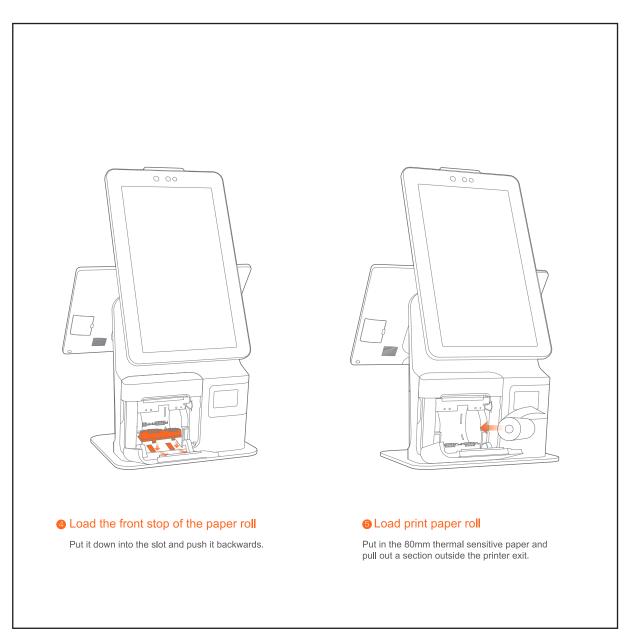


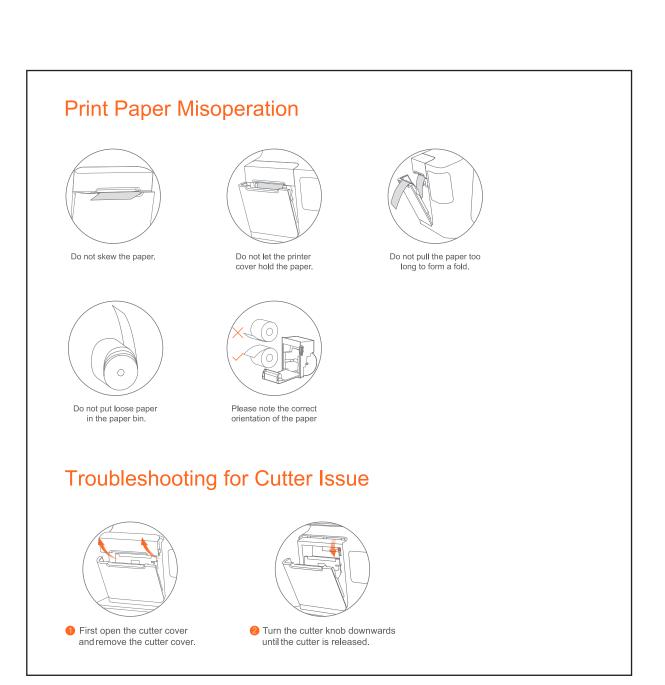

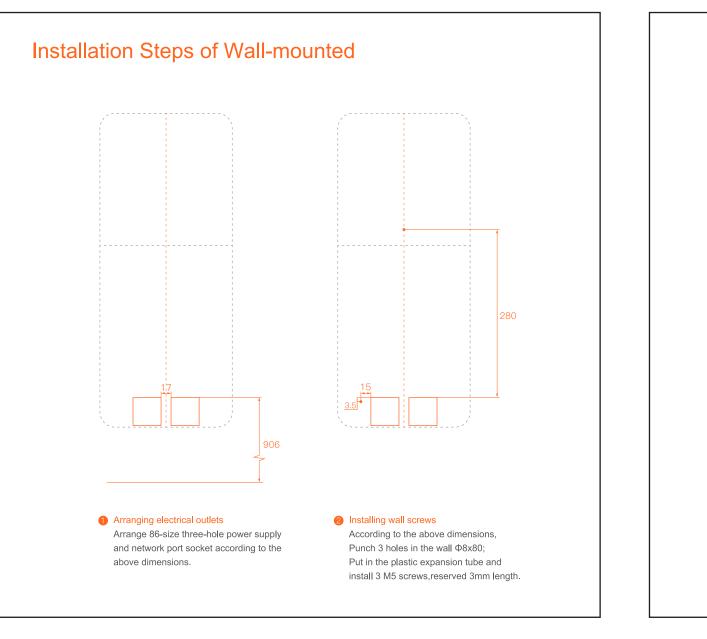

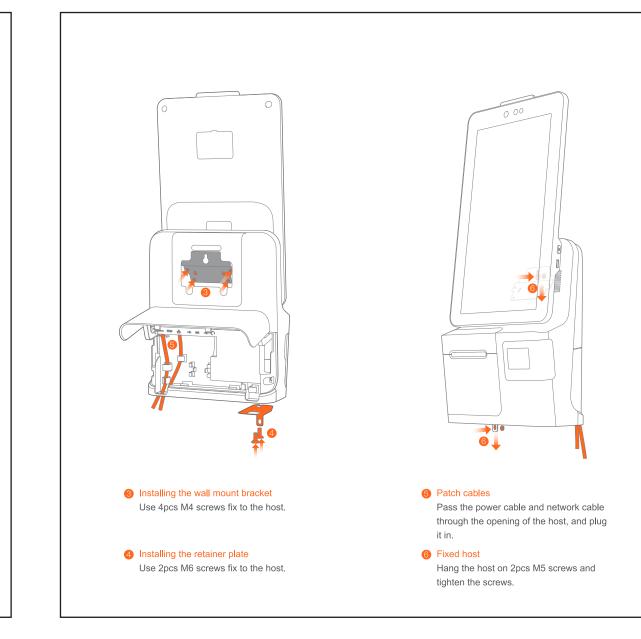

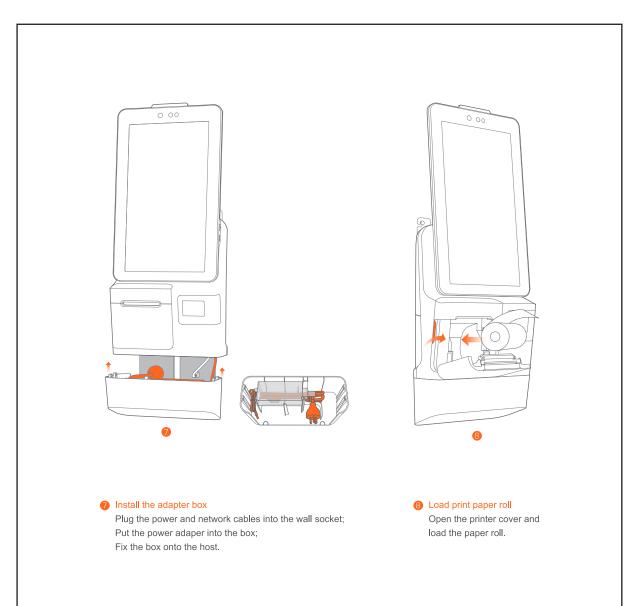

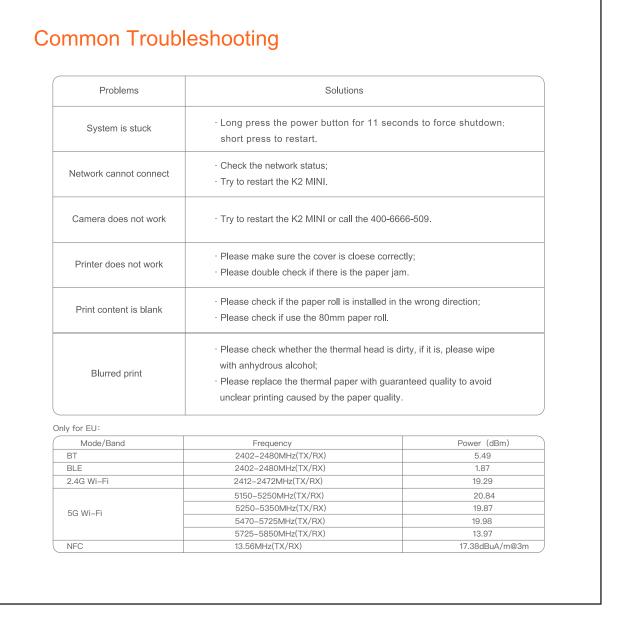



If you think batteries might have been swallowed or placed inside any partof the body, seek immediate medical attention.

Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).

Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flam-

Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.


Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.


Risk of explosion if the battery is replaced by an incorrect type.


Dispose of used batteries according to the instructions.

Adapter: CYSE65-240250 Jiangsu Chenyang Electron Co., Ltd.

mable liquid or gas.

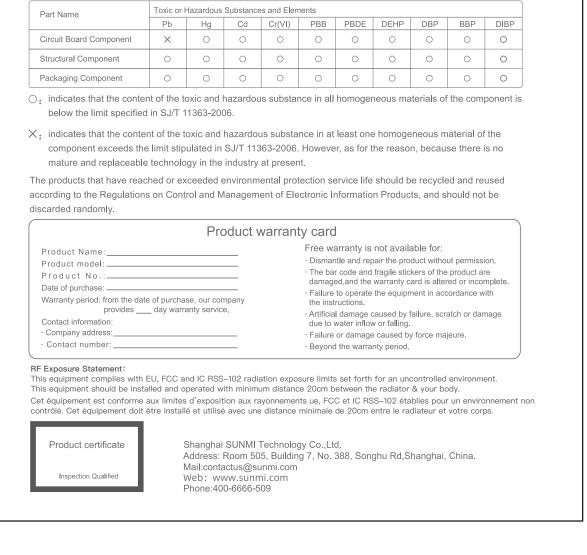

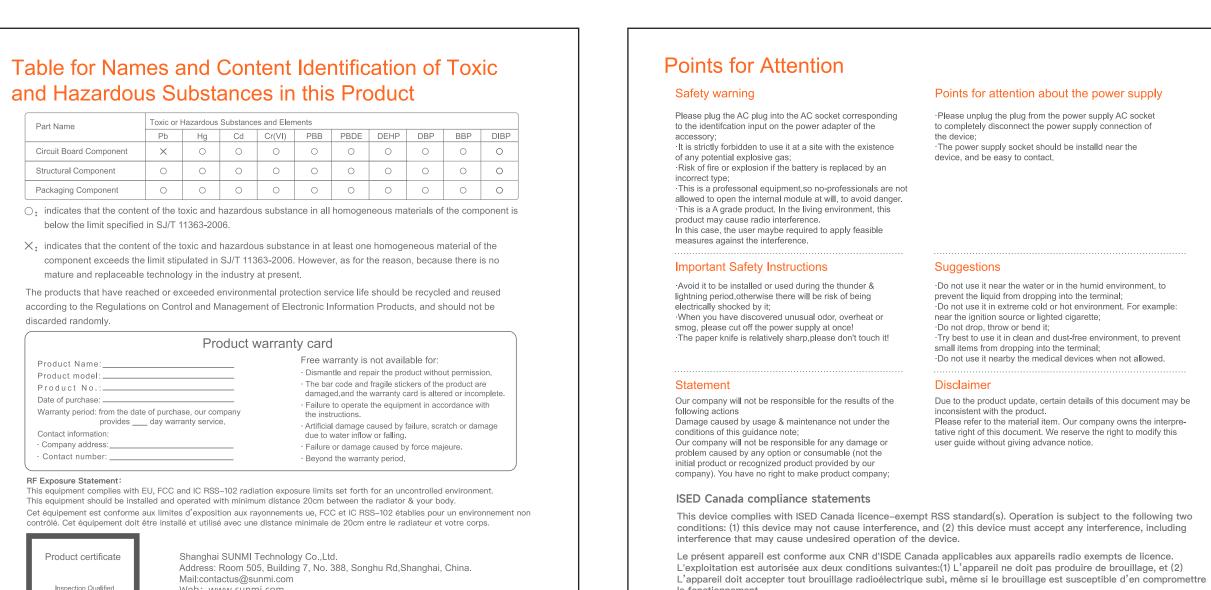

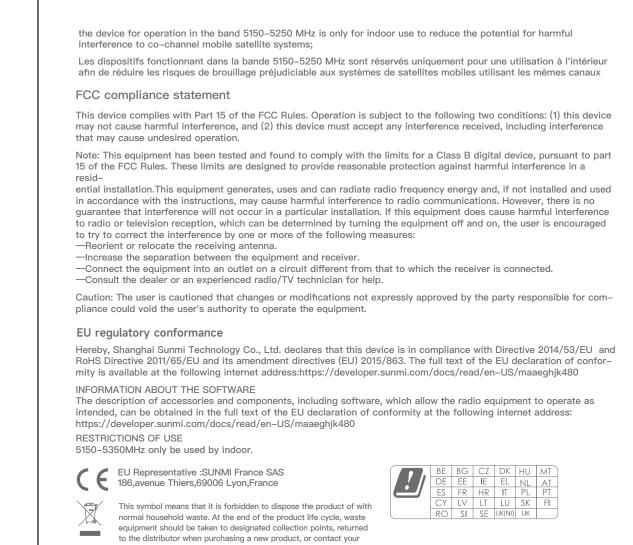

local authority representative for detailed information on WEEE

