

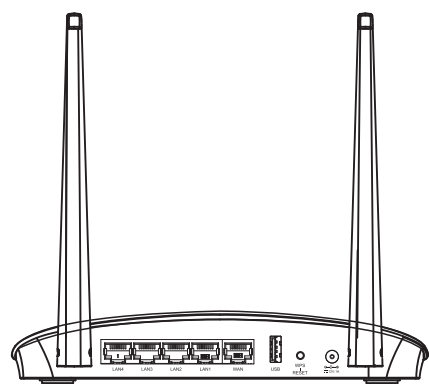


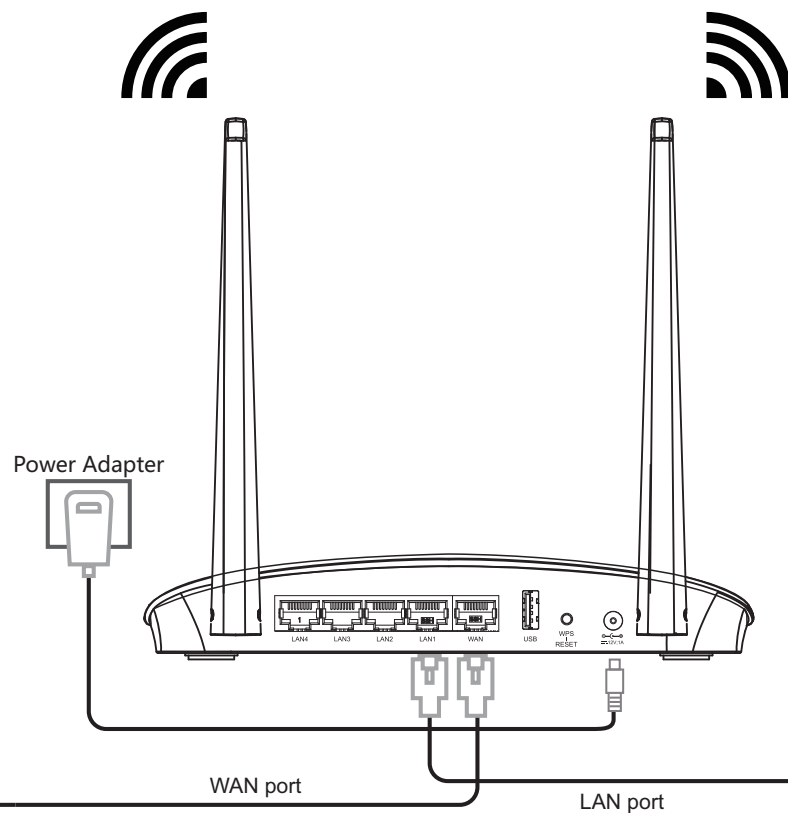

Sunniwell
朝歌科技

Installation Manual

1. Connecting Your Device

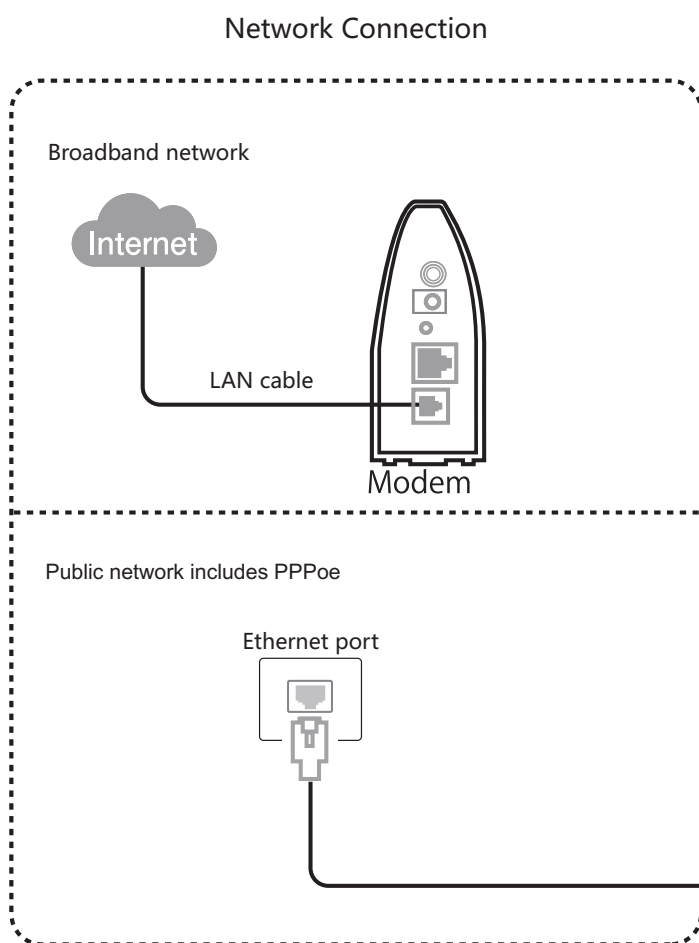


Wireless connection

SSID (Wi-Fi's name) is fixed at the bottom of the device.




Wired connection

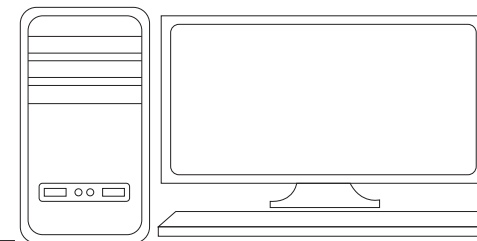


WPS button:
Short press shortly for WPS function and 8 seconds long press for restore the factory settings.

2. Router settings(1/4)

 1) Connect the router and the device with wired or wireless network. Type "192.168.17.1" in the browser address bar and hit the Enter key. Please refer to the FAQ1 and try again if there is an exception.




2) Please enter the default password "admin" on the login page.

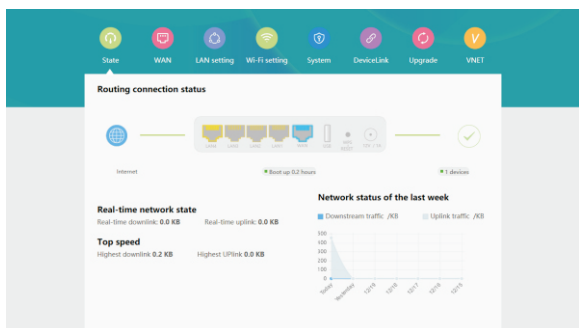

2. Router settings(2/4)


3) Click the WAN switch and select the network connection mode.

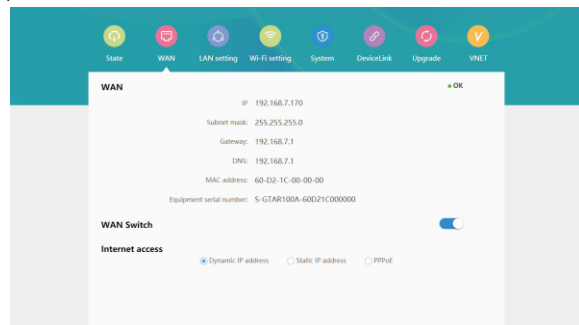

NOTE: Some types of modems use other Dial-up Internet access.

4) Please enter the user information.

 
A: If the user select to obtain an IP address automatically, then the user information is not required.



A: Automatic IP connection


2. Router settings(3/4)

B: Please enter the fixed IP address, subnet mask, default gateway and DNS server.

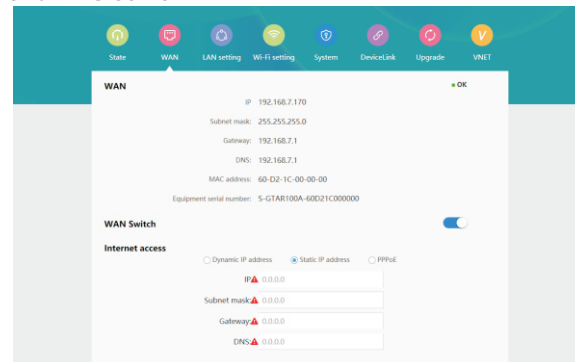

B: Fixed IP connection


C: Please enter the user name and the password of broadband network. Please consult the internet service provider if the user doesn't remember the information exactly.

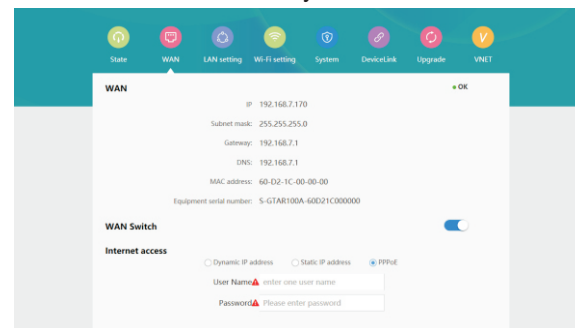

C: PPPoE connection

2. Router settings(4/4)

5. The Wi-Fi settings can be changed as required. SSID (Wi-Fi name), password (requires more than 8-bit characters), and the 5GHz Wi-Fi can be switched on and off.

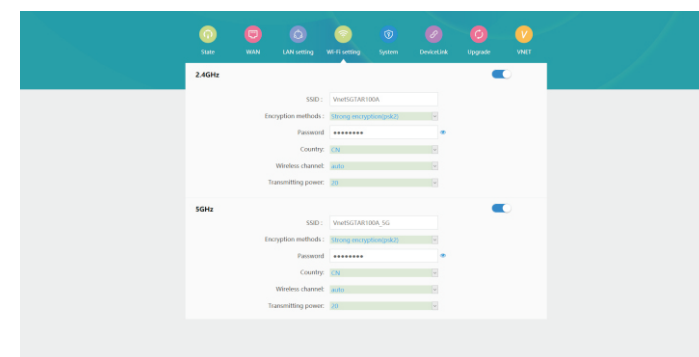

NOTE: Please do not select 5G Wi-Fi, for it will not be displayed on devices which do not support 5G networks.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Regulation information

- (1) This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.
- (2) This compliance to FCC radiation exposure limits for an uncontrolled environment, and minimum of 20cm separation between antenna and body.
- (1) The device is going to be operated in 5150-5250MHz frequency range. It is restricted indoor environment only.