

ELECTRONIC BALLAST INSTALLATION INSTRUCTION

Model : U1-2HOUVW

CAUTIONARY NOTES: Do not use this equipment for other than intended use.

1. Verify that the line voltage matches the ballast voltage.
2. Installation to be made by a qualified person in accordance with applicable codes.

This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.

Features

- 120V- 230V AC input
- High power factor: > 0.95
- 2 lamps in parallel.
- Flexibility in different size of HO lamp.
- Class P
- Sound rating A
- UL, cUL recognized. File E177888
- Indoor use.

Lamp type & power consumption :

Before installation

1. Disconnect line voltage before installing or replacing lamp.
2. Ballast case must be grounded.
3. Place the ballast to a stable support and fix it.

Installation

1. Please connect the lamp with ballast according to the label on the ballast. Ballast supports only the same type lamps specified on the product label.
2. Connect the AC power line. Connect the black wire to **L** terminal and white wire to **N** terminal of the AC source.
3. The both connection of black and white power wire must be fully insulated.