Sunrex Technology Corp Bluetooth Keyboard AA-SK7PWBB User Manual

Overview

Front



Back





- The appearance of the product may differ from the figure.
- Usage is provided based on Windows 8.
 For other operating systems, refer to the help information of the corresponding operating system.

Connecting

- 1 Press the PUSH part at the bottom of the keyboard to separate the battery compartment cover.
- 2 Insert the batteries and close the cover.



- Be sure to confirm that the polarities (+/-) of the batteries are correct.
- Do not recharge the batteries (AAA type) supplied with the product.
- 3 Turn both the computer and the keyboard power switch on.
- 4 The Bluetooth LED (*) is turned on for 5 seconds.
 If you press and hold the Pairing button for approximately 2 seconds, the Bluetooth LED (*) blinks.
- 5 Right-click over the Bluetooth icon on the Desktop and select Add Bluetooth device from the popup menu
- 6 Searching for devices is automatically performed. Select the keyboard to be connected.
- 7 Enter the number displayed on the screen (the entered number is not displayed on the screen) and press the Enter key to connect the keyboard.
 If the keyboard is successfully connected, the Bluetooth LED on the
 - If the keyboard is successfully connected, the Bluetooth LED on the keyboard turns on shortly.
- 8 Please key in the pairing password use other KBD or S/W KBD the pairing password whenever sometimes PC ask password.
 And then key in use pairing KBD the pairing password. Then you can paring complete.

Indicators

When the power is turned on	The Bluetooth LED (*) are turned on for 5 seconds.
When the keyboard enters connecting mode (pairing)	The Bluetooth LED (*) blinks for 3 minutes until the keyboard is paired.
When the remaining battery charge is low.	Caps Lodk LED(♠) / Low Battery LED() blinks continuously.

Q&A

Q. The Bluetooth wireless keyboard does not work.

A. If the Bluetooth wireless keyboard is not used for a pre-determined period of time when it is connected, the keyboard automatically enters the standby state. In this case, if you turn the computer on and press any key on the keyboard, the LED blinks once and the keyboard is reconnected within 2~3 seconds.

If the keyboard still does not work, pair the computer to the bluetooth keyboard again.

Specification

Items	Specifications
Operating Voltage	3.2VDC battery
Input Power	70.4 mW (3.2V x 22mA=70.4mW)
Input Voltage	3.2VDC battery

Import Usage Information

u Battery:

- 1. We recommend using alkaline batteries for a longer battery life.
- 2. Don't mix different types of batteries or new and old batteries together. Always replaced old batteries with new and same type batteries.
- 3. Remove batteries after long periods of non-use. Battery leakage or corrosion may damage the device quality and cause danger.

u Rating:

Keyboard: 3.2VDC 22mA

u Max. operating temperature: 40° C

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Notice

Operation is subject to the following two conditions: (1) this device may not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation of the device.