

ADESSO WARRANTY

Adesso's warranty obligations are limited to the terms set forth below. Adesso warrants this hardware product against defects in materials and workmanship for a period of three (3) years from the date of original retail purchase.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period with shipping charges pre-paid to Adesso. You must contact Adesso for a Return Merchandise Authorization number (RMA) prior to returning any product. For each product returned for warranty service, please include your name, shipping address (No P.O. Box), telephone number, a copy of the bill of sale as proof of purchase and make sure that the package is clearly marked with your RMA number.

For warranty service outside of the United States or Canada, customer must bear the cost of shipping in both directions. Please contact support@adesso.com for instructions.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, WHETHER WRITTEN, ORAL, EXPRESS OR IMPLIED. ADESSO SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING AND WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO ADESSO DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION OR ADDITION TO THIS WARRANTY.

ADESSO IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT OR PROPERTY AND ANY COST OF RECOVERING, REPROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH ADESSO PRODUCTS. ADESSO'S MAXIMUM LIABILITY FOR ANY AND ALL DAMAGES ARISING OUT OF USE OF THE PRODUCT SHALL BE LIMITED TO THE AMOUNTS PAID BY PURCHASER FOR SUCH PRODUCT.

Some states do not allow the exclusion or limitation or limitation of incidental or consequential damages or exclusion of implied warranties, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

Adesso is a trademark of Adesso Inc. All other trademarks and trade names are property of their respective holders. Specifications and information in this publication are subject to change.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

WARNING! FOR YOUR SAFETY PLEASE DO NOT USE KEYBOARD WHILE DRIVING OR IN MOTION.

Long-term repetitive use of any keyboard could cause injury to user. Adesso recommends users avoid excessive use of this or any keyboard.

REQUIREMENTS

- Windows Auto, CE, Vista, XP, 2000
- Bluetooth device for Wireless functionality.
- Ford Work Solutions In-Dash

SUPPORT

For technical support, please send an e-mail to: support@adesso.com or visit our Frequently Asked Questions (FAQs) site at: <http://www.adesso.com/faqs.asp>

Adesso Inc.

160 Commerce Way
Walnut, CA 91789
Phone (909) 839-2929
Fax (909) 839-2930
www.adesso.com

USER GUIDE



Bluetooth™ SlimTouch™ Mini Keyboard



MODEL: WKB-4000BT-FD

INTRODUCTION

Congratulations on your new Adesso Bluetooth™ SlimTouch™ Mini Keyboard with integrated Touchpad. The keyboard features Bluetooth™ connectivity, an slim and stylish design with an integrated touchpad. This is specifically designed for FORD automobiles.

FEATURES

- Bluetooth™ connectivity
- Integrated touchpad takes the place of your mouse.
- Easy to use, simply glide your finger over the touchpad.
- Small and lightweight, fits anywhere, extremely portable.
- Low-profile keys for quieter typing.
- Ideal for your LCD monitor, Plasma TV, Tablet PC, Notebook or in presentation environments.

SETUP AND INSTALLATION

CAUTION! Please be advised when pairing this device with Bluetooth, the automobile must not be in motion.

Installing on to your FORD Vehicle:


1. Select Bluetooth in the system screen.



2. Check Batteries are properly installed.



3. Activate Bluetooth Keyboard by pressing "Fn" and "D" keys simultaneously.

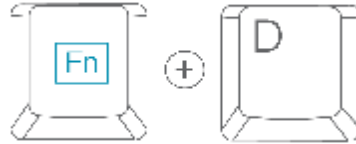

4. Bluetooth Keyboard device discovery and pairing will engage.




5. Enter the system generated pin on the screen followed by pressing the enter key to complete the pairing process.



IMPORTANT NOTES

- To activate or disable imbedded numeric keypad function, hold "Fn" key and press "Num Lock" key.

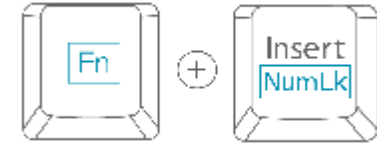

- Do not mix old batteries with new batteries. Using different brands of batteries is not advisable.
- Double-click or tap on the touch pad quickly to select or open a program.
- The wireless keyboard will go into battery saver mode after 10 minutes of inactivity. Simply press any key to "wake" it up.
- When the touchpad is not working smoothly or the cursor is moving automatically, it may be caused from low batteries. Please install new batteries to improve performance.
- The bottom button functions like the left mouse button and the top button as the right mouse button.
- Depress the bottom button and move the cursor to select an object, highlight or move item to a different location.

NOTE: Extended continuous use of this keyboard may exacerbate repetitive motion or stress injuries. As with any equipment that may cause repetitive motion injuries, preventative devices, such as a wrist rest or wrist guard, are recommended, and the wrist should always be kept in a straight position when typing.