

# **Android TV**

## **User Manual**

# 1. Getting Started

## 1.1 Basic Operations

### 1.1.1 Power On/ Off and Sleep

1. Connect the box to the TV with HDMI cable, connect box to the power adaptor, Connect mouse, air mouse or other input devices with USB port
2. After the device and cable connected ,power led turn to blue .
3. After the device and cable disconnected, Power LED turns off
4. Under power on mode, press remote control's power button, device is entering into sleep mode.
5. Under sleep mode, device will be wake when you press remote control's power button,


### 1.1.2 Open applications

Use remote control's arrow keys to choose the wanted program, click OK button to open the selected program

### 1.1.3 Switch in the applications


Click "My Apps" to view recently used programs, click program icon to switch application arbitrarily


### 1.1.4 Close Applications

Click icon  \* to view recently used programs, choose one of them by click and hold, drag it to blank area to close the application

\* This function only operated in the condition of Mouse mode


### 1.1.5 Back To Home Screen

 
Click icon  to return to home screen

Click icon  on remote control to return to home screen


### 1.1.6 Read External Storage Data


#### Read U Disk

Insert U flash disk or removable hard disk into USB port in the status of power on, icon  appears in top left corner of the desktop, open "FileBrowser", the identified USB(A:) will appear under "Local Disk", U disk's operation is available now

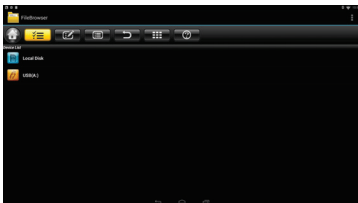

#### Read TF card

 
Insert TF card into the device in the status of power on, when icon  appears in top left corner of the desktop, open "FileBrowser", the identified External Storage Card will appear under "Local Disk", TF card's operation is available now

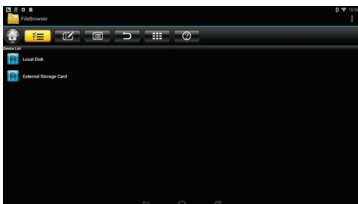

### 1.1.7 WIFI Function

Home Screen → SETTINGS → Network → Select "Wi-Fi" to open WIFI function

 Choose hotspot → Input Password → Connect to the network

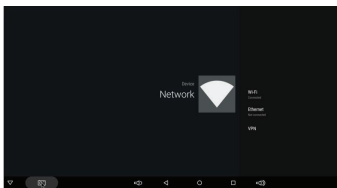

### 1.1.8 Ethernet Function

Home Screen → SETTINGS → Network → Select "Ethernet" to open Ethernet function

 
Insert network cable, network will be connected automatically



### 1.1.9 WLAN Hotspot

Operations on the box :

Home Screen → SETTINGS → Other → More Setting → More... → Portable hotspot → Select "Portable Wi-Fi hotspot"

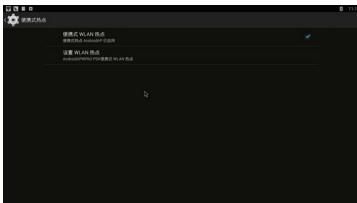

Select "Set up Wi-Fi hotspot" to set up "Network SSID", "Security", "Password" parameters

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.