

## **–GPO PR50 Manual:**

### **Introduction**

Thanks for purchasing the GPO PR50 turntable player from GPO. This retro-themed unit adds a touch of classic style to any room, while still providing amazing audio quality. To get the most from your new turntable player, please read these instructions carefully before use, and keep them in a safe place for future reference.

### **Unpacking**

This package contains:

- 1x GPO PR50 Turntable
- 1x Turntable Needle (fitted)
- 1x Turntable Slip Mat (placed on the turntable)
- 1x DC Power Cable
- 1x RCA Cable
- 1x Manual

Carefully remove all of the contents from the packaging. Make sure you retain and store this manual for future reference.

When choosing a location for the unit, avoid inclines, direct sunlight or sources of heat and moisture.

Keep all of the ventilation holes clear, and do not place any equipment on top of the unit as this can lead to damage.

Only remove the stylus guard from the stylus assembly during use. Leaving the guard in place during storage will protect your stylus from damage.

### **Features**

Your GPO PR50 turntable unit has the following features:

1. 2-speed turntable (33 and 45 RPM)
2. Belt drive and semi-automatic play tone arm
3. Audio Technica needle
4. Built-in 45 RPM adapter
5. Aux-in, RCA Audio out and Headphone out functions
6. Bluetooth functionality
7. USB playing, recording and segmentation recording
8. Pitch adjustment
9. None built-in speakers

## Location of Controls



1. Power Indicator Light
2. Pitch Adjustment
3. Stop for Turntable
4. Start for Turntable
5. Turntable Mode
6. Turntable 33 RPM
7. Turntable 45 RPM
8. Bluetooth Mode
9. Fast Forward and Next
10. Play/Pause
11. USB Mode
12. Record

13. USB Stick Slot
14. Stop for USB Playing/Recording
15. Rewind and Previous
16. Power on/off and Volume
17. Headphone Jack
18. Aux-in Jack
19. RCA Audio out Jack
20. DC Power Jack

## Mode Selection



**Turntable Mode** - play a vinyl record through external speakers



Press to STOP music playing in Turntable mode



Press to START music playing in Turntable mode



Press to select 33 RPM



Press to select 45 RPM



**USB Mode** - play MP3 files stored on an external USB drive



USB Record Mode - record your vinyl to MP3 files on an external USB drive



Press to STOP music playing in USB mode. Press to STOP vinyl recording in Record mode



Press to PLAY or PAUSE the music under USB mode



Press to the NEXT song under USB mode. Hold down the button for three seconds to fast forward under USB mode



Press to the PREVIOUS song under USB mode. Hold down the button for three seconds to rewind under USB mode.



**Bluetooth Mode** - connect the unit to external Bluetooth-enabled speakers

## Unit Operation

Your GPO PR50 turntable player has a number of modes of operation. Each one will allow you to play music from a different source using external speakers.

### *Turntable Mode*

1. Turn on the unit power
2. Select Turntable mode by pressing the turntable mode button
3. Choose the correct speed by pressing the 33/45 RPM button, using the 45RPM adapter if needed, and place the vinyl record onto the turntable
4. Place the tone arm into the correct position to begin playback
5. The turntable will stop automatically when the record has finished
6. Use the volume controls to set the desired sound levels

### *Aux-in Play Mode*

1. Turn on the unit power
2. Connect your chosen device to the unit's Aux-in jack using the cable provided
3. The power indicator light will change from red to blue, and the music in Turntable mode and USB mode will be cut off
4. Press the play/pause button to begin playback
5. Use the volume controls to set the desired sound levels

### *USB Play Mode*

1. Turn on the unit power
2. Select USB mode by pressing the USB mode button
3. Connect your USB device to the unit using the USB slot
4. Press the Play/Pause button to begin playback
5. Use the volume controls to set the desired sound levels

### *Bluetooth Mode*

The GPO PR50's Bluetooth mode allows you to stream your vinyl to any Bluetooth enabled speaker or headphones.

1. Turn on the unit power
2. Select Bluetooth mode by pressing Bluetooth mode button
3. The Bluetooth indicator light will flash rapidly as the unit searches for nearby Bluetooth-enabled devices
4. When paired the blue light will flash shortly with a two second interval
5. If the devices fail to sync, please repeat points 1-4
6. Use the volume controls to set the desired sound levels
7. Hold down the stop button under USB mode for three seconds to turn off Bluetooth mode

*Please note:* When pairing the GPO PR50 to your Bluetooth speaker or headphones, please ensure that the device you wish to stream vinyl to is set to pairing mode. This will allow them to sync.

### *Vinyl Record Mode*

1. Insert a blank USB stick into the slot
2. Place the desired vinyl onto the turntable and begin playing
3. Press the record button on the control panel, the red light will begin to flash. Press the record button once to record the vinyl in one track, press the record button twice to split the tracks
4. Press the stop button to turn off recording

### *RCA Audio Out*

An RCA cable is included with your GPO PR50. You will require this cable to connect to extra speakers.

### *Headphone Out*

Headphones can be connected using the Headphone jack.

### *Pitch Adjustment*

When the Pitch knob is centred on the middle line, the record player plays at normal speed. When the LP speed is slower than expected, you can turn right to adjust the speed. When the LP speed is faster than expected, you can turn left to adjust the speed.

## **Replacing the Stylus**

The unit's stylus will need replacing regularly. To replace the stylus:

[Note – use images from existing manual]

1. Push the arm lock to release the tone arm
2. Remove the cap from the cartridge to expose the needle
3. Carefully remove the cartridge from the socket
4. Completely remove the stylus needle from the cartridge
5. Carefully place a new stylus needle into the cartridge
6. Place the cartridge back into the socket
7. Put the cartridge cap back in place
8. Re-engage the arm lock

The turntable's stylus needs to be replaced every 3-4 months for best performance. To buy a replacement stylus, go to [www.gporetro.com](http://www.gporetro.com) or visit one of our stockists.

## **Tips for Better Performance**

To get the best possible performance from your turntable, please ensure that you:

- Always handle the unit carefully, and take care to lift it from the centre or both edges.

- Do not touch the stylus tip with your finger, and avoid bumping it onto the turntable mat or the edge of a record.
- Regularly clean the stylus tip using a soft brush in a back-to-front motion.
- Never use harsh chemicals or solvents on any part of the turntable system.
- Ensure that the unit is unplugged and the tone arm is secured before moving.

## Product Care

Your GPO PR50 record player will provide you with years of listening pleasure, as long as it is properly cared for. To ensure that the unit remains in working condition, please take care to:

- Keep the unit clean, dry, and away from any potential sources of splashing or dripping, such as vases.
- Avoid areas with high levels of humidity – such as kitchens and bathrooms, and those with extreme temperatures of 35°C or higher.
- Do not let any loose items fall into the unit. If this happens, unplug the unit and call our support team for advice.
- Always unplug the unit before cleaning.
- Take care when cleaning and wiping the unit's plastic parts and finish, and use only a dry dust cloth. The front panel can be cleaned gently with a damp cloth and mild soap.
- Store the unit horizontally. If placed on an incline, the unit's playback may be affected.
- Avoid condensation. If the unit is moved from a cold to a warmer location, please wait 30 minutes before operation.
- Disconnect the power supply after use.

## Product Support

For more advice or assistance, please visit [www.gporetro.com](http://www.gporetro.com), or call our support team on 0845 521 4095.

Please note, for your personal safety you SHOULD NOT attempt to open the unit's casing. Opening the casing voids your warranty, and no user serviceable parts are contained inside

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.