

# Radio Control SunSpot Robot

Forward Drive and Spinning Action!  
Light up Eyes! Real Robot Sounds!

## OPERATING INSTRUCTIONS

Parents are advised to read and understand all operating instructions, precautions and maintenance tips before allowing children to operate robot.

For ages 3 and up

Requires 4-"AA" and

1-"9 volt" batteries

(not included)


**EZR/C Means  
Easy to Operate!**




## RADIO CONTROL DRIVING

- 1- Follow the battery instructions to properly insert batteries.
- 2- Move robot power switch located on the bottom of robot to the "on" position. The lights will flash, electronic sounds will be heard and the wheels will move in reverse spin motion.
- 3- Place the robot on a clean level surface and it will automatically spin in reverse.
- 4- To drive forward simply press and hold controller button.
- 5- To spin in reverse again simply release button.


## BATTERY INSTALLATION

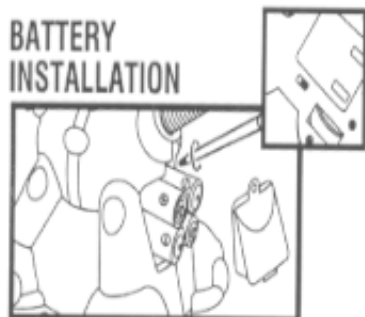

Use a Phillips head screw driver to remove the battery compartment located on the back of the robot. Insert batteries in the correct position as marked in compartment. Replace compartment cover. Move power switch to the "on" position to operate robot. Move switch to the "off" position when not in use.

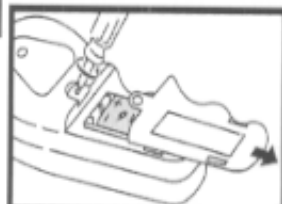

Use a Phillips head screw driver to remove the battery compartment located on the back of the controller. Insert battery in the correct position as marked in compartment. Replace cover.

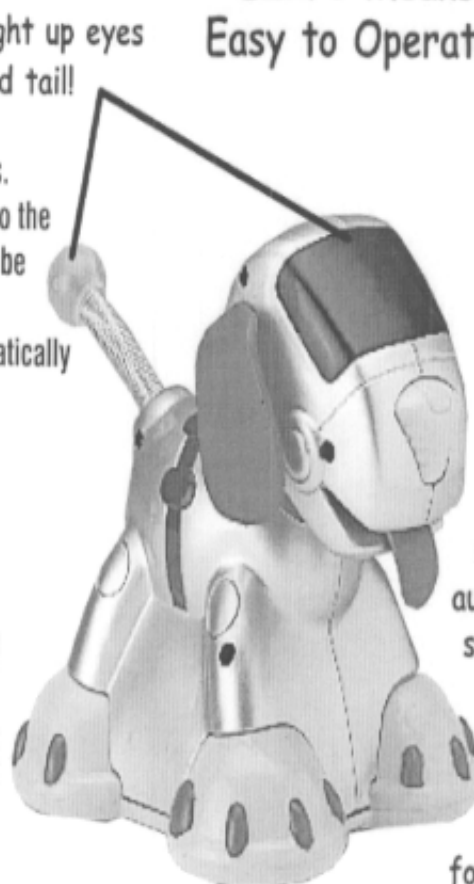

Flexible  
Safety  
Antenna.

Robot will  
automatically  
spin when  
switched on.  
Simply press  
button and  
hold for  
forward drive.




## Helpful hints for maintenance and performance.

- 1- Check batteries frequently.
- 2- Always replace with fresh alkaline batteries.
- 3- Check battery terminals for contact.
- 4- Always turn switch off when not in use.
- 5- Run on smooth level surfaces.

## IMPORTANT!

To extend battery life-  
Always make certain to move the SunSpot Robot power switch to the "off" position when not in use.

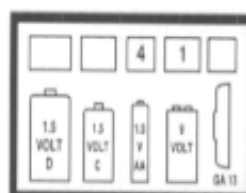

DO NOT MIX OLD AND NEW BATTERIES  
DO NOT MIX ALKALINE, STANDARD  
(CARBON-ZINC) OR RECHARGEABLE  
(NICKEL-CADMIUM)  
BATTERIES.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is needed. Consult the dealer or an experienced radio/TV technician for help.



ITEM NO. 4245-W

All Rights World-Wide Reserved  
SUPERTOYS U.S.A., INC. 200 FIFTH AVE.,  
ROOM 201 NEW YORK, NY 10010 U.S.A.  
TEL: 212-242-6180

CAUTION: NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS  
ITEM CONTAINS GLASS BULB & SMALL COMPONENTS  
MADE IN CHINA