

## OPERATING INSTRUCTIONS

For ages 3 and up

Requires 2 - "AA" and 1 - "9 volt" batteries

(not included)

RealfoControl
ToddkillpSketaBoard

# Forward Drive/Reverse Turning. and REAL WHEELY ACTION!

Parents are advised to read and understand all operating instructions, precautions and maintenance tips before allowing children to operate skateboard.

## RADIO CONTROL DRIVING

1- Follow the battery instructions to properly insert batteries.

- 2- Move skateboard power switch located on the bottom of skateboard to the "on" position. The wheels will move in reverse turn motion.
- Place the skateboard on a clean level surface and it will turn in reverse.
- 4- To drive forward simply press and hold controller button.
- 5- To turn in reverse again simply release button.
- 6- For wheelie action, allow the skateboard to turn in reverse and build momentum. Quickly press and hold button for wheelie.



EZR/C Means Easy to Operate!

Flexible Safety

Antenna.

Skate board will automatically turn in reverse when switched on. Simply press button and hold for wheely action and forward drive.



Use a Phillips head screw driver to remove the battery compartment located on the bottom of the skate board. Insert batteries in the correct position as marked in compartment. Replace compartment cover. Move power switch to the "on" position to operate skate board. Move switch to the "off" position when not in use.



Use a Phillips head screw driver to remove the battery compartment cover located on the back of the controller. Insert battery in the correct position as marked in compartment. Replace cover.



ITEM NO. 4246-W
All Rights World-Wide Reserved
SUPERTOYS U.S.A., INC. 200 FIFTH AVE.,
ROOM 201 NEW YORK, NY 10010 U.S.A.
TEL: 212-242-6180
CAUTION: NOT SUITABLE FOR CHILDREN UNDER
36 MONTHS DUE TO SMALL PARTS

DO NOT MIX OLD AND NEW BATTERIES DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC)

OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

#### Helpful hints for maintenance and performance.

- 1- Check batteries frequently.
- 2- Always replace with fresh alkaline batteries.
- 3- Check battery terminals for contact.
- 4- Always turn switch off when not in use.
- 5- Run on smooth level surfaces.

#### IMPORTANT!

To extend battery life-

Always make certain to move the SkateBoard power switch to the "off" position when not in use.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against barmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is needed. Consult the dealer or an experienced radio/TV technician for help.