

# Radio Control

## Mini Submarine

Dive and explore the depths of your bathtub, fish tank or pool with this RC Mini Submarine.

The Mini Submarine comes with a bright front LED light to pave the way and can probe depths up to 3 feet.

 
Radio Controller uses 1-9V size battery (included)

Quick Charger uses 4 "AA" size batteries (included)

### Responsible Party

ITEM/Art # 4528  
All Rights World-wide Reserved  
SUPERTOYS U.S.A. INC.  
200 FIFTH AVE., ROOM 913 NEW YORK,  
NY 10010  
CAUTION: NOT SUITABLE FOR  
CHILDREN UNDER 36 MONTHS  
DUE TO SMALL PARTS  
Tel: 212-242-6180  
MADE IN CHINA

For Ages 5 and Up

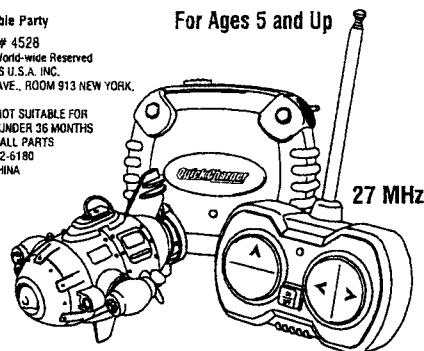

### CAUTION:

- THIS PRODUCT IS DESIGNED FOR BATHTUB, FISH TANK, POOLS AND PCNDS. DO NOT USE THE Submarine in SALT WATER.
- For safety, children playing with this toy should be supervised by an ADULT, as with

any products designed to be used in or around water. To prevent unstable operation, your Submarine should not be operated in water depths that exceeds 3 feet.

- Charge the Submarine ONLY with the supplied quick - charger

- Always store the Submarine in a dry place
- Submarine should not be operated in water depths that exceeds 3 feet.
- Charge the Submarine ONLY with the supplied quick - charger
- Always store the Submarine in a dry place

 
### INSTALLING BATTERIES

Note: Any batteries purchased for use in this toy may pose a hazard to children, please check safety notice supplied with batteries before use.

Warning: Dispose of batteries promptly and properly; do not bury or burn them.

#### Cautions:


- Batteries to be installed by adults only.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Your Submarine needs the batteries listed below for power, for best performance and longest life, we recommend alkaline batteries.
- One 9V battery for the transmitter.
- Four AA batteries for the charger

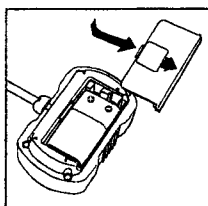

#### In The Transmitter

- Push to open battery compartment door behind the transmitter.
- Put one 9V battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- Replace the battery cover

 Note: When the transmitter's range decreases, replace its battery.

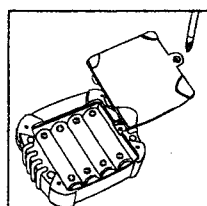

#### In the Charger

- Use a Phillips screwdriver to loosen the screw on the battery compartment cover and lift the cover to remove it.
- Put four 'AA' batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- Replace the battery cover and secure it with the screw.

Note: When the charger is not fully charging the Submarine, replace its batteries.

### CHARGING THE MINI SUBMARINE

- Push sliding button on the side of Charger to extend charging jack
- Remove rubber stopper from the rear of the Submarine.
- Insert charging jack into the rear of the Submarine indicated by "DC 6V"
- LED indicator on charger will turn on.
- The charger will charge the Submarine in less than 1 minute
- Submarine is fully charged when charged LED light is off.

Note: Submarine will run for at least 3 minutes when fully charged

### OPERATING THE MINI SUBMARINE

 
 
 
 
- Rotate tail of Submarine clockwise in the indirection marked "ON". Front LED light will come on.
- Gentle place Submarine on water surface.
- Switch controller on and LED indicator will light up.
- To drive forward, press the forward button.
- To turn right, press the right button.
- To turn left, press the left button.
- To Submarine under water, adjust the two side propellers at an angle. Press forward to Submarine. Release the forward button to float back onto water surface.

### HELPFUL HINTS FOR MAINTENANCE AND PERFORMANCE:

- Check batteries frequently.
- Always replace with fresh alkaline batteries.
- Check battery terminals for contact.
- Always turn switch off when not in use.
- If the Submarine does not perform properly, you may need fresh batteries. The 9-volt lasts longer than the "AA" - so test batteries frequently.

Replace batteries if:

- Submarine speed reduces considerably or if after letting the button go, Submarine continues to move
- Controller - Submarine does not respond properly to controller.

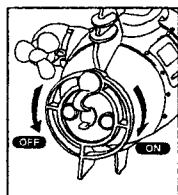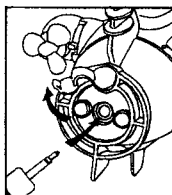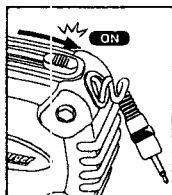

### WARNING:

CHOKING HAZARD-Small parts  
Not for children under 3 years



### WARNING:

Only to be used in water in which the child is within its depth and under supervision.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.