 


STM SUPERTOYS

Radio Control Mini Motorcross

- Forward/Reverse Drive.
- Left/Right Leaning Turns.
- Animated Leg leans left and leans right when driven.
- Comes with headlight.

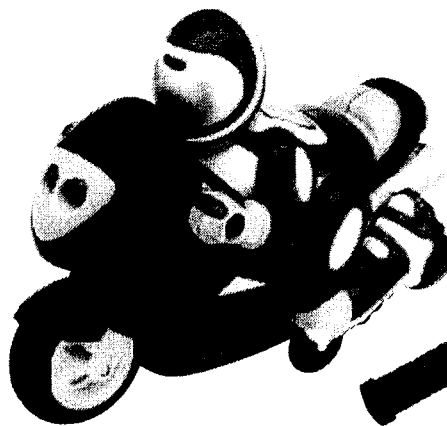

Requires one 9-volt battery and
4 "AA" size batteries
(not included)

27 MHz

INSTRUCTIONS:

Your SUPERTOYS™ Mini Motorcross is designed to provide you with many hours of driving fun.

INSTALLING BATTERIES

Follow these directions:

- One 9-volt battery for the controller.
- Four "AA" size batteries for the Motorcycle.

WARNING: Dispose of batteries promptly and properly. Do not burn or bury them.

CAUTION:

- Use only fresh batteries of the required size and recommended type.
- If you do not plan to use the Motorcycle for a week or more, remove the batteries from the controller and the Motorcycle. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the Motorcycle or controller.

IN THE CONTROLLER

1. Slide ON/OFF on the handlebar to OFF. (Fig 1)
2. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then slide off the cover. (Fig 2)
3. Put the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside. (Fig 3)
4. Replace the cover and secure it with the screw. When the controller's range decreases, replace its battery.

 
IN THE MOTORCYCLE

You need four AA alkaline batteries to power your Motorcycle.


1. Slide ON/OFF on the side of the motorcycle to OFF. (Fig 4)
2. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then slide off the cover. (Fig 5)
3. Place the batteries in the battery compartment as indicated by the polarity symbols (+ and -) marked inside. (Fig 6)
4. Close the battery compartment cover and secure it with the screw.

When the Motorcycle moves slowly or not at all, replace the batteries.


CONTROLLER

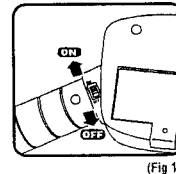

(Fig 1)

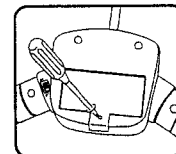 


(Fig 2)

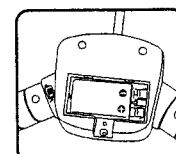 


(Fig 3)

 
MOTORCYCLE

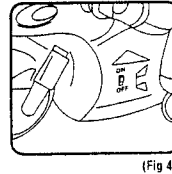

(Fig 4)

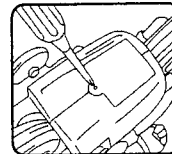 


(Fig 5)

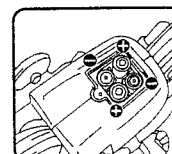 

(Fig 6)

TO DRIVE YOUR MOTORCYCLE

 1. Slide ON/OFF on the controller's handlebar to ON.
2. Slide ON/OFF on the side of the Motorcycle to ON. The Motorcycle's headlight turns on.
3. Use the controller's control buttons to drive and steer the Motorcycle.
4. When you finish driving the Motorcycle, slide ON/OFF on the Motorcycle and controller to OFF.

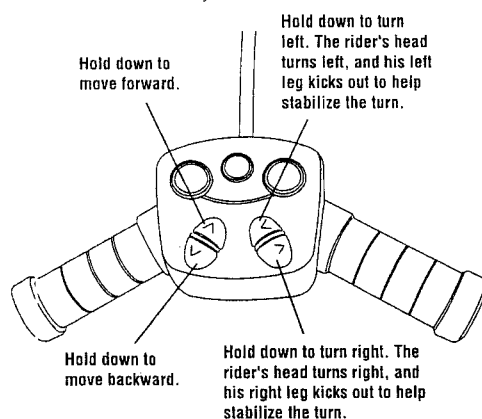

- Release all buttons to stop.

FEATURES

1. Rubber tyres to grip surface.
2. Drivers head turns to see where he is going.
3. Leg kicks out as the bike turns a corner.

HELPFUL HINTS FOR MAINTENANCE AND PERFORMANCE:

1. Check batteries frequently.
2. Check battery terminals for contact.
3. Always turn switch both units off when not in use.
4. Run on smooth level surfaces.

 
MAINTENANCE TIPS

To enjoy your Drive Motorcycle for a long time:

- Keep the Motorcycle dry. If it gets wet, wipe it dry immediately.
- Use and store the Motorcycle only in normal temperature environments.
- Handle the product gently and carefully. Don't drop it.
- Wipe the Motorcycle with a damp cloth occasionally to keep it looking new.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

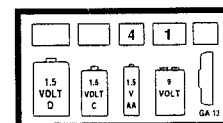

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Responsible Party

ITEM/Art # 4463
All Rights World-wide Reserved
SUPERTOYS U.S.A. INC.
200 FIFTH AVE., ROOM 913 NEW YORK, NY 10010
CAUTION: NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS
ITEM CONTAINS GLASS BULB & SMALL COMPONENTS
Tel. 212-242-6180
MADE IN CHINA

