

INTERTEK TESTING SERVICES

EXHIBIT 7

INSTRUCTION MANUAL

INTERTEK TESTING SERVICES

7.0 Instruction Manual

Attached is a preliminary copy of the Instruction Manual.

FCC information to user can be found in this manual.

This manual will be provided to the end-user with each unit sold/leased in the United States.

INSTRUCTIONS:

Your

 
 
is designed to provide you with many hours of driving fun.

Please follow these directions:

Batteries: One 9-volt, 4 "AA" and 2 "C" batteries required (not included).

Battery Installation for LOCO


Remove screw on battery case door with Philips screw driver and insert 4 "AA" and 2 "C" Batteries as shown (follow +/- inside case and insert). Retighten battery door.

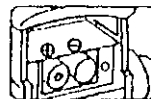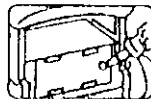

This product contains a temporary operating battery for try me sound. If this battery has expired, use 4 "AA" size batteries (not included) to activate the loco electronic sound function for continuous play.

Battery Installation for CONTROLLER

 Insert screw as shown and insert 9 volt battery. Retighten screw.

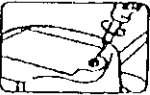

Light Bulb Replacement

To replace light bulb use #222 light bulb as shown (available at most hardware stores). Replace with no. 222 light bulb as diagram shown.



"Helpful Hints"

 
(maintenance and performance tips)

1. Check batteries frequently.
2. Always replace with fresh alkaline batteries.
3. Check battery terminals for contact.
4. To save batteries, always turn switch off when not in operation.
5. Designed to run on most smooth surfaces.
6. If the Loco does not perform properly. You may need fresh batteries. The 9-volt lasts longer than the AA — so test batteries frequently. Replace batteries if:
 - a) Loco speed reduces considerably or if after letting the button go — Loco continues to move.
 - b) Controller — Loco does not respond properly to controller.

Operating Instructions:

1. Turn switch for two speed action — turn left for fast speed and right for slow speed.
2. Press controller — Loco will go forward with electronic loco sound or reverse without sound.
 - to re-direct, let controller go, then press again. (Loco turns in reverse)
 - Loco will now go in new direction forward. (repeat Action).

Repeat (Press Controller) to re-direct Loco.

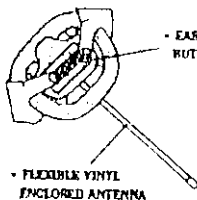


• EASY ONE GRIP
BUTTON CONTROLLER

• FLEXIBLE VINYL
ENCLOSED ANTENNA

• REAL ELECTRONIC
CHOO CHOO SOUND

 • REAL OPERATING
FRONT RAINBOW HEADLIGHT

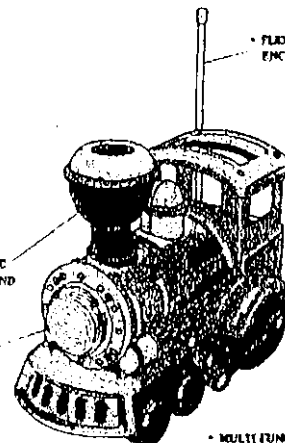


• FLEXIBLE VINYL
ENCLOSED ANTENNA

• MULTI-FUNCTION FORWARD,
REVERSE, TURN ACTION AND STOP

4. Turn Loco off when not in use by turning switch to neutral position for free wheeling push along action.

 when NOT IN USE or
battery life will reduce sharply

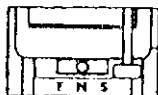

5. Turn switch on for real operating front rainbow headlight.
6. For best results - operate loco on most smooth surfaces. (Do not operate on sand and dirt)
7. The Loco will operate up to 12-15 feet of the controller.

NOTE: DUE TO OCCASIONAL INTERFERENCE, PRODUCT PERFORMANCE MAY VARY.
IF THIS OCCURS, STOP and RESTART.

8. The Loco may not operate properly if:
 - a) the controller is not pressed.
 - b) high metal concentrations in area.
 - c) broadcast, electronic or radio waves may cause radio interference & improper direction.
 - d) you are outside controller range.
 - e) batteries not installed properly

9. Maintenance Tips

- A. NEVER NEVER DROP YOUR CHOO ALONG CHOO CHOO
- B. NEVER PULL ON both antennas.
- C. NEVER disassemble Loco or controller.
- D. Replace batteries if loco sound or headlight is weak or if Loco does not respond to controller.
- E. Always remove batteries if Loco is not in use for long periods.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment