 


STM SUPERTOYS

Radio Control CrashemupPickUp

- Crash into walls and hear crashing sounds.
- Watch pick up crunch up.
- Headlights pop out with pop up windshield to reveal shocking driver.

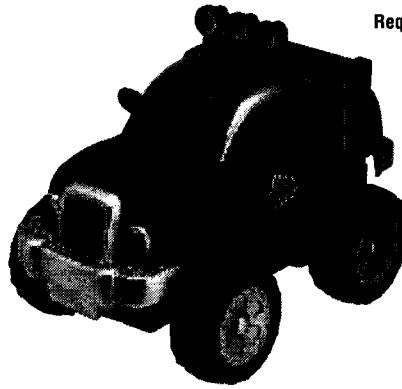

FOR AGES 4 AND UP
Requires one 9-volt battery and
4 "AA" size batteries
(not included)



49 MHz

INSTRUCTIONS:

Your SUPERTOYS™ Crashing Truck is designed to provide you with many hours of driving fun.

INSTALLING BATTERIES

Follow these directions:

- One 9-volt battery for the transmitter.
- Four "AA" size batteries for the Crashing Truck

WARNING: Dispose of batteries promptly and properly. Do not burn or bury them.

CAUTION:

- Use only fresh batteries of the required size and recommended type.
- If you do not plan to use the Crashing Truck for a week or more, remove the batteries from the transmitter and the Crashing Truck. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the Crashing Truck or transmitter.

IN THE TRANSMITTER

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then remove the cover. (Fig 1)
2. Put the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside. (Fig 2)
3. Replace the cover and secure it with the screw.

When the transmitter's range decreases, replace its battery.

 
IN THE CRASHING TRUCK

You need four AA alkaline batteries to power your Crashing Truck.


1. Use a Phillips head screw driver to remove the battery compartment located on the back of the Crashing Truck. (Fig 3)
2. Insert batteries in the correct position as marked in compartment. Replace compartment cover and secure. (Fig 4)
3. Move power switch to the "on" position to operate Crashing Truck. Move switch to the "off" position when not in use. (Fig 5)

When the Crashing Truck moves slowly or not at all, replace the batteries.

CONTROLLER

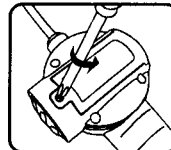


(Fig 1)

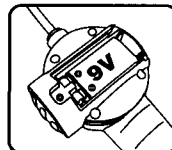 


(Fig 2)

 
CRASHING TRUCK

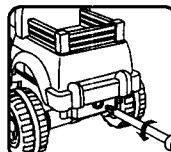

(Fig 3)

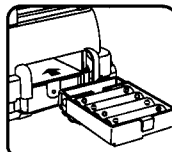 

(Fig 4)

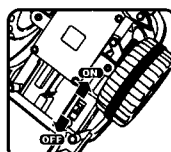 

(Fig 5)

TO DRIVE YOUR CRASHING TRUCK

1. Slide ON/OFF beneath the Crashing Truck to ON.
2. Use the transmitter buttons to drive and steer the Crashing Truck.
3. When you finish driving the Crashing Truck slide ON/OFF on the Crashing Truck to OFF.



FEATURES

1. Body folds up when crashed
2. Electronic crashing sounds.
3. Windshield pops up to reveal scared driver.

HELPFUL HINTS FOR MAINTENANCE AND PERFORMANCE:

1. Check batteries frequently.
2. Check battery terminals for contact.
3. Always turn switch both units off when not in use.
4. Run on smooth level surfaces.

 
 
MAINTENANCE TIPS

To enjoy your Drive Crashing Truck for a long time:

- Keep the Crashing Truck dry. If it gets wet, wipe it dry immediately.
- Use and store the Crashing Truck only in normal temperature environments.
- Handle the product gently and carefully. Don't drop it.
- Wipe the Crashing Truck with a damp cloth occasionally to keep it looking new.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

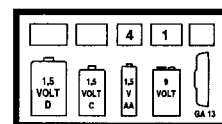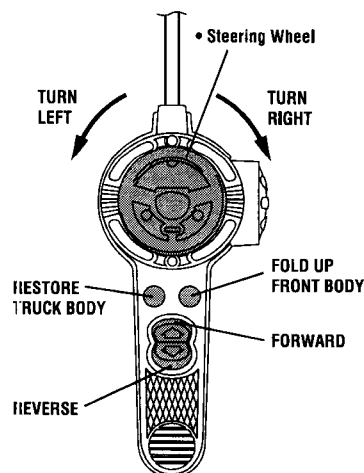

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Responsible Party

ITEM/Art # 6116
All Rights World-wide Reserved
SUPERTOYS U.S.A., INC.
200 FIFTH AVE., ROOM 913 NEW YORK, NY 10010
CAUTION: NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS
DUE TO SMALL PARTS
Tel: 212-242-6180
MADE IN CHINA

