

Radio Control Baby Mantis

INSTRUCTIONS:

INSTALLING BATTERIES

 
Follow these directions:

- One 9-volt battery for the transmitter.
- Four "AA" size batteries for the Baby Mantis

WARNING: Dispose of batteries promptly and properly. Do not burn or bury them.

CAUTION:

- Use only fresh batteries of the required size and recommended type.
- If you do not plan to use the Baby Mantis for a week or more, remove the batteries from the transmitter and the Baby Mantis. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the Baby Mantis or transmitter.

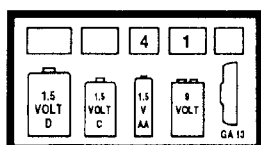

IN THE TRANSMITTER

 
1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then remove the cover.
2. Put the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with the screw.

IN THE BABY MANTIS


You need four AA alkaline batteries to power your Baby Mantis.

1. Use a Phillips head screwdriver to remove the battery compartment located on the back of the Baby Mantis.
2. Insert batteries in the correct position as marked in compartment. Replace compartment cover and secure.
3. Move power switch to the "on" position to operate Baby Mantis. Move switch to the "off" position when not in use.

When the Baby Mantis moves slowly or not at all, replace the batteries.

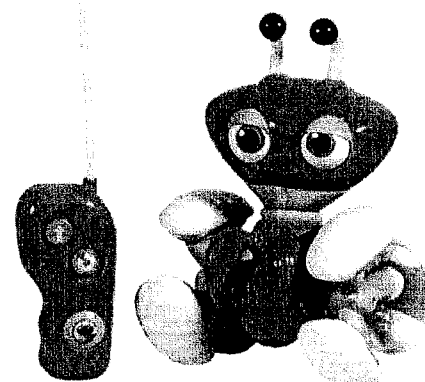


ON/OFF

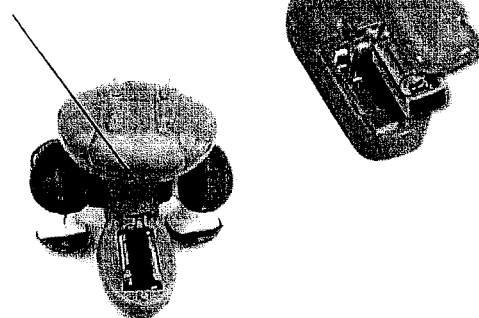 

TO DRIVE YOUR BABY MANTIS

 1. Slide ON/OFF switch beneath the Baby Mantis to ON.
2. Use the transmitter buttons to drive and steer the Baby Mantis.
3. When you finish driving the Baby Mantis slide ON/OFF switch on the Baby Mantis to OFF.

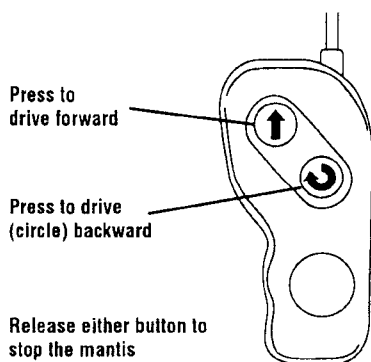

HELPFUL HINTS FOR MAINTENANCE AND PERFORMANCE:

1. Check batteries frequently.
2. Check battery terminals for contact.
3. Always turn switch on both units off when not in use.
4. Run on smooth level surfaces.

MAINTENANCE TIPS

To enjoy your Drive Baby Mantis for a long time:

- Keep the Baby Mantis dry. If it gets wet, wipe it dry immediately.
- Use and store the Baby Mantis only in normal temperature environments.
- Handle the product gently and carefully. Don't drop it.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) with rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

WARNING:
CHOKING HAZARD-Small parts
Not for children under 3 years

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Modifying or tampering with the fish or transmitter's internal components can cause a malfunction and void your FCC authorization to operate them

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.