Right

SUPERTOYS

Radio Controlled Car

Forward

Stop

Reverse

 Slide the ON/OFF switch on the bottom of the car to ON.
 Slide the ON/OFF switch on the

controller to ON. The

Use the control sticks to

steer your car, the left

stick for moving forward/

stick for turning left/right.

backward and the right

When your car drives

forward, the car horn

sounds, the Barry and

and controller to OFF.

Adam figures move side

to side, and the headlights turn on.

ON/OFF switches on both the car

4. When you finish driving, slide the

controller's power

indicator lights.

Driving Your Car



WARNING:


CHOKING HAZARD - Small parts. Not for children under 3 years.

Installing the Car Batteries

- 1. Slide the ON/OFF switch on the bottom of the car to OFF.
- Use a Phillips screwdriver to open the battery compartment cover on the bottom of the car.
- Insert four AA batteries (not included)
 matching the polarity symbols (+ and
 -) marked inside.
- 4. Replace the cover and secure it with the screw.

Installing the Controller Battery

- 1. Use a Phillips screwdriver to open the battery compartment cover.
- Insert one 9V battery (not included)
 matching the polarity symbols (+ and -)
 marked inside.
- 3. Replace the cover and secure it with the screw.

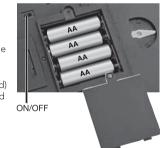



Safety Tips and Care

- Running your car continuously for long periods can generate high heat levels. If this happens, stop driving for a while.
- Do not use your car near devices with transmitters that use the same frequency (27MHz or 49MHz). Check the car to see which frequency you have.
- If someone uses a CB nearby, it might interfere with the control of your car. If this happens, move the car away from the CB.
- If your car continues to run slowly after replacing batteries, check the wheels for lint, thread, hair and dust.

Battery Notes

- Dispose of old batteries promptly and properly.
 Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) with rechargeable (nickel-cadmium) batteries.
- If you do not plan to use your car for a week or more, remove the batteries. Batteries can leak chemicals that may damage electronic parts.

Wheel Alignment

ON/OFF

If your car does not drive in a straight line when you release the right control stick, adjust the wheel alignment switch on the bottom of the car.

Push to the left if the car is pulling to the right

Push to the right if the car is pulling to the left.



Power Indicator

Straight

For maximum control

point straight towards

respond, drives slowly.

replace the car batteries.

or the range reduces.

range, hold your

controller high and

If your car does not

Note:

the car.

Specifications

Frequency	27 / 49 MH:
Control Range	60 fee
Battery Required	Rx: 4 × AA
(Not included)	Tx: 1 × 9\
Age	5-

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

FCC Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

SUPERTOYS U.S.A. INC. 2145 JACQUELINE AVE, BELLMORE, N.Y. 11710 Tel: 212-242-6180 Fax: 1-516-781-6860 MADE IN CHINA