



 
 
RC REMY

DRIVING THE REMY

- 1 Slide ON/OFF to ON.
- 2 Use the transmitter's control button to move your Remy.
- 3 When you finish driving the Remy, slide ON/OFF on the Remy to OFF.


TO DRIVE YOUR Remy

- To drive forward, press button .
- Turn in reverse, press button .
- To see his expression, press the red button.

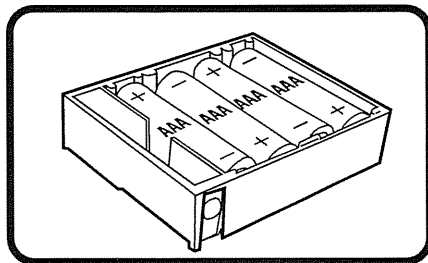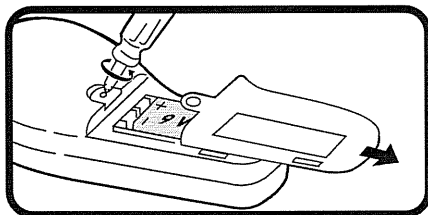

Responsible Party

 Item/Art# 6859
All Rights World-wide Reserved
SUPERTOYS U.S.A. INC.
2145 JACQUELINE AVE, BELLMORE, N.Y. 11710
Tel: 212-242-6180 Fax: 1-516-781-6860
CAUTION: NOT SUITABLE FOR CHILDREN
UNDER 36 MONTHS DUE TO SMALL PARTS
MADE IN CHINA

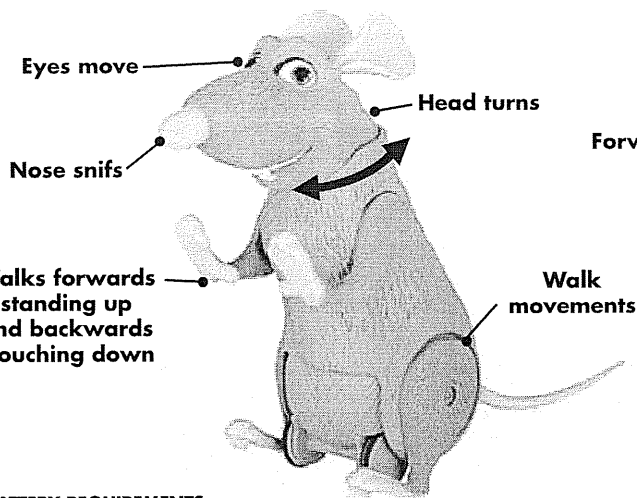

BATTERY REQUIREMENTS

One "9 volt" and 4 "AAA" batteries required (not included)

 
- Remove batteries when not in use or discharged.
- Insert batteries with the polarities in the correct position.
- If unit does not work, check battery position (polarity), replace batteries if necessary.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not recharge non-rechargeable batteries.
- Do not short circuit supply terminals.
- Contact surfaces of battery and supply terminals should be clean prior to battery insertion.

INSTALLING BATTERIES IN THE CONTROLLER

Use a Phillips head screw driver to remove the battery compartment cover located on the back of the controller. Insert 1 "9V." alkaline battery in the correct position as marked in compartment. Replace cover and screw.

INSTALLING BATTERIES IN THE Remy


Before turning on the Remy, remove the try me box wire from the chassis. Use a Phillips head screw driver to remove the battery compartment door located on the bottom of the Remy. Insert batteries in the correct position as marked in compartment. Replace compartment cover. Move power switch to the "on" position to operate Remy. Move switch to the "off" position when not in use.



Requires 4 AAA and 9-volt Batteries (not included)

Helpful hints for maintenance and performance.

 - 1- Check batteries frequently.
- 2- Always replace with fresh alkaline batteries.
- 3- Check battery terminals for contact.
- 4- Always turn switch off when not in use.

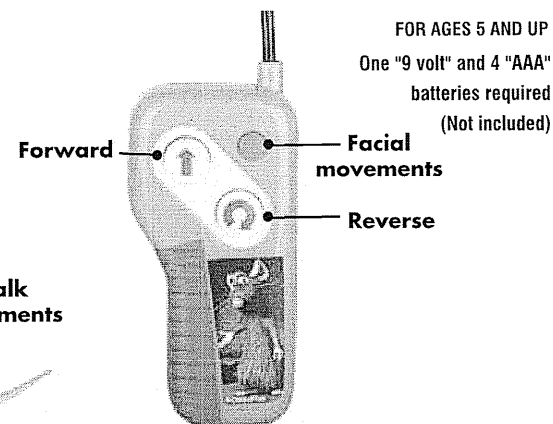

FCC Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.



WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.