

ITEM 6863

Size: 297mm x 210mm (A4 Size)

Color: Black Color Only

Full Function Radio Control Spider

FOR AGES 5 AND UP
One "9 volt" and 4 "AA"
batteries required
(Not included)

INSTALLING BATTERIES

Note: Any batteries purchased for use in this toy may pose a hazard to children, please check safety notice supplied with batteries before use.

Warning: Dispose of batteries promptly and properly; do not bury or burn them.

CAUTIONS:

- Batteries to be installed by adults only.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

IN THE CONTROLLER

Use a Phillips head screw driver to remove the battery compartment cover located on the back of the controller.

Insert one "9V" alkaline battery in the correct position as marked in compartment. Replace cover and screw.

IN THE SPIDER

You need four AA batteries to power your Spider.

1. Slide OFF/ON on the bottom of the Spider to OFF.
2. Remove screw on battery case door with Phillips screw driver and insert 4 AA batteries as shown (follow +/- inside case and insert).
3. Retighten battery door.

RADIO CONTROL DRIVING

1. Slide ON/OFF to ON. The top button on the driver's suit lights.
2. Fully extend the antenna on the transmitter and slide OFF/ON on the transmitter to ON. The indicator on the transmitter lights.
3. Use the transmitter's control levers to move and steer the Spider.
4. When you finish driving the Spider, slide OFF/ON on the Spider and the transmitter to OFF.

SPIDER FUNCTION CONTROLS

1. Turn on the spider and transmitter.
2. Use the transmitter's control levers to steer your spider.
 - To go forward, push both levers forward.
 - To reverse, pull both levers back.
 - To turn left or right, push the opposite lever forward. For example, to turn left, push the right lever forward.
 - To spin left or right, push the opposite lever forward and pull the other lever back.
3. Turn off the spider and transmitter when you finish playing.

FCC Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The eyes light when
you switch on
your Spider

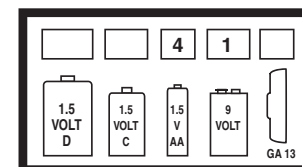

Helpful hints for maintenance and performance.

- 1- Check batteries frequently.
- 2- Always replace with fresh alkaline batteries.
- 3- Check battery terminals for contact.
- 4- Always turn switch off when not in use.
- 5- Run on smooth level surfaces.

Forward



Stop



Reverse



ON/OFF

Mic

Hold down the red button
and speak close to the mic



WARNING:
CHOKING HAZARD-Small parts
Not for children under 3 years



Responsible Party

Item/Art# 6863

All Rights World-wide Reserved
SUPERTOYS U.S.A. INC.
2145 JACQUELINE AVE, BELLMORE, N.Y. 11710
Tel: 212-242-6180 Fax: 1-516-781-6860
CAUTION: NOT SUITABLE FOR CHILDREN
UNDER 36 MONTHS DUE TO SMALL PARTS
MADE IN CHINA