


**RADIO CONTROLLED
FINN MCMISSILE**

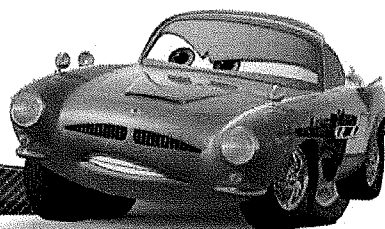

- One "9 volt" and 5 "AA" batteries required (included).
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon - zinc) or rechargeable (nickel - cadmium) batteries.
- Please retain this information for future reference.
- Batteries included are for demonstration purposes only.
- Alkaline batteries are recommended for best performance.
- Remove batteries when not in use or discharged.



WARNING:

**CHOKING HAZARD - Small parts.
Not for children under 3 years.**

- Une pile 9V et 5 piles AA (incluses).
- Ne pas essayer de recharger des piles non rechargeables.
- Enlever les piles rechargeables de l'appareil avant de les charger.
- Charger les piles rechargeables sous la surveillance d'un adulte.
- Ne pas utiliser ensemble des piles de types différents, ni des piles neuves avec des piles usagées.
- Utiliser uniquement des piles identiques ou équivalentes à celles recommandées.
- Insérer les piles en respectant la polarité.
- Enlever les piles de l'appareil si elles sont usées.
- Ne pas court-circuiter les bornes d'alimentation.
- Ne mélangez pas les piles neuves et anciennes. Ne mélangez pas les piles alcalines, standard (Carbone-Zinc), ou rechargeables (Nickel Cadmium).
- Conserver ces informations pour référence ultérieure.
- Les piles livrées avec le produit sont exclusivement à usage de démonstration.
- Il est recommandé d'utiliser des piles alcalines pour obtenir le meilleur résultat possible.
- Retirez les piles quand elles sont déchargées ou quand le jouet n'est pas utilisé.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Item/Art# 7262

© Disney/Pixar
Disney Store
Pasadena, CA 91105
Made in China
DisneyStore.com

Caution: Choking Hazard. May contain small parts.
Not for children under three years of age.

Attention : danger d'étouffement. Peut contenir de
petites pièces. Ne convient pas aux enfants
de moins de trois ans.

