


DIGITT T-2

2000K Pixels

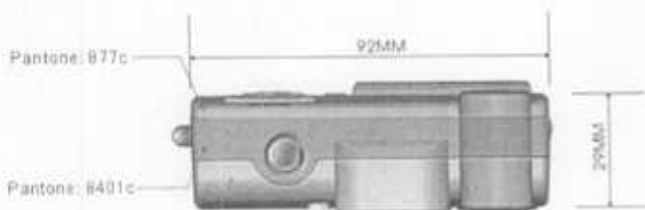

Top View



Side View



Front View



Side View



Back View



bottom View

Pantone: 447c

Digitt T2 Operating Instruction

Operating Modes

There are four operating modes in Digitt T2.

- ◇ Capture mode – Capture of images
- ◇ Playback mode – Playback of images
- ◇ Menu mode – Camera options setup
- ◇ USB mode – Download of images and PC camera

Control Switches

There are one slide switch and nine pushbuttons in Digitt T2 for controlling camera under different operating modes.

- ◇ Slide switch
 - ◆ Locate at upper right corner of back of camera
 - ◆ Select of Capture (slide to left) and Playback (slide to right) modes
- ◇ Pushbuttons
 - ◆ Shutter button
 - Locate at right hand side of top of camera
 - Usage depends on operating modes
 - ◆ Power button
 - Locate at upper right corner of back of camera
 - Turn on and off power of camera
 - ◆ Menu, Enter, Display, Up, Down, Left, Right buttons
 - Locate at lower right corner of back of camera
 - Usage depends on operating modes

Menu		Up	
Enter	Left		Right
Display		Down	

Capture Mode

Enter this mode to take photos and movies, while usage of pushbuttons is redefined as per below table.

Pushbutton	Usage	Description
Shutter	Shutter	Take photos and movies
Menu	Menu	Switch to Menu mode
Enter	Capture	Capture mode: Photos, Self-timer, Movies
Display	Display	TFT LCD control: On with OSD, On without OSD, Off
Up	Tele	Digital zoom in: 1x ~ 4x
Down	Wide	Digital zoom out: 1x ~ 4x
Left	Strobe	Strobe mode: Off, Auto, On, Red eye
Right	Image	Large (1600x1200), Medium (1280x960), Small (800x600)

“Tele”, “Wide”, “Strobe” and “Image” are only available in taking photos, they are disabled when taking movies.

Playback Mode

Enter this mode to view saved photos and movies, while usage of pushbuttons is redefined as per below table.

Pushbutton	Usage	Description
Shutter	Play	Movie playback control: Play, Pause, Rewind
Menu	Menu	Switch to Menu mode
Enter	Unused	No function
Display	Display	Display mode: Full view, Thumbnail view
Up	Zoom	2x Digital zoom
Down	Unused	No function
Left	Previous	Select previous saved photo or movie
Right	Next	Select next saved photo or movie

“Play” is for playback of movies only, while “Zoom” is for viewing of photos.

Menu Mode

There are three different setup menus in the camera – Capture setup, Playback setup and Options setup. Options setup menu is always available no matter you are in Capture mode or Playback mode. But you can only access Capture setup menu and Playback setup menu under Capture mode and Playback mode respectively.

1. Capture Setup Menu

The following setup items are available in Capture setup menu.

Item	Available Selections
Image Size	Large (1600x1200), Medium (1280x960), Small (800x600)
Quality	Fine, Normal, Super Fine
White Balance	Auto, Sunny, Cloudy, Tungsten, Fluorescent
Exposure	-1.5 ~ +1.5
Date Stamp	Off, YY/MM/DD, MM/DD/YY, DD/MM/YY

2. Playback Setup Menu

The following setup items are available in Playback setup menu.

Item	Available Selections / Description
Erase One	Delete current selected photo or movie
Erase All	Delete all saved photos and movies
Protect	Unlock, Lock – For current selected photo or movie only
DPOF	Print 0 ~ Print 9 – For current selected photo only

3. Options Setup Menu

The following setup items are available in Options setup menu.

Item	Available Selections / Description
USB	Photo / Movie, PC Camera – USB connection mode
TV	NTSC, PAL – TV connection mode
Auto Power Off	60 seconds, 120 seconds, Off
Fluorescent	50Hz, 60Hz – Flickering frequency
Memory Format	Formatting of memory card
Beep	On, Off – Buzzer setting
Date & Time	Setting of date and time
Language	English only – Language of menu
Reset	Reset to factory default
Version	Firmware version

USB Mode

The camera enters USB mode whenever it is connected to USB port of powered-on PC or Mac. No driver is needed except the camera is connecting to PC running Windows 98. TFT LCD on the camera will always be turned off in USB mode to save power.

There are two USB modes supported – Mass storage and USB video, which can be selected through options setup menu. Mass storage mode is used for downloading photos and movies to computer, while the camera can be used as PC camera under USB video mode.

Operation Instruction

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class FCC limits.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.