

## Wireless Beanie

Feel the music in your head!



Built-in Microphone



Compatible with iPhone and Android Devices



Li-Ion Battery



Wireless

## User Manual

### Features

- Made from premium knitted material to keep you warm
- Built-in microphone for answering or making phone calls
- Removable Wireless module allowing you to wash the beanie
- Chargeable using universal micro-USB cable

### Specifications

- Chip Version: 2.1+ EDR
- Frequency: 2.402 GHz-2.480 GHz
- Transmission distance: 10m
- Battery: Li-Ion 3.7V/100 mAh
- Talk Time: up to 6 Hours
- Standby Time: up to 60 hours
- Charging Time: 1.5 hours
- Speaker Output Power: 10mw
- Pairing name: Runner

### Charging Headwear

Connect the beanie to a computer or USB charge device using a micro USB cable. The LED light will turn RED while charging and turn OFF when fully charged.

When the battery has less than 20% charge remaining, you will hear a voice prompt "please charge"

If the battery has less than 15% charge remaining, the Headphone will auto power off.

### Turning On/Off

Press the "play/pause" button for approximately three seconds to turn the beanie ON. Once it is ON, a Blue LED light will start flashing, followed by voice prompts: power on.

Press the "play/pause" button for approximately three seconds to turn the beanie OFF. Once it is OFF, the LED light will turn off too, followed by voice prompts: power off.

### Pairing Headwear


**Step 1** Press the 'play/pause' button for approximately 5 seconds till the LED light starts flashing Red and Blue alternately, followed by voice prompts:pairing. Now the "Runner" is discoverable and ready to be paired.

**Step 2** Turn on the Wireless Beanie on your phone/device, search for " Runner "and select connect/pair.

**Step 3** Once the Runner is connected, only the Blue LED light will flash, if it's the first time that it's paired, you will hear the voice prompts: pair success.When you pair it again, you will hear a relatively short voice prompts: paired.

**The pairing process is required only for pairing the Wireless beanie with the device for the first time. Once paired, it will connect to the device automatically the next time.**

### Functions

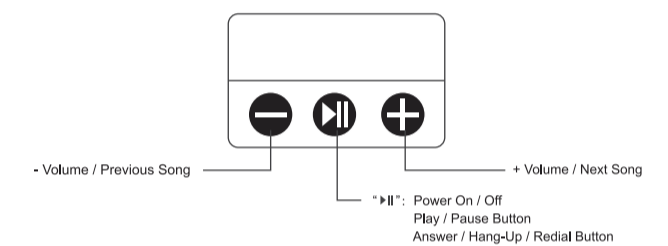

### Calls

When the calls come, the caller's phone number will be pronounced circularly. Press the 'play/pause' button once to answer a call or to hang up. Press the 'play/pause' button twice to redial the last dialed number in your phone's call log.

### Music

Use the 'play/pause' button to play or pause the music.  
Use the '-' button to skip to the previous song.  
Use the '+' button to skip to the next song.

### Volume Control

Press and hold the + button to increase the volume. When the device is at maximum volume, you will get a voice prompt " Max Volume"

Press and hold the - button to decrease the volume. When the device is at minimum volume, you will get a voice prompt " Min Volume"

### Precautions

- Do not expose the wireless beanie to liquids or moisture
- Do not tamper with, drop, disassemble, open or crush the beanie
- Pull out the wireless module before washing the beanie
- Keep the beanie away from fire.
- Do not store the beanie near acidic or alkaline material.

### Washing instruction & removal of electronics

Please note you **MUST** remove the control panel & speakers as shown below before washing your beanie.

#### Removing the control panel & speakers

**Step 1**  
The control panel is held in pocket between a double layer inside the hat. You can gently ease the control panel out of its pocket.

**Step 2**  
You will see a small opening at the rear of the beanie. Continue to ease the control panel towards this opening.

**Step 3**  
Repeat step 1 for the additional speaker located at the opposite side of the beanie.

**Once the electronics are completely removed:  
Machine wash cold, air dry flat, Do NOT tumble dry**



### FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### RF Warning Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Made in China