

QUICKSTART

B140R



Warning

These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.

The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.

Start up

1**A**

A Check if the battery plug is connected to the appliance.

2**A****B**

A Sit on the driver's seat.
Set main switch to "1".
B Check battery status.

Note

The device is equipped with a safety mechanism to prevent total discharge, i.e. when the permissible minimum capacity is reached, then the machine can only be driven and existing lamps can be switched on. In such a case, the battery monitoring symbol on the control console glows red.

- Drive the machine directly to the charging station; avoid any steep gradients in the process.

3**A****B**

A Loosen the star handle screws.
B Push the seat back into the desired position.
Tighten star handle screws.

4**A****B****C**

A Place the detergent bottle into the device.
Close the bottle lid.
Insert the suction hose of the dosaging equipment into the bottle.
B Open the cover of the fresh water reservoir.
C Fill up fresh water (maximum 60 °C) until the lower edge of filling nozzle.
Close the cover of the fresh water reservoir.

D

Model without dosing equipment "Dose"

D Pour in detergent.
Close the cover of the fresh water reservoir.

Operation


1



Starting the machine

A Sit on the seat and set main switch to "1".


2

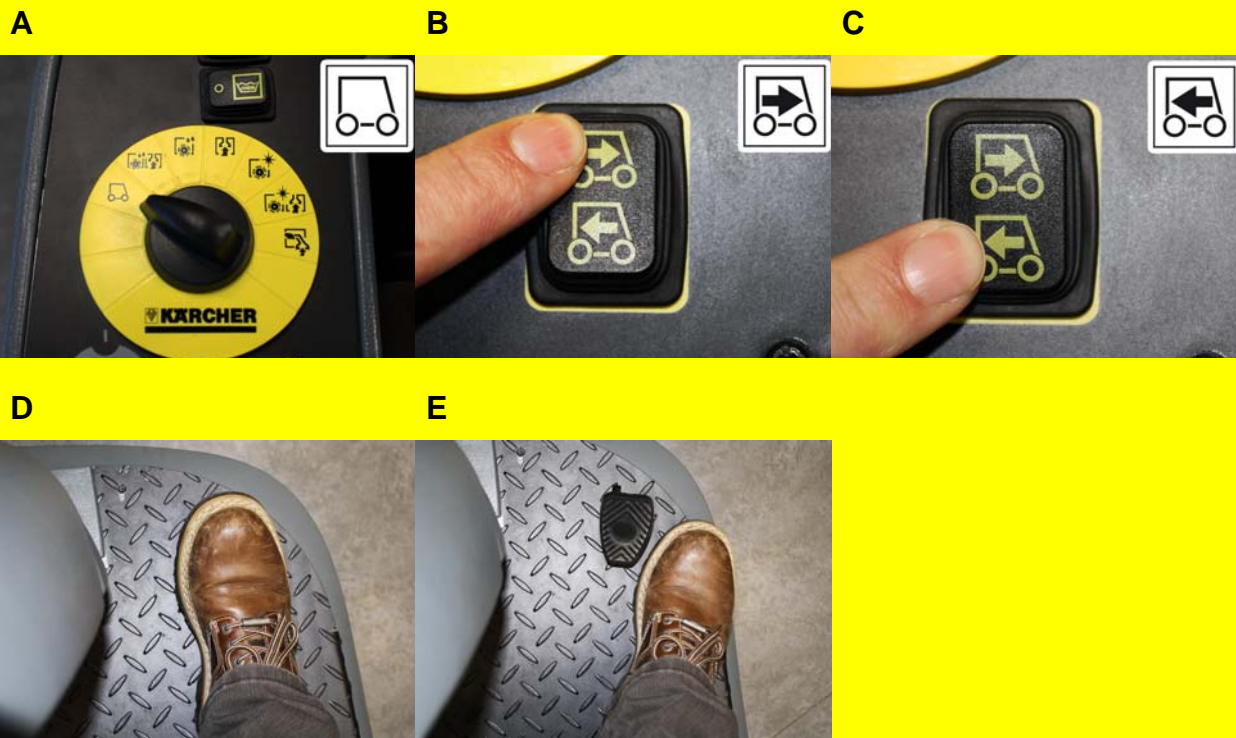

Driving

- A Set programme switch to step 1 (driving).
- B Drive forward
Set the drive direction using the drive direction button at the operator console.
- C Reverse drive
Set the drive direction using the drive direction button at the operator console.
- D Determine the driving speed by pressing the drive pedal.
- E Stop the machine: Release the drive pedal.

3

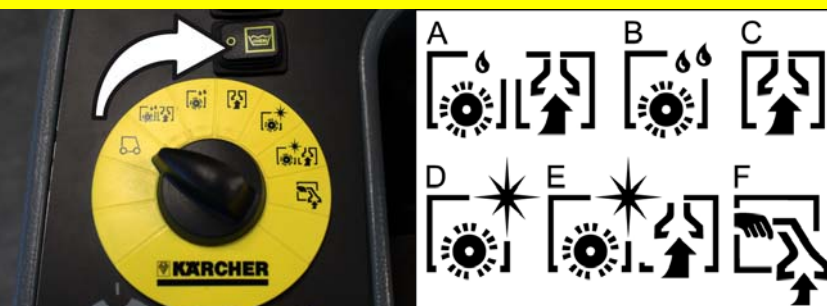

Cleaning Programs

- A **Scrubbing suction**
Wet clean the floor and vacuum up dirt water.
- B **Wet scrubbing**
Wet clean the floor and allow the detergent to react.
- C **Vacuuming**
Vacuum the wastewater.
- D **Polishing**
Polishing the floor without the application of liquid.
- E **Scrub the floor without applying water (vacuum polishing)**
Polish the floor without applying any fluid and suck in the polishing dust.
- F **Manual cleaning**
Apply liquid detergent using the wall-ceiling-floor nozzle (optional) and vacuum it again.

4



Info button

- Use the Info button to select the menu items and do the settings.
- A Turning the button to the right/left scrolls through the menus forward/ backward. The selected setting gets accepted by pressing the button.

Operation

5

A



Switch on the dosing equipment for detergent (optional)

- A Activate the switch for detergent dosing. Detergent gets added automatically.

Finish operation

1

A



Emptying waste container

- A Only BR model: Remove bulk waste container and empty it.

2

A



B



Empty tanks.

⚠ Warning

Please observe the local provisions regarding the wastewater treatment.

- A Take the water discharge hose from the support and lower above a suited collection device.
 B Rinse the dirty water tank with clear water. Take the water discharge hose from the support and lower above a suited collection device. Leave the cover open to let it dry.
 C Remove the suction hose coupling for draining off the fresh water and hold it over a suitable container.
 D Select the cleaning program "manual dry" via the program switch.

C



D



3


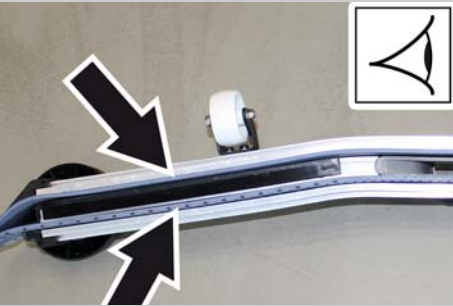
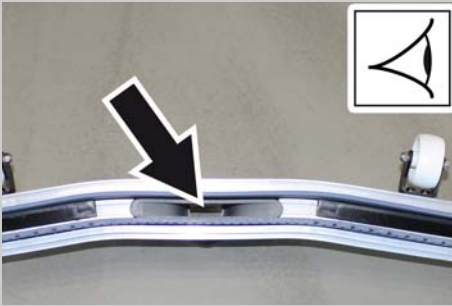
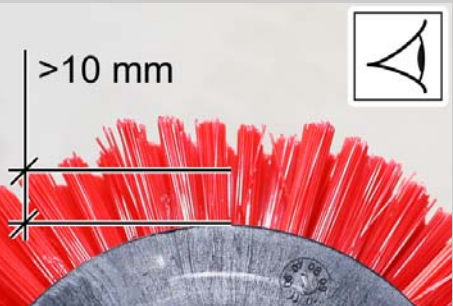
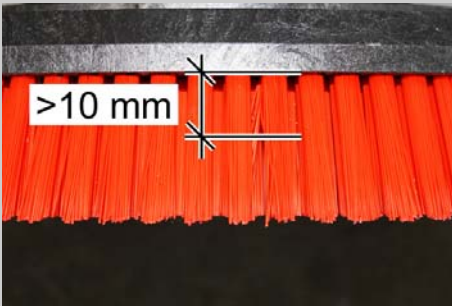
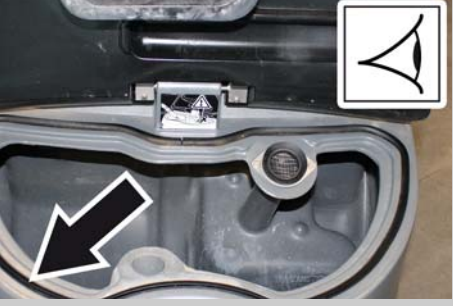
A




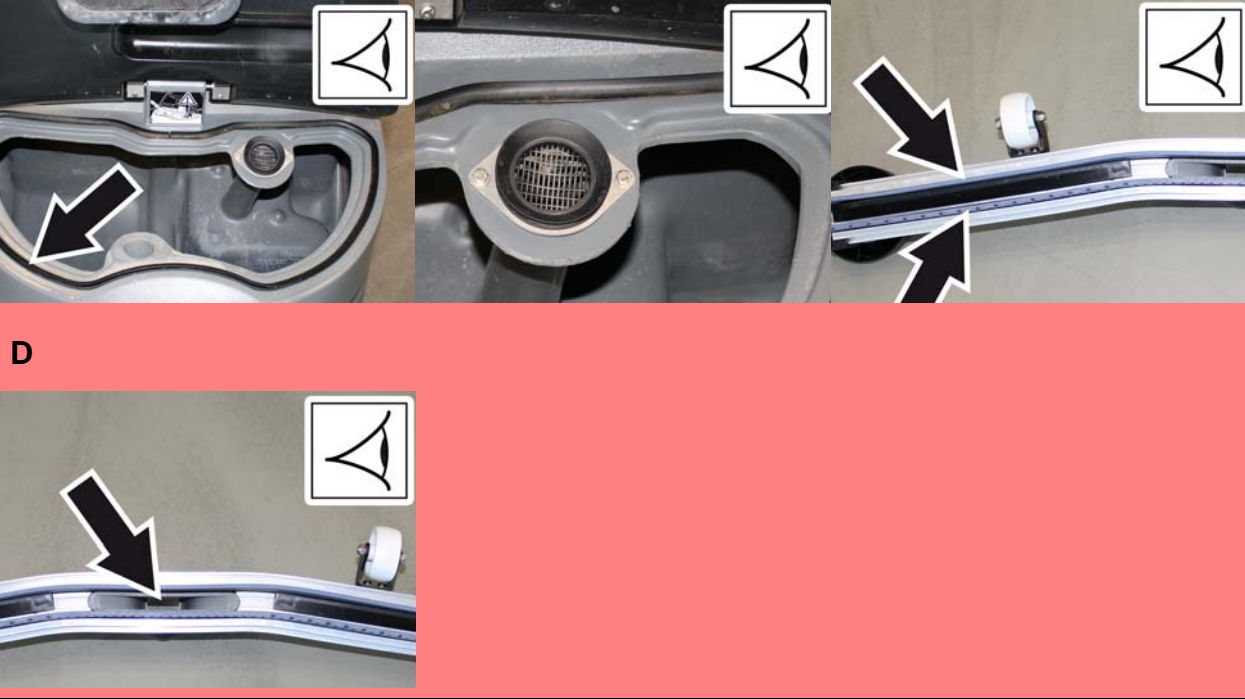
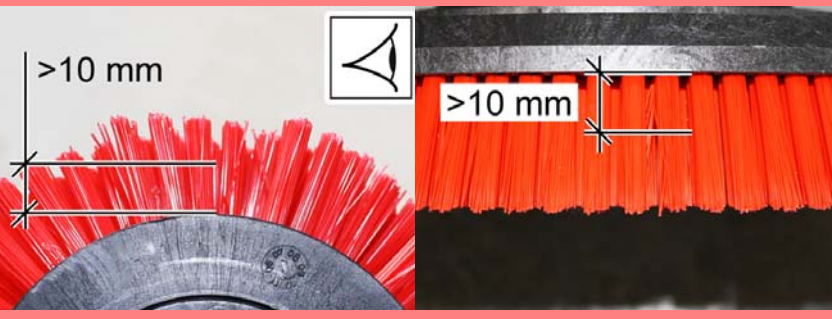


Charging battery

- A Tilt the dirt water tank backwards. Remove battery plug and join it to the charging cable. Connect the charger to the mains and turn it on.

Maintenance and care

			daily	monthly	Kärcher Customer Service
1	<p>A</p> 	<p>A Check the fluff filter, clean if required</p>			
2	<p>A</p>  <p>B</p> 	<p>A Clean the vacuum lips and the wiping lips, check for wear and replace if required. B Clean the suction channel.</p>			
3	<p>A</p>  	<p>A Check brush for wear and tear and clean it. Check the brushes for wear (bristle length at least 10 mm), replace if required.</p>			
4		<p>Only with R cleaning head Remove bulk waste container and empty it.</p>			
5		<p>Clean the outside of the appliance with a damp cloth which has been soaked in mild detergent.</p>			
6	<p>A</p> 	<p>A Clean the seals between dirt water reservoir and cover and check for tightness, replace if required.</p>			
7		<p>Have the prescribed inspection carried out by the customer service.</p>			

Troubleshooting

1		<p>Appliance cannot be started</p> <p>A Insert battery plug. B Safety switch not activated, sit down on the seat. Set main switch to "1" C Check battery; charge it if required.</p>
2		<p>Insufficient vacuum performance</p> <p>A Clean the seals between dirt water reservoir and cover and check for tightness, replace if required. B Check the fluff filter, clean if required C Clean the vacuum lips on the vacuum bar, turn or replace if required. D Check suction hose for blockages; clean if required. Check connection between suction hose and suction bar and suction hose and wastewater tank.</p>
3		<p>Insufficient cleaning result</p> <p>A Check brush for wear and tear and clean it. Check the brushes for wear (bristle length at least 10 mm), replace if required.</p>
4		<p>Insufficient water quantity</p> <p>A Check fresh water level, refill tank if necessary. B Check that the hose coupling for draining the fresh water is connected. C Clean the fresh water filter. Open the ball tap.</p>
5		<p>Brushes do not turn</p> <p>A Reduce contact pressure.</p> <ul style="list-style-type: none"> - Check the brushes for blockage due to foreign particles, remove them if found. - Motor overload, allow to cool down. Set the key switch to "0". Wait approx. 10 minutes before turning the key switch to "1" again.