



MC70 Quick Start Guide


www.symbol.com/mc70

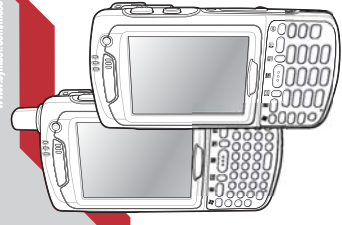

Features

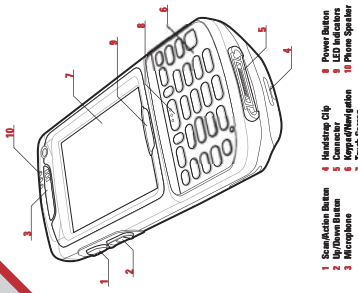


- 1 Scan/Action Button
- 2 Up/Down Buttons
- 3 Microphone
- 4 Handing City
- 5 Connector
- 6 Keypad/Navigation
- 7 Touch Screen
- 8 Power Button
- 9 LED Indicators
- 10 Phone Speaker

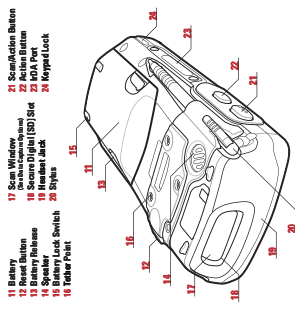

- 11 Battery
- 12 Scan Window
- 13 Scan Window
- 14 Stereo Digital (SD) Slot
- 15 Speaker
- 16 Keypad Lock Switch
- 17 Volume Knob
- 18 Scan/Action Button
- 19 Scan Window
- 20 AKA Port
- 21 Keypad Lock
- 22 AKA Port
- 23 Keypad Lock
- 24 Keypad Lock

Keypads

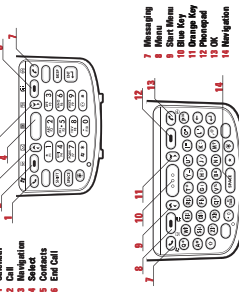


- 1 Calendar
- 2 Navigation
- 3 Select
- 4 Call
- 5 Call Call
- 6 Call Call
- 7 Messaging
- 8 Menu
- 9 Blue Key
- 10 Blue Key
- 11 Orange Key
- 12 Poweroff
- 13 Navigation
- 14 Navigation

Blue Key Search, applications, control cursor movement, and select items.
 - Press the **Blue Key** to search for items.
 - Press the **Blue Key** to lock the mode. Press the **Blue Key** for a short time to unlock.
 - Press the **Blue Key** to lock the mode. Press the **Blue Key** for a short time to unlock.


Orange Key Press this key to activate the mode followed by another key.
 - Press the **Orange Key** to activate the mode followed by another key.
 - Press the **Orange Key** to activate the mode followed by another key.
 - Press the **Orange Key** to activate the mode followed by another key.

Getting Started

1 Insert the Battery

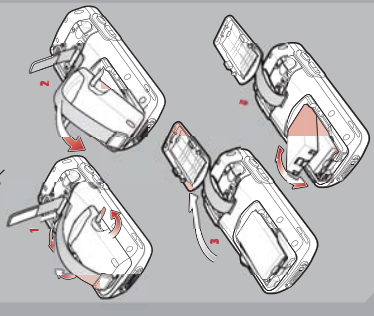


2 Charge the MC70

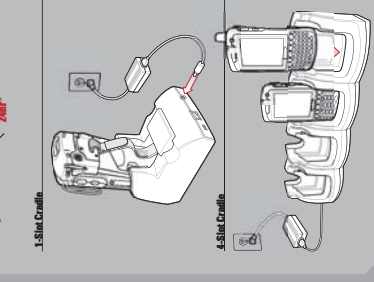

3 Install ActiveSync

Download the latest version of ActiveSync from <http://www.microsoft.com> and follow the instructions to install ActiveSync onto the host computer.

4 Communicate with Host

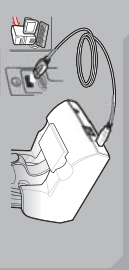

5 Create a Partnership

Follow the on-screen ActiveSync instructions to establish a connection between the MC70 and the host computer.

Support Information

- More information on the MC70: Visit the Symbol site at <http://www.symbol.com/mc70>
- MC70 Companion CD Available at <http://www.symbol.com/mc70>
- Getting up and using the MC70: Available at <http://www.symbol.com/mc70>
- Troubleshooting MC70 - MC70 User's Guide Available at <http://www.symbol.com/mc70>
- Accessories - MC70 Integrator's Guide Available at <http://www.symbol.com/mc70>
- Connecting and synchronizing with the host computer: ActiveSync™ Help on the host computer. To view help, start ActiveSync™, click Help -> ActiveSync™ Help.
- Information on using programs on the MC70: Tap Start -> Help with the specific program.
- Service and Warranty Learning, Patent and Regulatory Guide




7317030 Rev. A 04/2008

MC70 Quick Start Guide

www.symbol.com/mc70


Data Capture Options

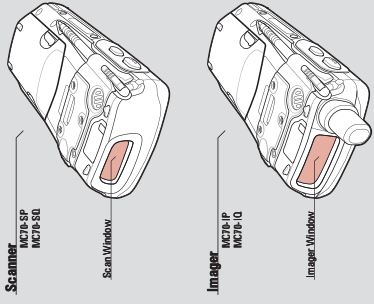


Scanner: MC70-SP, MC70-SD

Imager: MC70-IP, MC70-ID


Optimum Use Positions

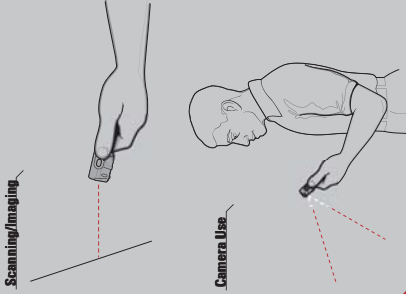

Optimum Scanning and Imaging

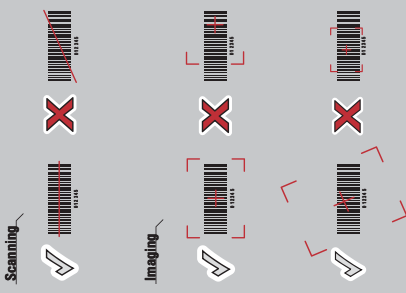


Avoid Extreme Wrist Angles

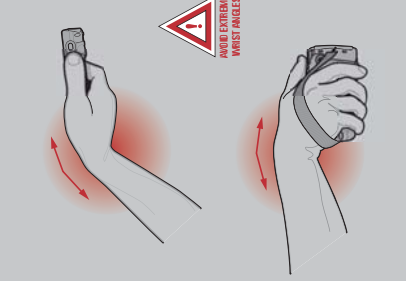


Spare Battery Charging


Standard Capacity Battery - 2 Hours | Standard Capacity Battery - 4 Hours

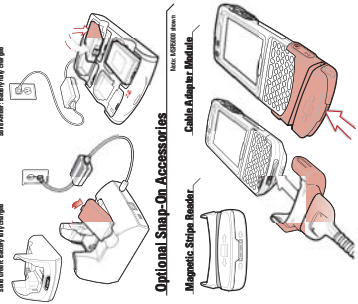


Hand Strap

 


Secure Digital (SD) Card Cover

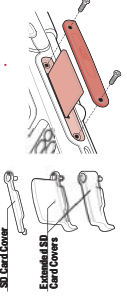

Excluded SD Card Covers

 

Tethered Stylus

 

Optional Snap-On Accessories

