



- 1 Scan/Action Button
- 2 Up/Down Button
- 3 Microphone
- 4 I/O Connector
- 5 Keypad
- 6 Scan/Action Button
- 7 Touch Screen (with screen protector)
- 8 Power Button
- 9 Scan/Decode LED
- 10 Charging LED
- 11 Radio Status LED
- 12 Phone Speaker

Note 1: To reset the MC70, press and hold the power button for five (5) seconds.


- 13 Battery Door
- 14 Door Latch
- 15 Handstrap
- 16 Handstrap Slot
- 17 Headset Jack
- 18 Speaker
- 19 Scan Window (see Data Capture Options)
- 20 Stylus
- 21 Tether Point
- 22 Scan/Action Button
- 23 Action Button
- 24 Back Housing Bracket
- 25 Memory Card Slot

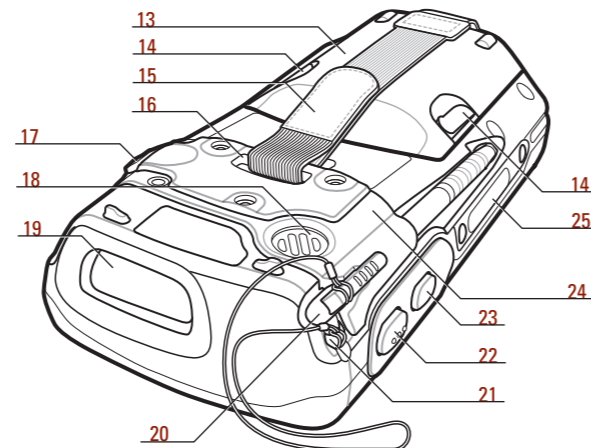

- 1 Call
- 2 Soft Key
- 3 Navigation
- 4 Scan/Action Button
- 5 End Call
- 6 Orange Key
- 7 Backlight
- 8 Blue Key
- 9 OK
- 10 Phonepad
- 11 Menu
- 12 Start Menu

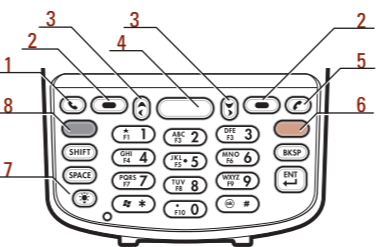

- 1 Call
- 2 Soft Key
- 3 Navigation
- 4 Scan/Action Button
- 5 End Call
- 6 Orange Key
- 7 Backlight
- 8 Blue Key
- 9 OK
- 10 Phonepad
- 11 Menu
- 12 Start Menu

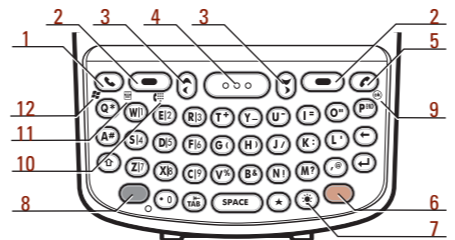


Blue Key

Use this key to launch applications and select items (shown on the keypad in blue).
> Press the key once to activate this mode followed by another key.

Orange Key

Use this key to access the secondary layer of characters and actions.
> Press the key once to lock the keypad in the Alpha state.
> Press the key a second time to return to the normal state.

1 Insert the Battery

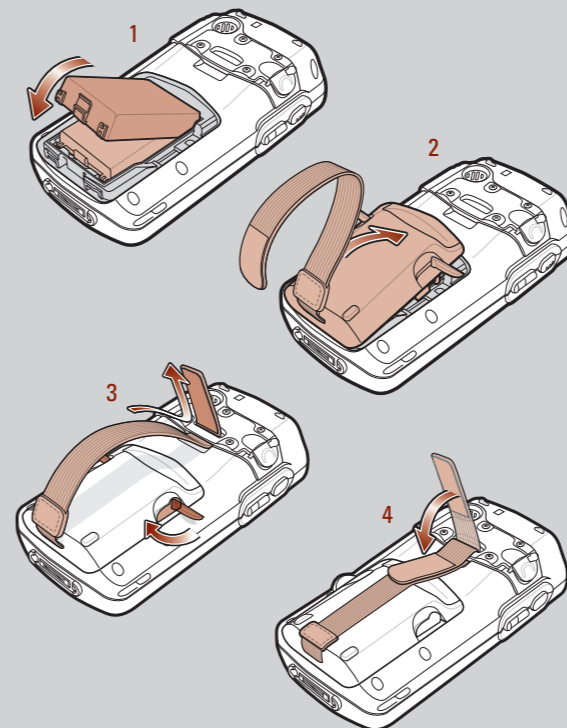


Note 2: Standard Capacity Battery and Door shown.


2 Charge the MC70



1-Slot Cradle

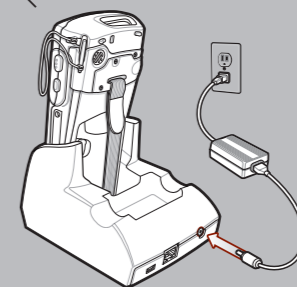

4-Slot Cradle

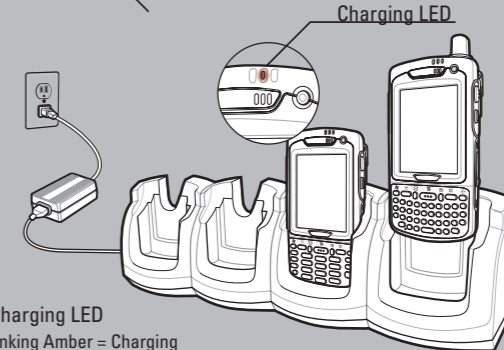

Charging LED


- Blinking Amber = Charging
- Solid Amber = Fully Charged
- Fast Blinking Amber = Charging Error

* It is recommended that this product be charged for 24 hours before the first use to ensure that the internal battery is fully charged.

3 Install ActiveSync®

Download ActiveSync® 4.0 or higher from <http://www.microsoft.com> and follow the instructions to install ActiveSync onto the host computer.

4 Communicate with Host

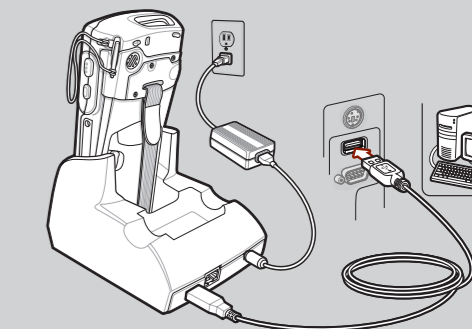

5 Create a Partnership

Follow the on-screen ActiveSync instructions to establish a connection between the MC70 and the host computer.

More information on the MC70

Visit the Symbol Web site at <http://www.symbol.com/mc70>

Setting up and using the MC70

MC70 User Guide

MC70 Integrator Guide

Available at: <http://www.symbol.com/mc70>

Troubleshooting

MC70 – MC70 User Guide

Accessories – MC70 Integrator Guide

Available at: <http://www.symbol.com/mc70>

Connecting and synchronizing with the host computer

ActiveSync® Help on the host computer. To view help, start ActiveSync®, click Help - Microsoft ActiveSync Help.


Information on using programs on the MC70

Tap Start – Help within the specific program.


Service and Warranty

MC70 Regulatory Guide

Memory Card Installation

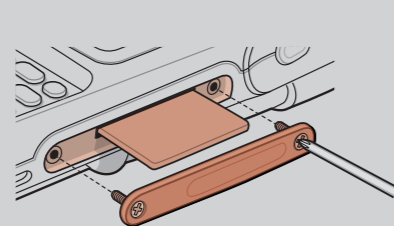

Screen Protector

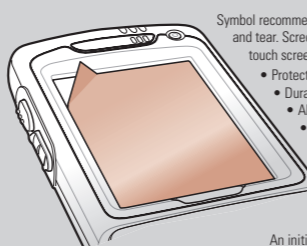

Symbol recommends the use of a screen protector to minimize wear and tear. Screen protectors enhance the usability and durability of touch screen displays. Benefits include:

- Protection from scratches and gouges
- Durable writing and touch surface with tactile feel
- Abrasion and chemical resistance
- Glare reduction
- Keeping the device's screen looking like new
- Quick and easy installation.


Not using a screen protector can affect your warranty coverage.

An initial screen protector is already applied to your MC70. Contact your local account manager or Symbol Technologies, Inc. for more information and purchasing details. Part number: KT-67525-01 Screen Protector 3/pk.

Standard Capacity Battery: ~ 4 hours Extended Capacity Battery: ~ 8 hours


Charge in Cradle

Flashing Amber: Battery charging
Solid Amber: Battery fully charged

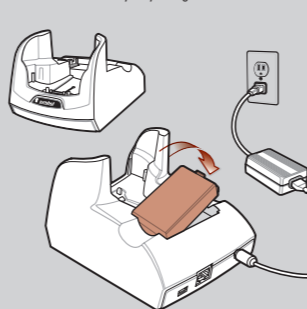


Spare Battery Charger

Flashing Amber: Battery charging
Solid Amber: Battery fully charged

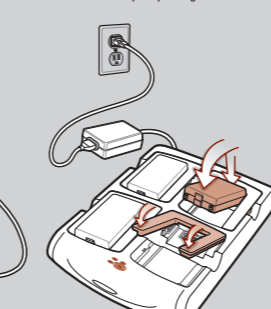


SIM Card Installation (Located Under Battery)

Stylus

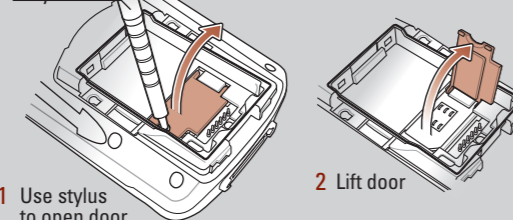


1 Use stylus to open door

2 Lift door

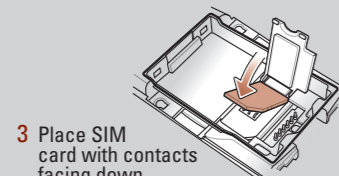


3 Place SIM card with contacts facing down

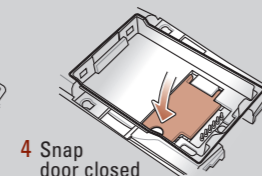


4 Snap door closed

Vehicle Cradle

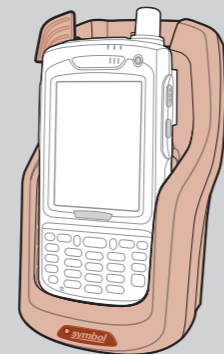

Trigger Handle

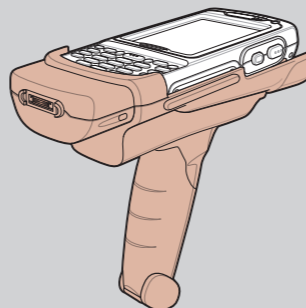


Snap-On Accessories


Magnetic Stripe Reader



Cables

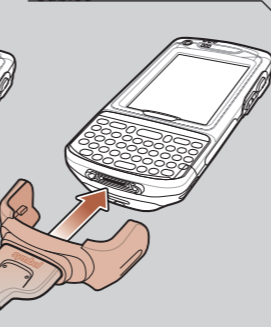


Scanner

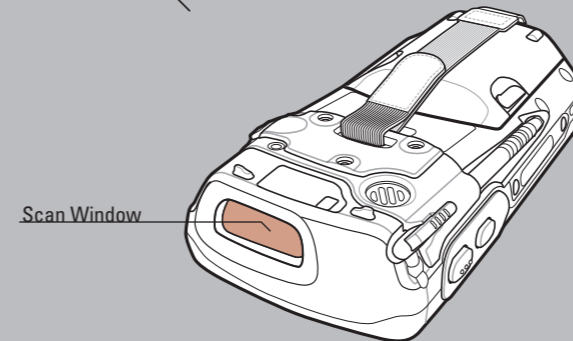


Scan Window

Imager

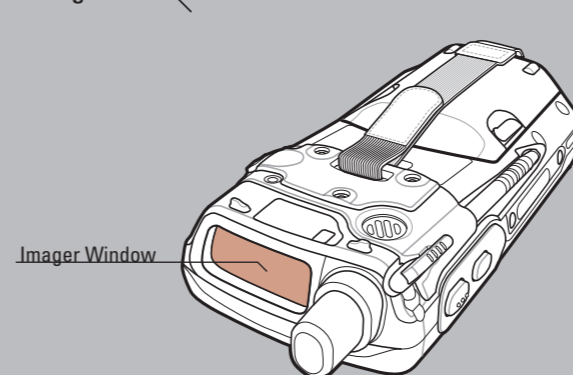

Imager Window


Scanning/Imaging

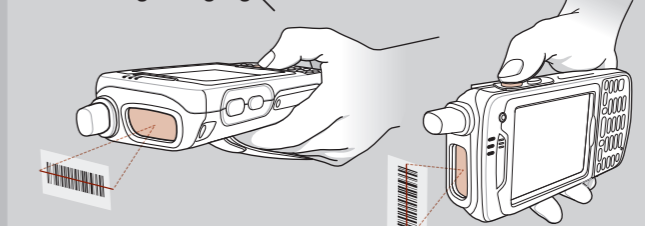


Scanning



Imaging

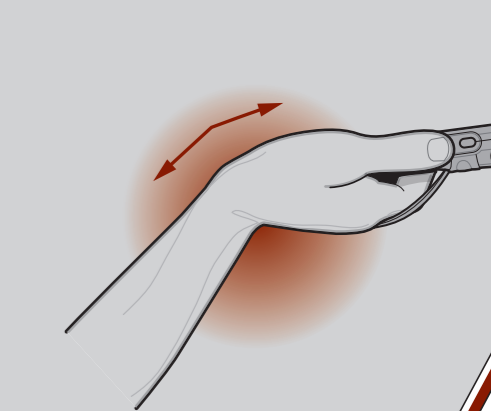

AVOID EXTREME WRIST ANGLES

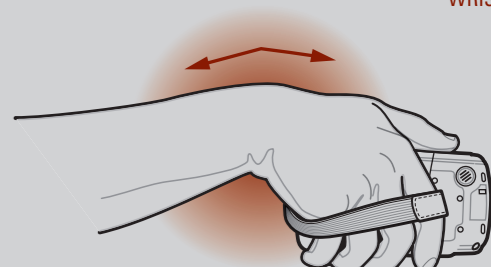

© 2005 Symbol Technologies, Inc.

72-71770-01

Rev A - November 2005