

respective companies and are hereby acknowledged.

Symbol Technologies, Inc.

Patents This product may be covered by one or more U.S. and foreign patents. For patent information

One Symbol Plaza Holtsville, N.Y. 11742-1300 http://www.symbol.com

patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Symbol products might be used. An implied license exists only for equipment, circuits, and subsystems contained in Symbol products. Symbol and the Symbol logo are registered trademarks of Symbol Technologies, Inc. Other

product names mentioned in this manual may be trademarks or registered trademarks of their

application or use of any product, circuit, or application described herein. No license is granted, either expressly or by implication, estoppel, or otherwise under any

desian. Symbol does not assume any product liability arising out of, or in connection with, the

Symbol reserves the right to make changes to any product to improve reliability, function, or

© 2004 SYMBOL TECHNOLOGIES, INC. All rights reserved.

For MC906R-G Mobile Computers

aping əsuələtək Ysing

About This Guide

Adjust the Belt

Warrantv

Wearing the Holster

Service Information.

Reference Guide for the mobile computer.

Attach the Safety Tether

around the waist, on the holster's belt.

Assemble the Belt Holster

Parts

•

•

•

•

•

Introduction

The MC906R-G holster enables the user to carry the MC906R-G RFID mobile computer

9727-629-206

This Quick Reference Guide describes procedures for the following:

Insert the Mobile Computer into the Holster

canada

lechnical or Systems Support. If there is a problem with the equipment, they will contact the

For detailed information about the MC906R-G RFID mobile computer, refer to the Product

It you have a problem running your unit or using your equipment, contact your facility s

Service Information

Symbol Support Center:

United States

applicable Product specification in effect at the time of purchase or in the accompanying software license. specific customer specifications (Lustom Products), remanutactured products, and reconditioned or upgraded products, shall be as provided in the under normal and proper conditions. Warranty provisions and durations on software, integrated installed systems, Product modified or designed to meet three (3) months from the date of shipment, unless otherwise provided by Seller in writing, provided the Product remains unmodified and is operated (A) Warranty Control of the matter "Seller") hardware Products are warranted against defects in workmanship and materials for a period of Warranty

WOIDD THE CONDITIONS SET TOTAL IN SUDSECTION DEDOW. against detects in workmanship and materials for a period of thirty (30) days from the date of stip ment. Spare parts may be new or originate from returned (B) Spare Parts Spare parts (i.e. parts, components, or subassemblies sold by Seller for use in the service and maintenance of Products) are warranted

warranty, the repair services provided are warranted against detects in workmanship and materials on the repaired component of the Product for a period (C) Repair of Symbol-branded hardware For repairs on Symbol-branded hardware Products under this Agreement, including repairs covered by

Seller is not responsible for any damage to or loss of any software programs, data or removable data storage media, or the restoration or reinstallation product returned that Seller determines is not eligible for warranty repair. No charge will be made to Buyer for replacement parts for warranty repairs. Customer shall be responsible for return shipment charges for product returned where Seller determines there is no detect ("No Detect Found"), or for Products is limited to repair or replacement (at Seller's option) on a "return to service depot" basis with prior Seller authorization. Customer is responsible that have been tested as meeting applicable specifications for equivalent new material and Products. The sole obligation of Seller for defective hardware (D) Product Service Products may be serviced or manufactured with parts, components, or subassemblies that originate from returned products and of thirty (30) days from the shipment date of the repared Product, or until the end of the original warranty period, whichever is longer.

DAMAGES FOR CONSUMER PRODUCTS. IN SUCH STATES OR COUNTRIES, FOR SUCH PRODUCTS, SOME EXCLUSIONS OR LIMITATIONS OF THIS NOT ALLOW A LIMITATION ON HOW LONG AN IMPLIED WARANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL WARRAUTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED IN DURATION TO THE LIMITED WARRAUTY PERIOD. SOME STATES OR COUNTRIES DO HURNISHED HEREUNDER INCLUDING ALL IMPLIED WARRANTIES OF MERCHANIARINERILI AND FITNESS FOR A PARTICLUM ACCOUNT INFLIED EXCEPT FOR THE WARRANTY OF TITLE AND THE EXPRESS WARRANTIES STATED ABOVE, SELLER DISCLAIMS ALL WARRANTIES ON PRODUCTS specification; nor shall the above warranty provisions apply to any expendable or consumable items, such as batteries, supplied with the Product. sociaeur, οι τοιces οι exposite beyond normal use within the specified operational and environmental parameters set τοττη in the applicable Product handling and scheduled maintenance instructions supplied by Seller; (iii) which has been subjected to unusual physical or electrical stress, abuse, or improper storage, water or other liquids, battery leakage, use of parts or accessories not approved or supplied by Symbol, or failure to perform operator except by Seller's authorized service personnel; (ii) in which the detects or damage to the Product result from normal wear and tear, misuse, negligence, (F) Warranty Provisions The above warranty provisions shall not apply to any Product (i) which has been repaired, tampered with, altered or modified, spove, the storementioned provisions do not extend the original warranty period of any Product that had had repered by Seller. (E) Original Warranty Period Except for the warranty applying solely to the repaired component arising from a repair service as provided in Section C of any software programs or data other than the software, if any, installed by Seller during manufacture of the Product.

others resulting from the use of any Product or service furnished hereunder shall in no way exceed the purchase price of said Product or the fair market consequential damages arising out of or in connection with the use or performance of the Product or service. Seller's liability for damages to Buyer or The stated express warranties are in lieu of all obligations or liabilities on the part of Seller for damages, including but not limited to, special, indirect or YJ99A TUNI YAMI YI MARRAW UBI IMID


value of said service, except in instances of injury to persons or property.




For the latest version of this guide go to: http://www.symbol.com/manuals.

1-631-738-2400

J-800-653-5350

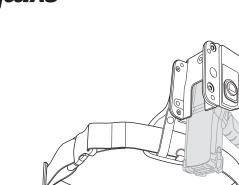


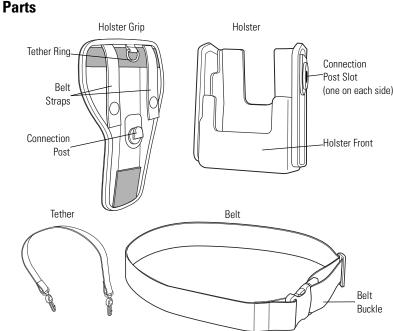

Assemble the Belt Holster


To assemble the belt holster, connect the belt to the holster grip, then connect the holster.

Connect the Belt to the Holster Grip

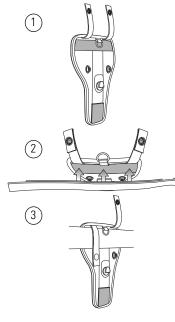

- Unsnap the two belt straps on the holster grip and lift the straps.
- Align the Velcro[®] section of the belt with the Velcro[®] section at the top of holster grip and press together to attach.
- 3. Snap the belt straps into place over the belt.


Connect the Holster to the Holster Grip

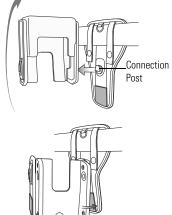

- Align the flat edge of the holster grip connection post with the flat side of the holster connection post slot (front of holster pictured).
- 2. Insert the connection post into the connection post slot.
- 3. Rotate the holster, clockwise, 180°.
- Press together the Velcro[®] sections of the holster grip and holster to attach.
- Note: The mobile computer can be placed in the holster for right or left hand use, depending on the connection of the holster to the holster grip. The diagram above shows a right hand connection. For a left hand connection, reverse the holster so that the back of the holster faces front.

Adjust the Belt

To adjust the belt size, if necessary:

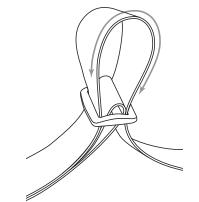


1. Slide one end of the belt strap through the belt clip.

2. Pull the strap loop through, in either direction, to make the belt larger or smaller.

Attach the Safety Tether

Use the safety tether to prevent the mobile computer from dropping to the floor. To attach the tether:

- 1. Clip one end of the tether to the tether ring on the holster grip.
- 2. Clip the other end of the tether to the mobile computer's strap. Ensure the tether is clipped to the mobile computer's strap loop.

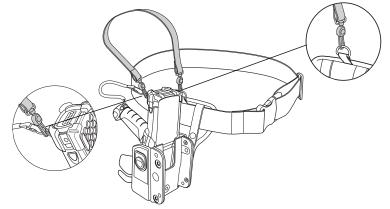

Wearing the Holster



Insert the Mobile Computer into the Holster

Insert the top of the mobile computer into the holster so that the RFID antenna hangs over the front of the holster.

