

WIRELESS THIN-PROFILE KEYBOARD AND MOUSE USER'S MANUAL



www.jascoproducts.com

TABLE OF CONTENTS

1. INTRODUCTION	3
2. PACKAGE CONTENTS	3
3. SYSTEM REQUIREMENTS	3
4. GETTING STARTED.....	3
5. INSTALLATION INSTRUCTIONS	5
6. SPECIAL FUNCTION HOT KEYS.....	6
7. SPECIAL MOUSE FUNCTIONS.....	7
8. TROUBLESHOOTING.....	7
9. TWO YEAR LIMITED WARRANTY	7
10. FCC STATEMENT	8

Thank you for purchasing the GE branded Wireless Thin-Profile Keyboard and Mouse. This User's Manual contains all of the information needed to operate your keyboard.

1. Introduction

Do away with cables and take control of your applications. The Wireless Thin-Profile Keyboard and Mouse are specially designed to optimize your efficiency and provide a complete wireless solution. With 13 special PC keys and 11 special Mac keys, you can execute your favorite commands instantly from your desktop! This wireless solution is designed to maximize your total productivity no matter what operating system you are running!

***For Windows® XP and later or Macs OS 10.5 to 10.7, NO Driver is required; you can just plug and play!**

2. Package Contents

- Wireless Thin-Profile Keyboard
- 2.4 GHz Mini Wireless Mouse
- Nano Receiver (in mouse's battery compartment)
- Two AAA batteries for Keyboard
- Two AA batteries for Mouse
- User's Manual

3. System Requirement

- Pentium 1 GHz or higher processor
- Microsoft® Windows® XP, Vista or 7
- Mac Os 10.5 to 10.7
- 512 MB of RAM recommended
- 4 GB of available hard disk space
- USB Port

4. Getting Started

Please keep this user's manual in a safe place.

1). Connecting receiver to PC & Mac

- **How to remove the Nano Receiver**



Press to remove
top of mouse



Remove the Nano receiver stored in
the center between the batteries.

1. Press the tab (as shown) to remove the top of the mouse.
2. Remove the Nano Receiver from its location in the center of the mouse.
3. Plug the USB receiver into an available USB port of your PC & Mac.

2). Insert the batteries with correct orientation into the battery compartments of both keyboard and mouse respectively.



• **Installing the batteries in the Mouse**

1. Turn off the power switch
2. Press the tab (as shown) to remove the top of the mouse.
3. Remove the battery restraint by pressing the tab (as shown) that is located below the Nano receiver.
4. Insert the batteries as depicted by the battery compartments.
5. Replace the battery restraint and the top of the mouse.
6. Turn on power switch.



Press to remove
top of mouse



Press to remove
battery restraint

+ Positive
- Negative

Note:

1. This keyboard and mouse set does not require changing connection ID as there is no ID button on the Nano receiver.
2. When this wireless set encounters radio interference, either keyboard or mouse will automatically change to a clean channel respectively. Manually changing connection ID is not necessary.
3. This wireless keyboard and mouse set provides factory preset connection channels and enables plug and play function.

5. Installation Instructions

- For Windows® XP Operating Systems and above: No further steps are required. **NO DRIVER REQUIRED**
- For Mac OS 10.5 to 10.7. When the Nano receiver is plugged in, you may be asked to identify the keyboard. Make sure you have batteries in the keyboard and follow the onscreen instructions to begin using your Keyboard. **NO DRIVER REQUIRED**

CAUTION

Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage.

- Do not mix old and new or other battery types.
- Replace all batteries at the same time.
- Replace fully discharged batteries immediately.



 


 
WARNING

Continuous use of any keyboard may cause injury to hands, wrists, arms, neck or back. If you feel ache, numbness or weakness in these areas, consult a qualified health professional.






 
TO REDUCE THE RISK OF SUCH INJURIES FOLLOW THESE PRECAUTIONS:

- Position Yourself: Choose a chair that provides support for your lower back. Adjust your work surface height and your chair to assume a comfortable and natural body posture.
- Go Lightly: Type with a light touch, keeping your hands and fingers relaxed. Avoid resting your palms or your wrists on any type of surface while typing. Don't rest on edges, such as the edge of your desk.
- Take Breaks: Take frequent short breaks. Get up and walk around at least a couple of times every hour. Adjust your chair so the seat does not press in to the back of your knees.

6. Special Function Hot Keys

	PC Mode
	F1 + Fn : Sleep
	Mac Mode
	PC Mode
	F2 + Fn : Home
	Mac Mode
	PC Mode
	F3 + Fn : Refresh
	Mac Mode
	PC Mode
	F4 + Fn : My favorite
	Mac Mode
	PC Mode
	F5 + Fn : Email
	Mac Mode
	PC Mode
	F6 + Fn : Previous track
	Mac Mode
	F6 : NA

The Wireless Thin-Profile Keyboard will come preset with these function keys and shortcuts. For Windows®: Press and Hold the FN key while selecting the desired hot key to access the special Function Hot Keys. For Mac: Simply press and release the desired function key to access the Special Function Hot Key (Pressing and holding the FN key is not necessary)

	PC Mode
	F7 + Fn : Play / Pause
	Mac Mode
	PC Mode
	F8 + Fn : Next track
	Mac Mode Increase
	PC Mode
	F9 + Fn : Stop
	Mac Mode
	PC Mode
	F10 + Fn : Volume up
	Mac Mode
	PC Mode
	F11 + Fn : Mute
	Mac Mode
	PC Mode
	F12 + Fn : Volume down
	Mac Mode
	F12 : Volume up

7. Special Mouse Functions



8. Troubleshooting

- **The Wireless Thin-Profile Keyboard or Mouse stops working**
 - After periods of inactivity, the mouse goes into sleep mode to save batteries. To awake the mouse, simply move it in any direction and it should respond on the screen.
 - You may need to change the batteries. You will need 2 AAA batteries for the Wireless Thin-Profile Keyboard and 2 AA batteries for the 2.4 GHz Mini Wireless Mouse.
 - The Battery indicator light will only light when the batteries are low.

If you still cannot solve the problem, please contact Jasco Products Company at www.jascoproducts.com or at 1-800-654-8483 Option 1 if prompted.

9. Two Year Limited Warranty

TWO YEAR LIMITED WARRANTY: Jasco Products Company warrants this product to be free from manufacturing defects for a period of two years from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other

rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Jasco Products Company

10 E. Memorial Road

Oklahoma City, OK. 73114

10. FCC Statement

Notice: Federal Communications Commission (FCC) requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes of modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.