 


# AXM-2081 User's Guide

 
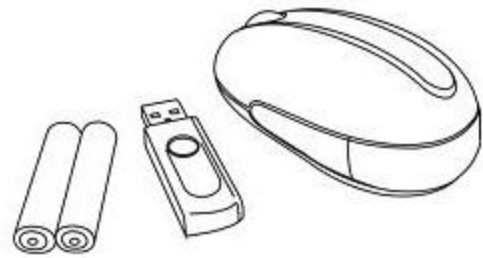 


## 1. Connecting with Computer:

A. Pull the slide switch on the bottom of the mouse outwards and the receiver holder would spring open.

B. Take out the receiver and close the receiver holder.

Tips: When the receiver holder opens, the mouse led would light up. It would only fade off when the receiver is put back into the holder and the holder is closed.

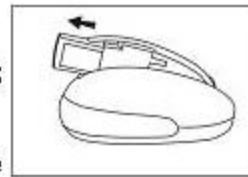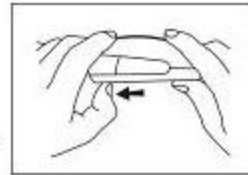



C. Plug the receiver into PC's USB Port. Under Win2000 or higher, wait for OS to detect the RF device. Under Win98 or lower, installation of driver for the device is necessary.




## 2. Inserting Batteries:

  A. Press both sides of the rubberized mouse body with your fingers and the battery door would open.

Tips: Put your fingers as close to the gap between the battery door and the rubberized mouse body as possible. It would be easier to open to open the door.

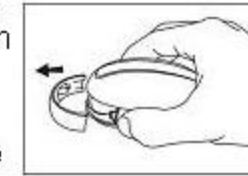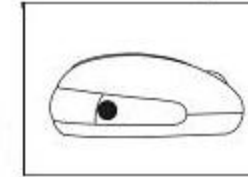

 B. Insert two AAA batteries into the compartment and make sure they are correct in polarity as the signs shown on the compartment.

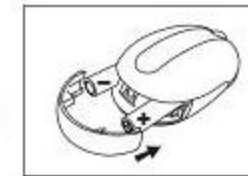


C. Close the battery door.

## 3. To change the wireless connection channel:

 When you wish to change the wireless connection between the mouse and the receiver

A. Press the ID button on the bottom of the mouse. The led on it starts blinking.

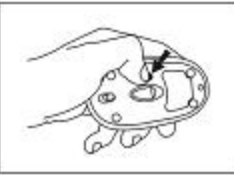

B. Press the ID button on the top of the receiver. If the led on it starts blinking, ID Link is OK.



**Warning!** ID linking should be completed within 10 seconds or connection would be failed.

## 6. Power Saving Mode:

A. Suspend Mode:

Keep mouse stationary for 10 minutes, mouse will be automatically set to Suspend Mode. Press left button to wake up the mouse again.

B. Power Off Mode:

When you wish to set the mouse to power off mode, press mouse ID for 3 seconds.

The Optical Led will flash once and then fade out showing Mouse power is already off. Press ID switch for waking up again.



## 8. Trouble Shooting:

A. When the mouse doesn't respond, check the battery power, and make sure battery power is full.

B. Check the battery pole if the optical Led is still off after inserting new batteries.

C. If battery power is full and led is normal, yet mouse still won't work, do ID Linking once again to set up connection again.

D. Ask for maintenance solution from your retailer and engineer if upper trouble shooting would not work. Personally taking apart mouse structure after trouble happened is prohibited.

This device complies with EMC Directive 89/336/EEC, Low Voltage Directive 76/23/EEC and R&TTE Directive 99/5/EEC. This product has been approved for upper directives and covers the following countries

Austria	Belgium	Cyprus	Czech
Denmark	Estonia	Finland	France
Germany	Greece	Hungary	Ireland
Italy	Latvia	Lithuania	Luxembourg
Malta	Netherlands	Poland	Portugal
Slovenia	Slovakia	Spain	Sweden
Switzerland	U.K.		

## FCC NOTE

This equipment has been tested and comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



FCC ID: HQXAXM-2081

