

**NOVISION<sup>®</sup>**

**TM101W625L User's Guide**



## Customer Service

**NuVision Customer Service**  
**[www.nuvision.com/assistance](http://www.nuvision.com/assistance)**  
**Phone: (800) 890-1288**  
Hours: 8:30am to 5:30pm PST M-F  
**Email: [cs@nuvision.com](mailto:cs@nuvision.com)**

**Register your tablet today at [www.nuvision.com](http://www.nuvision.com)**

## Introduction

Thank you for purchasing the NuVision TM101W625L 2-in-1 Tablet PC. The device runs on Windows 10, the latest and best operating system yet, utilizing tablet touch technology to make your personal computing and media content experience convenient, productive and immersive. It is the perfect companion for accomplishing everyday tasks, enhancing productivity on the go, playing video games, streaming music and movies, taking photos, checking emails, engaging with social media and so much more.

New features in Windows 10 include Cortana, your voice-activated personal assistant who can search the web, find files for you, keep track of your personal calendar, and tell you today's weather. Microsoft Edge is the new replacement browser for Internet Explorer, that is faster and more convenient to use. Other features include Bluetooth connectivity, front & rear cameras, and a memory card slot for up to an additional 64GB of storage. With a sleek design and bright high-definition IPS touch screen that ensures ultra wide viewing angles, you'll enjoy the TM101W625L for many years to come.

The following information will help you get the most out of your tablet. We strongly recommend reading it thoroughly before first use, and go to our website to register your tablet. For more information, check out the Windows FAQ page at [www.nuvision.com](http://www.nuvision.com)

 
## Features & Package Contents

Tablet




Keyboard

AC Adapter  
(Connects to Micro USB)

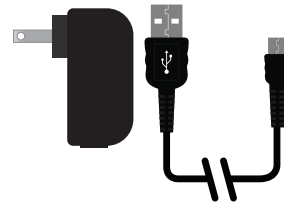

 Transfer Cable  
(Connects to USB 3.0 Port)

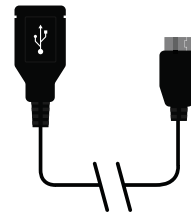


## Important Safety Instructions


This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please read the following instructions and notices before using your tablet.


1. Avoid using in extremely hot, cold, dusty, damp or wet environments.
2. The tablet is not moisture or water-resistant. Avoid using the tablet around sources of water.
3. Avoid dropping or forcibly placing the tablet onto a hard surface. This may damage the screen or internal electronic components and void the warranty.
4. Do not use alcohol, thinner or benzene to clean the surface of the tablet. Use only cleaning products designed for computer tablet devices.
5. Do not use the tablet while walking or driving.
6. Excessive use of earphones at high volume may lead to hearing impairment. Limit earphone usage, and adjust the volume to a moderate level only.
7. The images in this manual may vary slightly from the actual product.
8. Charge the tablet battery under any of the following circumstances:
  - a. Battery level icon indicates low power.
  - b. Tablet powers-off automatically, continuing to do so even after restarting.
  - c. On-screen keys or display does not function properly.
9. Do not suddenly disconnect the tablet when formatting, uploading or downloading data. This may lead to program errors (e.g., system or screen "freezing".)
10. Static discharge is normal and can occur in an electronic device. Although not life threatening, it may corrupt files or damage memory and its content. Do not use accessories that are not from Nuvision.
11. Dismantling the tablet will void the manufacturer's warranty. If you are experiencing problems, review this quick start guide or visit the FAQ online at [www.nuvision.com](http://www.nuvision.com).
12. Tablet functions, hardware, software, and warranty information may be revised by the manufacturer or their respective owners, and subject to change without notice.
13. Warning: This product may contain a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.
 
## Tablet Overview

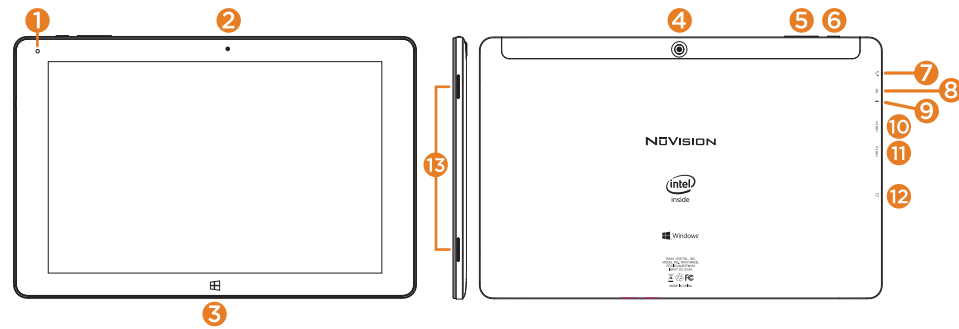



1. **Battery Charging Light** (Blinks while charging)
2. **Camera:** Built in 2.0MP front camera to take HD photos or videos.
3.  **Window:** Press to return to Home/Start Menu.
4. **Camera:** Built in 5.0MP rear camera to take HD photos or videos.
5. **Volume - / Volume +:** Decrease or increase volume level for speakers or headphones
6. **Power / Standby:** Press and hold for 3 seconds to turn on the tablet. Press momentarily to enter Sleep mode. This will turn off display and save battery life. Press and hold to turn off.
7. **Headphone Jack:** Insert headphones for private listening or connect with amplified speakers.
8. **HD:** Connect to an HDMI input on a television, projector, or monitor.
9. **Microphone:** Built in microphone at the left edge of the glass. Use to speak to Cortana or for making personal recordings.
10. **USB 2.0 Port** Connect to power supply to recharge tablet; connect an external flash drive or other compatible device.
11. **USB 3.0 Port**
12. **Micro TF Memory Card Slot:** The built-in storage card reader slot supports an optional TF memory card for additional storage.
13. **Dual Speakers to listen to music, podcasts, etc., without headphones.**
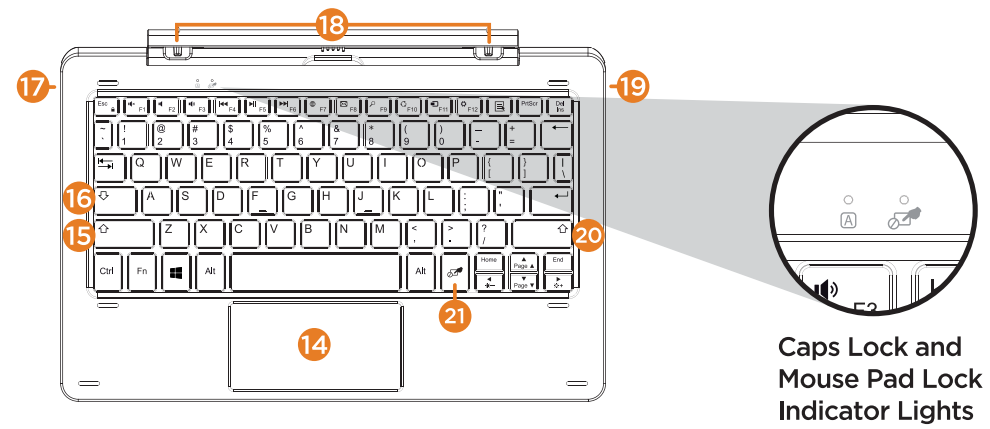 
## Keyboard Overview





14. **Mouse Pad / Keyboard**
15. **Shift Key (Left)**
16. **Caps Lock:** Enable Caps Lock. (The indicator light above the Caps Lock icon  will glow WHITE.)
17. **Full Size USB 2.0 Port (Left side of keyboard)**
18. **Tablet Connector to Keyboard:** Magnetic hinge and tabs to secure the tablet in a laptop configuration.
19. **Full USB 2.0 Port (Right side of keyboard)**
20. **Shift Key (Right)**
21. **Mouse Pad Lock:** Press to temporarily disable the Mouse Pad (indicator light above the Mouse Pad Lock icon  will glow RED). Press again to re-enable.

## Connecting the Tablet and Keyboard

Your tablet features a specially designed magnetic hinge that attaches and secures the tablet and keyboard together, enabling quick and easy docking.



### 1. Dock Port

Connect the 5-pin magnetic dock port to support the keyboard, touchscreen and USB functions.

### 2. Hinge Tabs

 
Align and insert tabs into their respective holds to attach the tablet.

**Undocking the Tablet**

Firmly grasp the tablet and secure the keyboard at the same time, then gently pull out the tablet.



## Charging the Battery

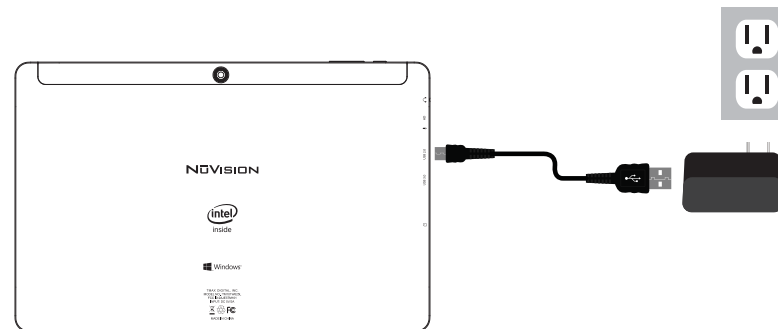

Connect the power adapter to a wall outlet, then to the tablet's micro USB port as shown. It is recommended to fully charge the battery before first use. A battery status indicator appears in the lower right corner of the Task Bar. Tap to view the current battery level, time remaining, brightness control, and settings for power and sleep modes.

It is normal for the tablet to become warmer while charging, streaming video, or multi-tasking. Battery life between charges will vary depending on display brightness, apps that remain open, and most importantly, your internet use. For example, streaming movies from the internet will consume more battery resources than most other applications.




### **Battery Care**

**Operating temperature:** Your device is designed to function between 32°F and 95°F (or 0°C to 35°C). Lithium-ion batteries are sensitive to higher temperatures so keep away from direct sun light. Don't leave in a closed environment susceptible to extreme temperatures (ie: a vehicle on a hot sunny day).

**Recharge anytime:** You can recharge the internal battery at any time. However, we recommend discharging the battery down to 10% or lower at least once each month before recharging.


## Starting your Tablet

### Power On/Off/Standby Mode/Reset

**ON:** Press and hold the side POWER  button on the side for a couple of seconds until the logo screen appears, then release.

**OFF:** Press and hold the side POWER  button on the side of the tablet.

When prompted, slide finger downward to shut down your PC.

**STANDBY MODE:** While the tablet is on, press the side Power  button quickly to turn off the display only. The tablet will enter Sleep mode to minimize battery functions. Press the Power button quickly to wake from Sleep mode.

**NOTE:** To avoid excessive battery drainage, turn the tablet off completely.

### First time Setup Wizard

The first time you turn on the device, a Setup Wizard will guide you through a number of steps before use to choose a language, personalize your tablet, set up WiFi, etc.

### User and Password Setup

To set up passwords, enter the Action Center window by swiping inward from the right edge of display. Open “All Settings” > “Accounts” > Sign In Options to add Passwords.

**NOTE:** Password policy settings may not be available if you’ve added a work email account to the Mail app.

## Lock Screen and Password



The Lock Screen is the starting point when the tablet is turned ON. Swipe your finger upward from the bottom of the display to exit the Lock Screen, then enter your Password.

**NOTE:** To reset your Password, go to [ACCOUNT.LIVE.COM/PASSWORD/RESET](https://ACCOUNT.LIVE.COM/PASSWORD/RESET)

## Start Menu / Tablet Task Bar Overview





The Start Menu screen consists of colorful static and live tiles that provide quick access to built-in apps, mail, entertainment, and the latest in news, weather, and sports. You can reposition tiles to other areas of the screen, resize them, or pin them to the Desktop Task Bar. To do so, press and hold a tile for one second to display available options.

1. **Start Menu:** View colorful static and live tiles. Also view all apps arranged alphabetically.
2. **Search:** Search Windows or the internet.
3. **Task View:** Review open applications
4. **Task Bar:** View of applications pinned on your task bar. Open apps are distinguished by a white line under the icon
5. **Sub-Menu:** To view the secondary menu, hold down on the arrow for one second then release. The menu box will appear.
6. **Battery Level:** View percentage of battery level and the time remaining; adjust power-saving and display settings.
7. **WiFi:** View network settings or activate Airplane mode.
8. **Volume:** Adjust volume level.
9. **Action Center:** View alerts, notifications, and tablet settings.
10. **Keyboard:** While in Desktop Mode, tap or click to use the virtual keyboard.
11. **Date & Time:** Adjust settings.

## Common Finger Gestures

### Swipe from the edges:

Swipe right from the left edge to access open apps.

Swipe left from the right edge to open the Action Center.



**Pinch to Zoom in/out:** Some apps (such as Maps, Browser, and Gallery) allow you to zoom in and out by placing two fingers on the screen at once. Spread fingers apart to zoom in or pinch together to zoom out.




**Swipe downward from the top edge**  
to reduce the size of an active window.  
Move it to one area then open a second app to  
view both windows side by side.



**Swipe finger side to side and up and down**  
to move images.

## Apps Menu



To display the convenient and easy to use Apps menu, tap or click the  All Apps button in the Start Menu. Launch apps, features and programs that are set up alphabetically. Slide your finger or scroll up and down to view all apps on your tablet.

### **Add / Remove / Resize Apps**

 
You can reconfigure the tiles within the Start Menu quite easily. To create, or pin a tile from an app located in the App Menu, select and drag your selection to place the tile in a preferred location. To change the tile size or to remove (unpin) it, tap or click and hold for one second to display available options.

## Action Center



The Action Center is the central location to view alerts, notifications, user settings, and more. Swipe your finger inward from the right edge of the screen to bring up the Action Center. Swipe your finger back towards the edge to hide the Action Center.

## Cortana, your Voice-Activated Personal Assistant

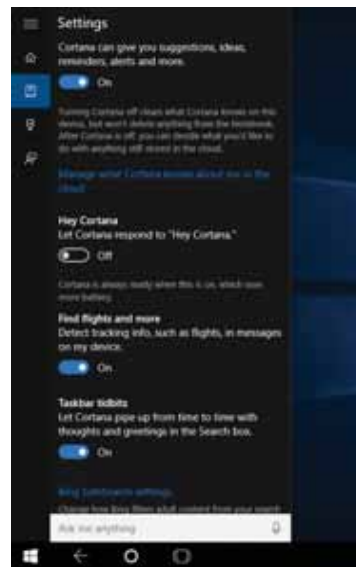

Speak to Cortana and request the weather forecast, set personal reminders, send an email, find specific files, search the web, and more.

Summon Cortana by speaking clearly and slowly into the microphone. Start by saying the command, "Hey Cortana!"

To manage and personalize Cortana, go to the Cortana app, press "Settings" and follow the prompts.

Manage settings and what Cortana should know about you. Tap or click the Cortana app then click the Settings icon in the upper left corner to display its menu.

## Connect to HDMI / Movies & TV / Additional Storage



### Connect to HDTV or Projector

Connect your tablet to an HD television or projector with an optional mini-HDMI to full-size HDMI cable. Once connected, view on the external display immediately.

### Movies & TV

Rent or purchase the latest releases in Movies & TV shows, or games from the Windows Store. Easily download to your device. In addition, you can search for titles from your video collection.

### Additional Storage with a TF Memory Card Slot

At some point you may require additional space on your Tablet for additional music, video, photo or business files. Insert an optional TF style memory card with a storage capacity up to 64GB.

## Creating a Microsoft Account / Adding an Email Account



### Create a Microsoft account

It is recommended to set up or use an existing Microsoft account for better enjoyment of Microsoft services such as Xbox, Hotmail, Outlook.com, OneDrive, etc. Many apps and services rely on the account to sync content and settings across devices. If you have more than one Microsoft account already, you'll need to choose one.

### Add Other Email Accounts

To add your email accounts:

1. Open the Start Menu and select Mail.
2. Open and Add account.
3. Choose the type of account you want to add, and then follow the on-screen instructions.




## Connecting to the Internet


The tablet utilizes WiFi 802.11b/g/n networks to connect with the internet. In order to connect, you will need the following:



### Connect to a WiFi Network

 
Open the Action Center (swipe your finger inward from the right edge of the screen), then tap or click All Settings > Network & Internet. Or from the Task Bar tap the wireless network icon  then connect to the appropriate network. Tap (or click) Connect. When prompted enter the password (if applicable).

### Disconnect from a WiFi Network

Open the Action Center. Tap the wireless network icon  that is connected, then tap (or click) Disconnect.

## Connecting Micro USB and Bluetooth Devices

### Connecting Micro USB

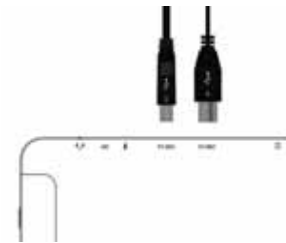

Connect an external device to your tablet by attaching the included transfer cable. You can add an external mouse, keyboard or flash drive.

**NOTE:** The first time you plug in a USB accessory, Windows will install the necessary software for you (if applicable).

### Add a Bluetooth device

Add or “pair” a Bluetooth compatible device with your Tablet as follows:

1. Power on the compatible Bluetooth device and make it discoverable.
2. From the Action Center open All Settings > Devices > Bluetooth. Turn on Bluetooth then tap or click on Connected Devices. Tap or click to add a new device. Once the Bluetooth compatible device is found, select it.
3. Make sure Bluetooth is powered on, then wait while Windows searches for the device.

 
## Using the Cameras

### Front and Rear Cameras



Your tablet features two cameras. With the front-facing 2MP camera you can video chat and take “selfies”. Use the 5MP rear camera to take photos or record videos.

Open the Camera app and tap on the Camera or Video shutter buttons. To record video, tap the Video shutter button once to start a recording; press again to stop.

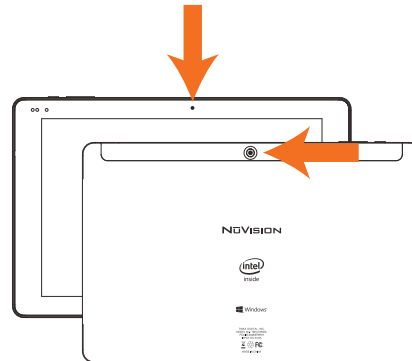

The Camera Settings menu provides options for viewing and editing both photos and videos.

Add folders that contain all of your photos and videos for convenient viewing. In addition, albums can be created automatically, whereby Windows will select your best shots and create an album.

## Using the Cameras (Cont.)



## Camera Function Guide

1. **Change Camera:** Tap to switch between front and rear cameras.
2. **Camera Adjustments Menu:** Adjust Brightness, White Balance, ISO and Shutter.
3. **Camera Settings:** Activate timer, or select photo and video recording settings.
4. **Camera & Video Shutter:** Take a snap shot or start a video recording. Tap the Video shutter again to stop recording.
5. **View photos on the tablet:** View and edit photos on the tablet.
6. **Share your photos**
7. **View a slide show**
8. **Edit to fix and make adjustments**
9. **Rotate image**
10. **Delete photo**
11. **Options Menu**

Make automatic corrections through the Photos app. Experiment with lighting and color adjustments, effects, cropping and rotation.

## Limited Warranty

### One Year Limited Warranty

TMAX Digital Inc. warrants this product against defects in material or workmanship for a period of one (1) year from the date of which starts with the date of original purchase ("Limited Warranty period"), at its own option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. TMAX Digital Inc. will incur no liability whatsoever to provide packaging for warranty items. Upon receipt of the warranty item, should it be determined that the packaging is insufficient, or the unit failed by a non-manufacture defect TMAX Digital Inc may at its discretion, void the warranty. The consumer is responsible for the transportation cost to TMAX Digital Inc. A nominal handling fee does apply. You must receive a return authorization number before sending a unit in for service.

### To Obtain Warranty Service

Should it be necessary to contact Customer Support, call (800) 890-1288 or email us at [cs@nuvision.com](mailto:cs@nuvision.com). You will be instructed on how your claim will be processed. Have pertinent information available including proof of purchase and an understanding of the issue.

You must retain the original bill of sale to provide proof of purchase. Call or email a customer support representative to assess the problem. No service or shipment will be accepted unless RMA # is provided to you and attached or printed to the shipping carton along with a copy of the bill of sale.

### Customer Data

Customer shall be solely responsible for maintaining backup data necessary to replace Customer data lost or damaged from any cause.

This warranty is effective only if the product was purchased through an Authorized Retail Seller and the unit is operated in North America. You are responsible for all tariffs and taxes imposed to ship or receive warranty or replacement units to and from the U.S. Warranty extends only to defects in materials or workmanship and does not extend to cracked screens, damaged USB or DC ports or any other products that have been lost, discarded or damaged by misuse, accident, neglect, liquid damage, acts of God, such

## Limited Warranty

as lightning, improper installation, improper maintenance or modification. The Limited Warranty ALSO DOES NOT COVER damages of having been previously altered, modified, repaired or serviced by anyone other than the service facilities authorized by TMAX Digital Inc. to render such services. Warranty does not cover cosmetic damage or lost accessories. We may charge the customer for any service call made for anything not covered by the limited warranty. If you decline our service and wish to have the unit returned, you would need to either provide us a return label or pay TMAX for return charges. If there is no responses from you after 45 days TMAX Digital will assume is abandoned and recycle the unit on your behalf.

This warranty gives you specific rights and these rights may vary from state to state. Some states do not allow limitation on how long the warranty lasts or exclusions or limitation of incidental or consequential damages, so the above may not apply to you.

### **Disclaimer of Warranty**

EXCEPT FOR THE FOREGOING WARRANTIES, TMAX DIGITAL INC. HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARDS TO ANY CLAIMS OF INFRINGEMENT.

### **LIMITATION OF LIABILITY**

THE LIABILITY OF TMAX DIGITAL INC. , IF ANY, PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL TMAX DIGITAL INC. BE LIABLE TO PURCHASE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO , COMPENSATION, REIMBURSEMENT OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR FOR ANY OTHER REASON WHATSOEVER.

## Compliance

### Caution:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:**

**(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



