

Quick Start Guide

Thank you for buying the ALCATEL 2067X. We hope you will enjoy your high-quality mobile communication experience.

For more information about how to use the cellphone, please go to www.alcatelone-touch.com to download the complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade, etc.

Table of contents

- 1 Your mobile..... 3
- 2 Getting started..... 8
- 3 Making a call..... 9
- 4 Messaging..... 10
- 5 Contacts..... 12
- 6 Call log..... 12
- 7 Media..... 13
- 8 Files..... 14
- 9 Browser..... 15
- 10 Applications..... 16
- 11 Tools..... 17
- 12 Settings..... 18
- 13 Making the most of your mobile..... 19

SAR

This product meets applicable national SAR limits of 1.6 W/kg. The specific maximum SAR values can be found in the RADIO WAVES section of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.


www.sar-tick.com

PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Your mobile

1.1 Keys and connectors

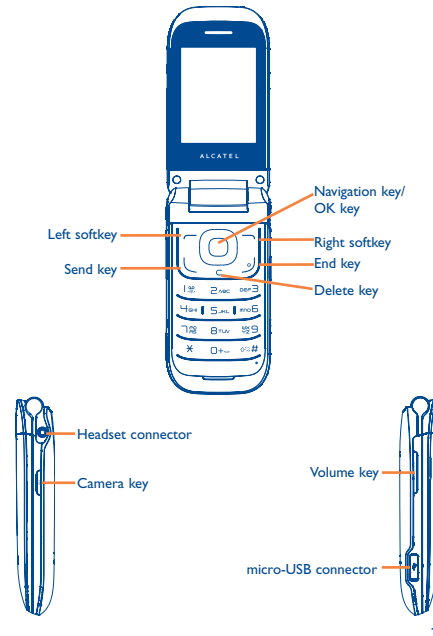

- Navigation key ⁽¹⁾ Press to go left/right/up/down
Press to access function
UP: Call log
DOWN: Contacts
LEFT ⁽²⁾: Tools
RIGHT ⁽²⁾: Media
- OK key Press to confirm an option
- Pick up/Send a call
- Enter Call log
- Press: End a call
Return to the Home screen
- Press and hold: Power on/off
- Press: Delete characters in Edit mode
- Press: Dial "#"
Press and hold: Vibrate alert
- In Edit mode
Press: Switch between ABC/abc/abc
Press and hold: Switch between Multi-Tap/Smart
- Press: Dial "*" ⁽¹⁾
Press and hold: Access your voicemail
- In Edit mode
Press: Input frequently-used symbols
- Press: Dial "*" ⁽¹⁾
Press and hold: Access your voicemail
- In Edit mode
Press: change input method
Press and hold: Access the Symbols table
- Press: Dial "0"
Press and hold: Switch between "+/P/W"
- In Edit mode
Press: Enter a space
Press and hold: Input "0"

⁽¹⁾ You can personalise navigation key in Settings.
⁽²⁾ The shortcut to access function for LEFT/RIGHT only be available when shortcut bar is off.

- Press: Take a picture
Press and hold: Access Camera
 - Press: Volume up/down
 - In Camera mode
Press: Zoom in/out
 - In music playing mode
Press and hold: Volume up/down
 - In Radio mode
Press and hold: Volume up/down
 - In Calendar mode
Press: Previous/Next month
 - Incoming call (Clamshell close)
Press: Mute
Press and hold: End
 - Alarm beep (Clamshell close)
Press: Snooze
Press and hold: Stop
- ### 1.2 Status bar icons ⁽¹⁾
- Battery charge level**
 - Vibrate alert:** your phone vibrates, but does not ring or beep with the exception of the alarm.
 - Bluetooth status (Activated).**
 - Bluetooth status (Connected to an audio device).**
- ⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

- Java status (Activated).**
- Headset connected.**
- Call forwarding activated:** your calls are forwarded.
- Alarm or appointments programmed.**
- Level of network reception.**
- Voicemail message arrived.**
- Missed calls.**
- Call in progress.**
- Stopwatch is active.**
- Radio is on.**
- Email unread.**
- WAP messages.**
- Roaming.**
- microSD card scanning completed.**
- GPRS connecting.**
- GPRS attached.**
- EDGE connecting.**
- EDGE attached.**

- 3G network connecting.**
 - 3G network attached.**
 - Music active.**
 - MMS receipt in progress.**
 - Silence mode:** your phone does not ring, beep or vibrate with the exception of the alarm.
 - Message unread.**
 - (Red) Message list is full:** your phone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
 - Airplane mode.**
- ### 1.3 Home screen
- #### 1.3.1 Shortcut bar
- Shortcuts are home screen icons for your frequently used items, like Calls or Messages.
- You can customise shortcut bar by selecting "Settings|Phone settings|Shortcut bar".

2 Getting started

2.1 Set-up

- #### Removing or installing the back cover
-
- #### Inserting or removing the SIM card
- You must insert your SIM card to make phone calls. Please power off your phone and remove battery before inserting or removing the SIM card.
-
- Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.
- #### Installing or removing the battery
-
- Insert and click the battery into place, then close the telephone cover. Unclip the cover, then remove the battery.

- #### Charging the battery
-
- Connect the battery charger to your phone and mains socket respectively.
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth and background-running applications when not in use; reduce the backlight time, etc.
- ### 2.2 Power on your phone
- Hold down the key until the telephone powers on.
- ### 2.3 Power off your phone
- Hold down the key from the Home screen.
- ## 3 Making a call
- Dial the desired number then press the key to place the call. The number you entered can be saved to Contacts by selecting "Save". If you make a mistake, you may press key to delete the incorrect digits one by one, or you may press and hold key to delete all.
- To hang up the call, press the key.

4 Messaging

- ### 4.1 Access
- You may access this menu using the following options:
- Access from the main menu by selecting "Messaging".
 - Select from shortcut bar, and then enter the sub-menu you require.
- When you access "Messaging", you can switch between SMS/MMS and Email by the navigation key.
- ### 4.2 Conversational On (Off) mode
- In conversational on mode, you can view chat history in chronological order. In conversational off mode, you may have access to the following folders: **Inbox, Outbox, Sent, Drafts, Voicemail, Broadcast SMS, Empty folder, Archive, Templates** and **Settings**. Conversational view mode is set as default. You may switch to conventional mode by selecting "Settings|Switch view mode". The following instructions are based on conversational mode.

- ### 4.3 Write message
- You can select "Messaging|New message" from the main menu or access from shortcut to write text/multimedia message. One or more recipients can be added from contact list and you can remove a recipient by pressing the Delete key. Press the key and select "More" to multi-choice recipients from Contacts.
- An SMS will be converted to MMS automatically when images, videos, audio, slides or attachments are inserted; Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.
- An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message. Specific letters (accent) will increase the size of the SMS.
- ### 4.4 Email
- Your phone has an email client with the settings pre-defined for a few popular email services like – Gmail, Yahoo, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

5 Contacts

- ### 5.1 Accessing your contacts
- You can access this function by selecting "Contacts" from the main menu.
- ### 5.2 Adding a contact
- You can add a new contact to phone or SIM card by selecting "Add new contact".

7 Media

- ### 7.1 Camera
- Your mobile phone is fitted with a camera for taking photos and shooting videos.
- ### 7.2 Music player
- You can access this feature from the main menu by selecting "Media|Music player". You will have full flexibility of managing music both on your mobile and microSD card.
- ### 7.3 Picture viewer
- A library links to the pictures both shown in list, slide, sent, set as wallpaper, by MMS, Email, and Bluetooth.
- ### 7.4 Video player
- Contains all video clips both in phone and microSD card and enables you to play, send, delete, rename, sort, etc.
- ### 7.5 FM Radio
- Your phone is equipped with a radio ⁽¹⁾ with RDS ⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio programme on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.
⁽²⁾ Depending on your network operator and market.

8 Files

- ### 8.6 Voice recorder
- Accessing this feature from the main menu by selecting "Media|Voice recorder", allows you to make voice or sound recordings.
- ### 8.7 Ebook
- A bookshelf contains the electronic books (.txt file only). While reading the book, you may add bookmark, or reach the text by searching words, phrases (**Options|Find, Options|Jump to**).
- ### 8 Files
- You will have access to all audio and visual files stored in phone or microSD card in File manager.
- Inserting the microSD card:**
-
- Insert the microSD card with golden contact facing downwards into the slot until it is locked. Gently push the memory card until it is unlocked.

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

9 MobileLife

- ### 9.1 Homepage
- Launch the Browser with the preset homepage.
- ### 9.2 Bookmarks
- Access your favourite sites.
- ### 9.3 Input Address
- Enter the URL of WAP site.
- ### 9.4 Open File
- Open web pages stored on your phone.
- ### 9.5 Last Web Address
- Last visited URL.
- ### 9.6 Recent Pages
- Pages which you recently browsed.
- ### 9.7 Offline Pages
- Pages available for offline viewing.
- ### 9.8 Service Inbox
- Store WAP push messages.
- ### 9.9 Settings
- Customise your Browser preferences.

10 Applications

- ### 10.2 News
- It is a huge time saver providing news updates from a website in a simple form.
- Once subscribed to a channel, it gives you the ability to track and manage all your favourite RSS content on your mobile phone at anytime, anywhere!
- ### 10.3 Weather
- Your phone is equipped with a weather function for consulting up to 3-day forecasts of favourite cities.
- You can access this feature from the main menu by selecting "Applications|Weather".
- ### 10.4 Java
- Your ALCATEL ONE TOUCH phone may include ⁽¹⁾ some Java™ applications and games. You can also download new applications and games to your phone.

⁽¹⁾ Depending on your country or your operator.

11 Tools

- ### 11.1 Alarm
- Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.
- ### 11.2 Calculator
- Access this feature by selecting "Tools|Calculator" from the main menu.
- ### 11.3 Calendar
- Once you enter this menu from the main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.
- ### 11.4 Tasks
- Enables you to easily manage and track the progress of a task with priorities. All the tasks will be sorted by due date.
- ### 11.5 Notes
- You can create a note in text format by accessing "Tools|Notes" from the main menu.
- ### 11.6 Bluetooth®
- Access this feature by pressing "Menu" through Left softkey from the Home screen to enter the main menu, then selecting "Tools|Bluetooth".

- ### 11.7 World Clock
- The World clock shows current local time and the time zone in different cities. You may view up to 3 cities.
- ### 11.8 Stopwatch
- The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.
- ### 11.9 Unit Converter
- You can use the Weight and Length conversion by selecting the unit you wish to convert, then press to input the digits. Finally confirm with "OK".
- ## 12 Settings
- From the main menu, select the menu icon and select the function of your choice in order to customise your telephone: **Profiles, Phone settings, Call settings, Airplane mode, Security settings, Networks, etc.**

