

Clear and Simple Quick Start Guide

alcatel IDOL™ 4

Getting to know your alcatel IDOL™ 4



Phone setup

 
- Place the SIM tool in the hole next to the SIM tray and push until the SIM tray pops out.
- Hold the nano-SIM card and microSDHC™ card (not included) with the cut corner oriented as shown.



WARNING!

To avoid damage to the phone, do not use any other kind of SIM card or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.


- Close the SIM tray.



Touch screen

Navigating your phone

- Use your finger tip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- To return to the previous screen, tap the **Back key**.
- Tap the **Home key** at any time to return to the main home screen.
- Tap the **Overview key** to access recently viewed apps.
- Tap **Apps** to access applications on your phone.

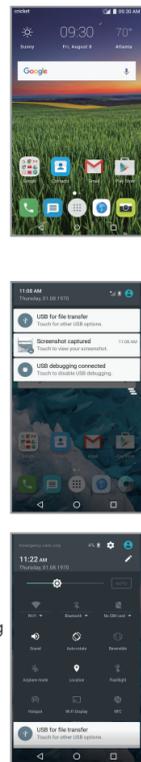

Notification panel

Access alerts, including new messages, emails and software updates.

- Tap the top of the home screen and drag your finger down to see the Notifications panel.
- Swipe right or left to clear individual notifications or tap to clear all.
- With the notification panel open, tap top of screen again and drag down to expand the quick settings menu.
- Tap to access the settings menu.

Personalize

Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and tap **WALLPAPERS**.
- Select a wallpaper and tap to set it. You can also tap **Pick image** for additional options.



Add to home screen

- To add app shortcuts, tap **Apps**, press and hold the desired app, and drag it to the home screen.
- To add widgets, press and hold a blank part of the screen and tap **WIDGETS**, press and hold the desired widget and drag it to the home screen.

Organize home screens

- To move widget or app shortcut, press and hold it and then drag it to a new location. To delete it, drag it to the X to remove.
- To organize app shortcuts in a folder, press and hold an icon and drag it so it is on top of another icon and release it. This will create a Folder. Drag additional shortcuts to the folder to add them.
- To rename a folder, tap the folder title and then type a new name.

Calls and voicemail

Make a call

- From the home screen, tap **Phone**.
- Type a name or phone number, or select one of the following options:
 - Dialer**: Manually enter a phone number.
 - ★**: Choose from frequently called contacts
 - ☎**: Choose with Call from a list of people who you have called or have recently called you.
 - ☎**: Call from your contacts list.



Check voicemail

- From the home screen, tap **Phone**, then tap **1**.
- Press and hold the **1 key**.

Use call waiting

- Call waiting lets you answer a second call while you are on an existing call.
- While on a call, you will hear a tone if another call comes in. Slide to the right to answer.
 - Tap or tap **On hold** to switch between active calls.
 - Tap to merge calls.
 - Tap to end a conference call.

Manage Conference Call to hang up or unmerge individual callers

Text and picture messaging


Send a text message

- From the home screen, tap **Messaging**.
- Tap **New message** to start a new text message.
- In the **To** field, enter a number or a contact name or tap **Contacts** to access your contacts.
- Tap the **Send message** field and enter your message.
- Tap **Send** to send the message.



Send a picture message

- Follow steps 1-4 above.
- Tap the **Paperclip**.
- Tap **Pictures** and select desired picture or tap to take a picture to attach.
- Tap **Send** to send the message.

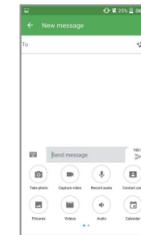

Please don't text and drive.

More information

On the web

Detailed support information, including device specifications and troubleshooting, is available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your cell phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID 2ACCJA018. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. © 2016 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC. You can also create your own custom beats with the ONETOUCH Mix app, which lets you mix both local and streaming tracks to save and share with your friends. alcatel is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd. © Copyright 2016 TCL Communication Ltd. All rights reserved. TCL Communication Ltd. reserves the right to alter material or technical specification without prior notice. All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not rated. M4 is the better/higher of the two ratings. Your device is rated M4.
T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing aid's telecoil than phones that are not rated. T4 is the better/higher of the two ratings. Your device is rated T4.

SAR Information

1.18 W/kg @ 1g (HEAD)
1.11 W/kg @ 1g (BODY)

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 15 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.

Cricket Apps & Services

These services make using Cricket even better and easier.

My Cricket: Check account balance, make a quick payment, view usage and access support from the palm of your hand.

Cricket Wi-Fi Manager: Helps you save your high speed data by seeking out free and open Wi-Fi hotspots whenever you're near them. Also remembers your favorite Wi-Fi hotspots and connects you automatically. Cricket does the searching so you can do the saving.

Cricket Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.


Deezer: Listen on-the-go with ad-free streaming music, download your favorites to your phone and get customized playlists based on your preferences.

Apps on Google Play™

You can install apps from Google Play Store.

Access Google Play


- From the home screen, tap **Play Store**.
- Enter your existing Google account or create one following the steps on the screen.

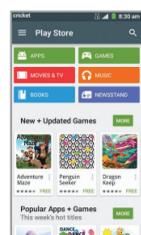

Navigate Google Play

From Play Store, there are multiple ways to find apps, games, and more.

- Tap a category to browse popular apps, games, movies, and music organized by popularity or category.
- Tap **Search** to search the Play Store for a specific game or app.
- To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in **Apps**.

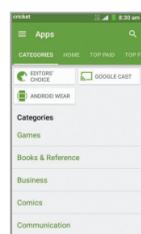

Note: A Google Wallet™ payment method is required to purchase apps.

Camera and video

Take a picture

- From the home screen, tap **Camera**.
- Swipe the screen to select different modes. Tap to display camera settings.
- Zoom in and out by pinching with your fingers.
- Tap the **Shutter button** or press the **Volume Keys** to take a photo.



View pictures

- From the home screen, tap **Apps**.
- Tap **Gallery**.




Take a video

- In camera mode, tap **Start recording** to start and tap **Stop recording** to stop recording video.

Send a picture

- After taking a picture, slide right to view the picture. Tap a selected picture and then tap **Share**.
- Tap **More** to send via text messaging or email, and more.

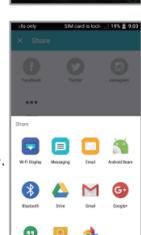

Unique alcatel Features

Boom Key

- If Boom Key is enabled,
 - Double press the key to instantly take a photo or long press to take burst shot when your phone is locked.
 - Press the key to trigger audio effect when a song or movie is played.
 - Press the key to enhance voice quality during a call.
 - Press the key from Gallery Moments to create a photo collage.
 - Press the key to trigger special effect such as sequence change when a movie is played.
- You can also customize the Boom Key function. For example, enable screenshot taking or application running by pressing the Boom Key when the screen is locked.

Reversible mode

Upside down or right side up? With Reversible mode, use your phone quickly regardless of which way you pull it out of your pocket or purse.

- From the home screen, tap **Apps**.
- Tap **Settings** > **Display**.
- Switch on the toggle beside **Reversible** to activate the reversible mode.

Note: Call handling is not supported in reversible mode.

Virtual Reality

Enable this function to enjoy 3D images and movies with VR goggles. For details, see the VR QG delivered with your phone.

Music

Music is more than just a music player. Listen, stream and mix songs all through one app. Create playlists from songs you own and also listen to music from the Deezer for Cricket app.

Listening to music

- From the home screen, tap **Apps**.
- Tap **Music**.
- Tap a song in the music library to listen to or tap and then **Log in** to log in to your Deezer account.



Mixing Music

Be the life of the party! DJ like a pro. Mix, scratch, and add effects to playlists at a touch of a button.

- Swipe left or right to advance to the previous or next track.
- Move your finger back and forth on the turntable to scratch.
- Tap Automix to turn on auto DJ features.



Rotate your device to access advanced DJ mode.

- Tap to turn on manual mixing.
- Tap to add effects to the songs playing, move sliders to switch between tracks, adjust playing speed etc.
- Tap to start recording, tap again to save the mixed song. For additional features, refer to the user manual.