

 
Phone & Feature Guide



alcatel IDEAL™



Phone Overview

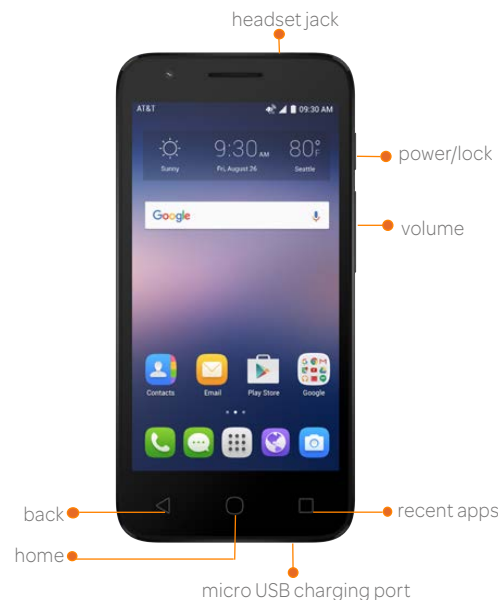

Need more help?
Go to **APPS > Device Help**

Setting Up Your Phone

 
You'll need to set up your device before you can explore all its great features.

Installing a SIM Card and microSD Card

Your new GoPhone SIM card is pre-installed. If you are an existing AT&T customer, replace it with your current SIM (see instruction #3 below). If your SIM does not fit, use the new SIM that is already inserted and call Customer Care at 800-331-0500 to update your account.

(follow prompts to speak to a representative)

1. Remove the back cover via the notch at the left bottom of the phone.
2. To insert a SIM card, push the SIM into the card slot with the gold-colored contacts facing down.
3. Insert the microSD (sold separately) card with the gold-colored contacts facing down.
4. Replace the back cover.

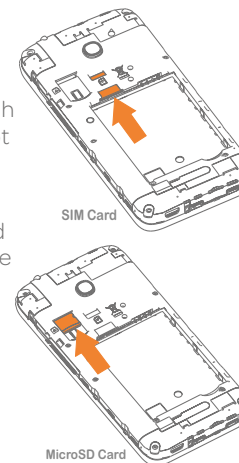

SIM Card

MicroSD Card

Find More Information

Manage Your Account with myAT&T

- On your phone: **Apps > myAT&T**
- On the web: att.com/mygophone



With myAT&T, you can:

- Add money to your account
- Change your plan
- Add a package
- Track your usage
- and more

Compatible device and GoPhone account required. Data and messaging rates may apply for download and app usage.

Need More Help?

- On your phone: **Apps > Device Help**
- On the web: att.com/devicehowto



Give us a call

- 800.901.9878
- 611 from any AT&T wireless phone

Accessories

- att.com/wirelessaccessories
- Visit your AT&T store

Product meets FCC Radio Frequency Exposure Guidelines – FCC ID 2ACCJB039. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. ALCATEL is a trademark of Alcatel-Lucent used under license by TCL Communication LTD. IDEAL is a trademark of TCL Communication LTD. © 2016 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T.

Printed in China

 
CJB1GY001AAA

Touch Screen and Navigation

Your phone features a touch screen, so you can gently tap, quickly swipe, or pinch with two fingers to navigate.

Navigating Your Phone

- Use your finger tip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left and right.
- Spread two fingers apart or pinch them together on the screen to zoom in or out on a web page or a gallery image.
- To return to the previous screen, press the **Back key**
- Press the **Home key** at any time to return to the main home screen.
- Press and hold the **Home key** to open Google Now.
- Press the **Overview key** to view recently used applications.
- Tap to access applications on your phone.

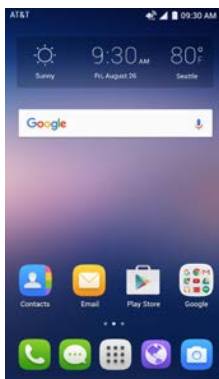

Screen Customization

Adding Apps to the Home screen

1. Tap from the home screen to view apps.
2. Tap and hold an icon to move to desired location.

Adding Shortcuts to the Home screen

1. Press and hold a blank part of the home screen and tap **WIDGETS**.
2. Tap and hold an icon and drag it to a home screen.

Set the Wallpapers

1. Press and hold a blank part of the home screen and tap **WALLPAPER**.
2. Tap **GALLERY** or **LIVE WALLPAPER** to choose the image or animation to use as the wallpaper. You can also tap a default image as the wallpaper.

Organize your Home screen

1. On the home screen, tap and hold an app icon and drag it to another icon to create a folder.
2. To name the folder, open it and tap **Unnamed folder**. Enter a name and tap .
3. Tap the folder to open it and access items in the folder.

Quick Settings & Multi-user

Notification Panel

When there are notifications, tap and swipe down from the top to open the Notification panel to read more detailed information.

Quick Settings

You can enable or disable functions or change modes by touching the icons, such as Wi-Fi, Bluetooth, Airplane mode.

- Open by swiping down twice from the top.



Multi-user¹

Share your device with family and friends.

Add a new user:

1. Tap user icon
2. Tap to edit contact.

 
¹ Multi-user does not support all apps.

Bluetooth and Wi-Fi

Pair with other Bluetooth devices or connect to a Wi-Fi network.


Connect to a Bluetooth Headset

1. From the home screen, tap /Settings/Bluetooth.
2. Tap to turn **Bluetooth** on.
3. Your phone will automatically search for device. Tap the name of the device to pair and connect with it.



Connect to Wi-Fi Network

 1. From the home screen, tap /Settings/Wi-Fi.
2. Tap to turn **Wi-Fi** on.
3. Tap a network name. Enter a password if required and then tap **CONNECT**.



Network Indicator

Your 4G LTE wireless device will indicate which of the AT&T wireless networks you are connected to. A network indicator does not necessarily mean that you will experience any particular upload or download data speeds.

- 4G LTE:** Connected to the AT&T 4G LTE network.
- 4G:** Connected to the AT&T HSPA+ network. The AT&T 4G HSPA+ network is capable of delivering 4G speeds when combined with enhanced backhaul. 4G availability is increasing with ongoing backhaul deployment.
- GRPS:** Connected to GPRS network.
- EDGE:** Connected to the AT&T 4G LTE EDGE/2G network.

Actual data upload and download speeds depend on various factors, including the device, network utilization, fire characteristics, terrain, etc. Learn more at: wireless.att.com/learn/articles-resources/wireless-terms.jsp, your AT&T Wireless Customer Agreement, Section 3.2 "Where and How Does AT&T Service Work?"

4G LTE is not available everywhere. LTE is a trademark of ETSI. LEARN more at att.com/network.

Contacts and Phone calls

Keep the contact information of your friends in **Contacts** and synchronize these with applications on the web or on your phone. Call friends and check voicemail in **Call**.

Import Contacts from the SIM card

- From the home screen, tap .
- Tap to open the options menu, then tap **Import/Export**.
- Tap **Import from SIM card**, select a contact you need and tap .

Add a Contact

- From the home screen, tap .
- Tap . Enter details and tap when finished.

Make a Call

- From the home screen, tap .
- Enter the desired number from the keyboard directly or select a contact from **CONTACTS** or **RECENT** by sliding or touching tabs, then touch to place the call.

Check Voicemail

- From the home screen, tap .
- Tap to open dialpad, tap and hold .
- Follow voice prompts to listen to messages.

Messaging

Send text or multimedia message to communicate privately and quickly.

Send a Text Message

- From the home screen, tap .
- Tap to write a new message.
- Enter the mobile phone number of the recipient in the **To** bar or touch to add recipients and touch the **Send message** bar to enter the text of the message.
- Tap to send the message.

Send a Multimedia Message

- From the home screen, tap .
- Tap to write a new message.
- Enter the mobile phone number of the recipient in the **To** bar or touch to add recipients and touch the **Send message** bar to enter the text of the message.
- Tap and tap **Picture** to select desired picture.
- Tap to send the message.

Email

Access your Gmail™, corporate email, and personal email wherever you are.

Email Setup

- From the home screen, tap .
- Tap the email server you wish to use.
- Enter your email address and password and then tap **Next**.
- Confirm email account settings and tap **Next**.
- Name the account, enter your name as it will appear on outgoing messages, and tap Next. Your email will begin to synchronize with your phone.

Create and Send an Email

- From your email inbox, tap .
- Enter an email address in **To** bar.
- Enter a subject and email message.
- To attach files to the email message, tap and make your selection.
- Tap **Send** to send your message.

Camera and Video

Take pictures and record videos right from your phone with the camera and camcorder and then share them with friends and family.

Take a Picture

- From the home screen tap **Camera** .
- Tap to select camera mode, touch to adjust your camera settings. Spread two fingers apart or pinch them together on the screen to zoom in or out.
- Tap to take a photo.

Record a Video

- From the home screen tap **Camera** .
- Tap to start recording.
- Tap to capture a picture while recording.
- Tap to stop recording.

Share a Picture or Video

- From the home screen tap / **Gallery**.
- Tap a photo or video. Tap and select an option for sharing.

AT&T Services¹

- AT&T Locker™**
Store, sync, and share photos, videos, and documents in one place.
- AT&T Navigator**
Gets voice-guided, turn-by-turn driving directions and traffic updates.
- AT&T Protect Plus**
You can back up your content and find this device if it is lost.
- Visual Voicemail**
Review and manage your voicemail from your phone.
- DriveMode**
Silence notifications, set an auto-reply so people will know you are driving, and more.
- myAT&T**
Managing your account, track your usage, review and pay your bill, and update your data plan service.

¹ Data usage and subscription charges may apply.



YP
Quickly search nearby for a business, by type or name or choose from popular categories like restaurants, banks and gas stations.

Browsing the Web

Your phone has two options for Internet access. Use the Browser or Google Chrome™ to view web pages and search for information.

Opening a Web Page

- From the home screen, tap .
- Tap the address bar, enter the website you want to browser, and tap **Go** or .
- Press to return to the page you viewed previously. Tap to go forward.

Adding a Bookmark

- Open a page or tap /Bookmarks/Add bookmark.
- Give the bookmark a name and tap **OK**.

Update Your Apps

- From the home screen, tap .
- Tap .
- Tap **UPDATE ALL**. Or, if you'd like to update apps individually, tap the desired app **UPDATE/ACCEPT**.

- Once installed, you will see a notification in the Notifications bar. To open the app, locate it in the App tray.

Optimize Battery Life

There are several things you can do to make your battery last longer.

- Turn on Wi-Fi, Bluetooth, GPS, mobile data, and auto-sync only when you need to.
- Lower the screen brightness.
- Use Bluetooth tethering or USB tethering (when you have a cable) instead of portable Mobile Hotspot to share your phone's data service.
- Touch **Overview key** on any screen and close the apps you do not need but still run in the background.
- From the home screen, tap / **Settings/ Battery**, touch to turn on **Battery saver** mode.