


Quick Start Guide

1 Your mobile

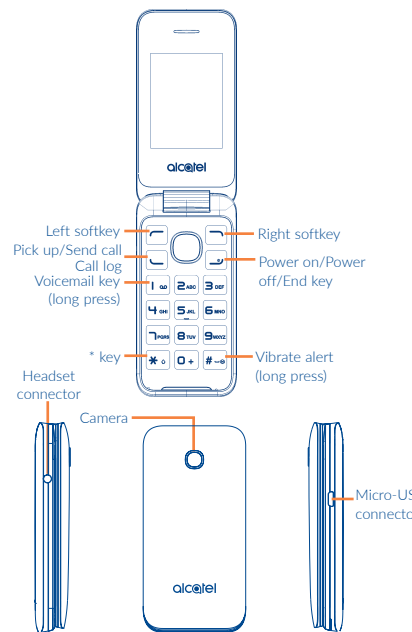

This product meets applicable national SAR limits of 1.6 W/kg. The specific maximum SAR values can be found on page 24 of this user guide. When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.



www.sar-tick.com

PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

US_English - CJB1FM1ALAAA

4 Messages

4.1 Create message

You can select "Messages/New chat" from the main menu or access from the widget bar and select icon to create text/multimedia message. You can type a message and you can also modify a predefined message in **Insert template** or customize your message by adding pictures, records, videos, etc (only available while editing a MMS). While writing a message, select "Options" to access all the messaging options.

For dual SIM model, you can type a message and select to send it to a recipient in either the SIM1 or SIM2 directory. One or more recipients can be added from contact list. Press "Contacts" through key to multi-select recipients from Contacts.

4.2 Create MMS

An SMS will be converted to MMS automatically when images, videos, audio, slides or attachments are inserted.

An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message. Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

1

10

5 Contacts

5.1 Consulting your contacts

To access the **contacts** from the Home screen, press the key and select the icon from the menu.

For dual SIM model, the complete contacts of both SIM1 and SIM2 are available in this menu.

5.2 Adding a contact

You can add a new contact to phone or SIM card by selecting "Add Contact".

6 Call log

6.1 Access

You can access the function using the following options:

- Select from main menu
- Press the send key from main screen
- For dual SIM model, the contacts of both SIM1 and SIM2 are available in this menu.

6.2 Available options

When you press Options, you can have access to **Details, Call, Write message, Add to Contacts, Add to blacklist, Delete, Delete all, Call timers, GPRS counter.**

11

11

1.1 Keys

Navigation key

- Press to confirm an option
- Press to go left/right/up/down

Access main menu

- Pick up/Send a call
- Press: Enter Call log

Access contacts

- Press: End a call
- Return to the Home screen

Long press: Power on/off

- Long press: Access your voicemail

From Idle screen

- Press: Enter 0
- Long press: "0/+" and "0/+ /P/W" when in Dial screen.

In Edit mode

- Press: Access symbols table
- Long press: 0

From Idle screen

- Press: *
- In Edit mode:
- Press: Change input methods

From Idle screen

- Press: #
- Long press: Vibrate alert
- In Edit mode
- Press: (space)

2

11

11

1.2 Status bar icons

In 2051A:

Battery charge level.

Level of network reception.

Missed calls.

Call forwarding activated: your calls will be forwarded.

SD card scanning completed.

Roaming.

Flight mode.

GPRS connection status (Activated).

Music activated.

Radio is on.

Headset connected.

Alarm or appointments set.

Receiving an MMS.

Sending an MMS.

SMS unread.

MMS unread.

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.

3

12

12

1.3 Home screen

1.3.1 Widget bar

Widgets are convenient shortcuts for quick access from the Home screen.

You can customize widget bar by "Settings/Phone settings/Widget bar".

1.3.2 Change wallpaper

You can select a folder to choose one image as favorite wallpaper by selecting "Options/Set as /Wallpaper" in **My files** or open the picture in **Image** and press to choose **Set as wallpaper**.

In 2051E:

Level of network reception.

Call forwarding activated: your calls will be forwarded.

GPRS connection status (Activated).

Roaming.

4

13

13

11 My files

You will have access to all audio and visual files stored in **Phone** or **MemoryCard** in **My files**. You can access a number of items in **Phone** or **MemoryCard** with this option: **Alarm, Audio, Photos, Others, Video**, etc.

Inserting and removing the memory card:

2051A



2051E



Place the microSD card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

14

14

12 Alarm

Your mobile phone has a built-in alarm clock with snooze feature.

13 Calculator

Press the up, down, left, right on the navigation key to select +, -, x, ÷ and = respectively. Press the Right softkey to delete the figure.

14 Calendar

Once you enter this menu from the main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked.

15 Notes

You can create a note in text format by accessing "Notes" from the main menu.

15

15

2 Getting started

2.1 Set up

 
Removing and installing the back cover



Removing and installing the battery



Inserting and removing the SIM card



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

6

16

16

2.2 Power on your phone

Hold down the key until the phone powers on.

Charging the battery



Connect battery charger to your phone and plug into the socket.

- Charging may take about 20 minutes to start if the battery is out of power.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- You are advised to charge the battery to its maximum when using the phone for the first time (approximately 3 hours).
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; reduce the backlight time, etc.

The charge is complete when the animation stops.

2.2 Power on your phone

Hold down the key until the phone powers on.

⁽¹⁾ 2051E only.

⁽²⁾ 2051A

7

17

17

2.3 Power off your phone

Hold down the key from the Home screen.

3 Making a call

Dial the desired number then press the key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the key.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code.

3.1 Calling your voicemail

To access your voicemail, hold down the key.

3.2 Receiving a call

When you receive an incoming call, press the key to talk and then hang up by pressing the key.

3.3 Available functions during the call

During a call, you can access your contacts, call log, messages, etc. without hanging up the phone.

⁽¹⁾ Contact your network operator to check service availability.

8

17

17

16

16

⁽¹⁾ Make the phone's settings recover to its default value. End-user data will be erased. Enter its default password 0000 to confirm to restore and reboot.

⁽²⁾ 2051E only.

