

1 Your mobile

Quick Start Guide



www.sar-tick.com

This product meets applicable national SAR limits of 1.6 W/kg. The specific maximum SAR values can be found on page 19 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 15 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

PROTECT YOUR HEARING
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.



English - CJB1GC005AAA



- 1 Left soft key
- 2 Call logs (idle screen) Send call
- 3 Voice mail (long key-press)
- 4 Lock Key (long press *0# key)
- 5 Right soft key
- 6 Power on/Power off End call
- 7 Vibration alert (Meeting mode activated)
- 8 Navigation key: Menu/Confirm an option
- 9 Increase volume ▲ Decrease volume ▼ New SMS ◀ Alarm ▶ Torch

- 1.1 **Keys**
 - Navigation key Confirm an option (press the middle of the key)
 - Send call
 - Access to call log (idle-screen)
 - Power on/off the handset (long press)
 - End call
 - Return to idle
 - Left soft key
 - Right soft key
 - Dial the voice mail number (long press)
 - From Idle screen
 - Press: enter zero
 - Long press: input +, "+" are used for dialing an international call.
 - In Edit mode:
 - Press: access the Symbols table 0 (add numbers)
 - From Idle screen
 - Press: input *
 - Long press: lock keypad
 - In Edit mode:
 - Press: change input methods
 - From Idle screen
 - Press: input #
 - Long press: activate/deactivate the vibrator
 - In Edit mode:
 - Press: input space
 - From Idle screen:
 - Press: dial '5'
 - Long press: turn the Torch on/off

4 FM radio.....

Your phone is equipped with a radio. You can use the application as a traditional radio with saved channels. In FM radio interface, press to play/pause the playing process of the current channel, press and to tune volume. You can listen to it while running other applications.

To use this feature you must plug in your headset, headset works as antenna when connected to your phone.

5 Call logs.....

You can access your call memory by pressing from the idle screen, or press the key and select the icon from the menu. In this menu, you will see all call history.

6 Music.....

Use this function to play audio files. Press to play/pause the audio player, short press or to last or next audio, in audio player interface, press and to tune volume.

7 Tools.....

7.1 Alarm
Your mobile phone has a built-in alarm clock with snooze feature.

7.2 Calculator
Press the up, down, left, right and OK key to select +, -, ×, ÷ and = respectively.
Press to delete the figure.

7.3 Calendar
Once you enter this menu, there is a monthly-view calendar for you to view the date; you can go to any day you want.
You can create a note in text format by accessing "Add new schedules" from the **Options**.

7.4 Bluetooth
You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

7.5 Unit conversion
Unit conversion support weight conversion and length conversion.

7.6 Fake call
You can create fake call through this function. It helps you to politely escape from social situations at any time you wish.

7.7 Call filter
You can create Blacklist and Whitelist through this function.

7.8 Torch
Turn on/off the torch as per your need. In idle screen, long key press 5 key to activate/deactivate the torch light.

- 1.2 **Status bar icons ⁽¹⁾**
- In 1054X:**
 - Battery charge level.
 - Level of network reception.
 - Meeting mode: your phone vibrates, but neither rings nor beeps.
 - Silence mode: your phone neither rings, beeps nor vibrates.
 - Bluetooth status (Activated).
 - Flight mode.
 - Headset connected.
 - Alarm clock programmed.
 - Missed calls.
 - GPRS connection status .
 - Roaming.
 - Unread SMS.
 - Message full.

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.

7.9 Browser
This function enables you to surf the Internet using the mobile phone.
Note: Consulting the local network operator for related fee and specific setup.

7.10 Service
STK service is the tool kit of SIM card. This phone supports the service function. The specific items depend on SIM card and network. Service menu will be automatically added to the phone menu when supported by network and SIM card.

8 Message.....

8.1 Create SMS
From the main menu select "Message" to create text message. You can type a message send it to a recipient in the SIM card directory. You can type a message, and you're also able to insert a pre-defined message from "Templates". While writing a message, select "Options" to access all the messaging options.
For dual SIM model, you can type a message and select to send it to a recipient in either the SIM1 or SIM2 directory ⁽¹⁾.

An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

⁽¹⁾ 1054D only.

- Call divert.
- Music activated.

- In 1054D:**
 - Level of network reception.
 - Call divert.
 - GPRS connection status .
 - Roaming.

9 Media.....

9.1 Camera
This function enables you to take pictures. Press to take the picture. You send them directly by Bluetooth, set as wallpaper or select them as incoming call image to a contact in your **Contacts**.

9.2 Image
You can view images through this function.

9.3 Recorder
Use this function to record audio files. The phone support WAV and AMR. The recording file you stopped will be stored in audio file automatically.

9.4 Video
Use this function to play video files. Press to play/pause the video player, short press up or down direction key to tune volume, press left and right direction key to last or next video.

10 My files.....

The phone provides a certain space for users to manage files and support the memory card. The capacity of the memory card is selectable. You can use the file manager to conveniently manage various directories and files on the phone and the memory card.

2 Getting started

2.1 Set up
Removing and installing the back cover



Removing and installing the battery



Inserting and removing TF card



Inserting and removing the SIM card



11 Contacts.....

11.1 Consulting your contacts
You can access your call memory by pressing from the idle screen, or press the key and select the icon from the menu. In this menu, you will see all call contacts.

11.2 Adding a contact
Select the menu "Add contracts" then save it to "Phone", "SIM" as you like.

12 Settings.....

From the main menu, select the menu and select the function of your choice in order to customize your telephone: **Profiles, Phone setting, Call settings, Network selection, Connections, Security, Restore factory settings ⁽¹⁾** etc.

13 Input mode

This mode allows you to type a text by choosing a letter or a sequence of characters associated with a key. Press the key several times until the desired letter is highlighted. When you release the key the highlight character is inserted into the text.

⁽¹⁾ Make the phone's settings recover to its default value. End-user data will not be erased. Enter its default password 0000 to confirm to restore and reboot.

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

For dual SIM models, SIM1 supports mini SIM card and micro-SIM for SIM2. ⁽¹⁾ As to Single SIM model ⁽²⁾, which only supports mini SIM card. Do not attempt to insert other SIM types like micro and nano cards, otherwise this may cause damage to your phone.

Charging the battery



- Connect battery charger to your phone and plug into the socket.
- Charging may take about 20 minutes to start if the battery is out of power.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- You are advised to charge the battery to its maximum when using the phone for the first time (approximately 3 hours) ().
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; reduce the backlight time, etc.

The charge is complete when the animation stops.

⁽¹⁾ 1054D only.
⁽²⁾ 1054X

alcatel is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd.
© Copyright 2016 TCL Communication Ltd All rights reserved
TCL Communication Ltd reserves the right to alter material or technical specification without prior notice.

⁽¹⁾ Contact your network operator to check service availability.

