



ALCATEL
onetouch.

Pixi4


QUICK START GUIDE

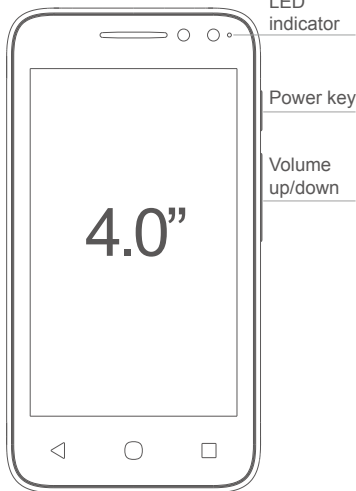

4034E

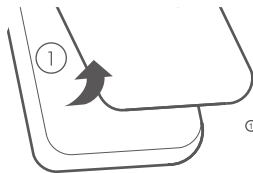


① Removing or installing the back cover.

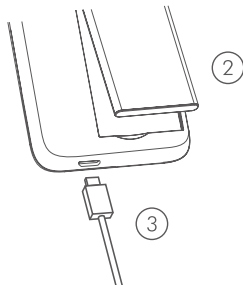

② Installing or removing the battery.

③ Charging the battery.

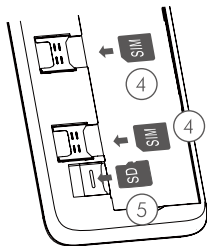

④ Inserting or removing the SIM card.

⑤ Installing or removing the microSD card.

User guide and FAQ are available online
www.alcatel-mobile.com

* This phone doesn't support SIM card or SD card removal without turning off the device.

SAVE
PAPER
SAVE
TREES

PLEASE CONSIDER THE
ENVIRONMENT BEFORE PRINTING