

# **REALISTIC**

by RadioShack



## **BLUETOOTH® ANC HEADPHONES**

3301750, 3301751  
User's Guide

We hope you enjoy your REALISTIC Bluetooth ANC Headphones with Acoustic Noise Cancellation (ANC) giving you superb sound quality. Designed with comfortable and convenient touch controls on the ear cup for music and calls, it's compatible with most devices Bluetooth. Please read this user's guide before using your headphones.

## Package Contents

- Bluetooth Headphones
- USB Charging Cable
- 3.5mm Audio Cable
- Airline Adapter
- Carrying Case
- User's Guide

## Specifications






Charging Time .....	approx. 2 hours
Play Time .....	ANC on: up to 16 hours, ANC Off: up to 22 hours
Bluetooth Version.....	4.0
Bluetooth Connection Range.....	up to 33 ft (10m)
Frequency Response.....	(speaker) 20 Hz – 20 KHz
.....	(mic) 100Hz - 10KHz
Impedance .....	16 Ohms
Sensitivity.....	96dB @ 1kHz 1mW

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.



### Touch Controls

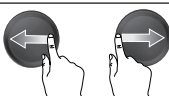Touch controls are located on the right ear cup and only works in Bluetooth mode.

To...	Swipe / Touch
Volume up/ down	 Swipe and hold to adjust quickly
Play/Pause music	 x 1
Previous/next track	
Answer/ end call	 x1
Reject an incoming call	 hold 2 sec

## Charge

Connect the supplied charging cable to the headphones and a USB power source. Unplug after charging,



LED lights red during charging and turns off when fully charged.


### Notes:

- A battery level icon also appears on your iOS device when Bluetooth is connected.
- LED flashes red and blue alternatively when battery is low, recharge the headphones.

### Lithium Battery Notes:

- Charge batteries on a fireproof surface away from flammable items or liquids. Follow the instructions for charging the headphones and do not charge longer than recommended.
- Recycle lithium batteries. Do not dispose of them in the trash. Do not burn or bury batteries. Do not puncture or crush. Do not disassemble.
- If the electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention.
- Follow the instructions for charging. Do not charge longer than recommended. Unplug the USB cable when the battery is charged. The headphones should never be left unattended while charging.

## Pairing

1. Press and hold  for 2 seconds to turn on the headphones. The LED flashes red and blue quickly as your headphones searches for Bluetooth devices.
2. Activate your device's Bluetooth function (refer to your device's user's guide). Select **Realistic BT ANC** from the list of found devices. When paired, the LED indicator lights blue every 3 seconds.
3. Swipe / touch the right ear cup for music, call and volume controls.

### Notes:

- The headphone will disconnect and power down from your device if they are too far apart, or left idle. To reconnect, move the headphones closer to the device within 2 minutes.
- The last volume setting used on the headphones is memorized after switching off.
- Music playback is paused during call functions and resumes when the call is ended.

## Clear Bluetooth Pairing


Your headphones automatically reconnects to the most recently paired device when switched on. If you want to change to other Bluetooth devices, or in case of problems pairing, you may need to clear pairing before you attempt to pair again.

Press and hold  and  for 3 seconds .

**Note:** To delete the headphone completely from your device memory, go to your device's Bluetooth settings menu to find then select to remove it.

## Multipoint Connection

This headphones is multipoint-enabled. This allows you to easily access and play music or take a call through the headphones from either one of two connected Bluetooth devices.

1. To use multipoint, make sure you pair each of your devices separately. See **Pairing**.
2. There is no need to switch off the headphones to pair your second device. Press and hold  for 2 seconds to start Bluetooth pairing your second device. Bluetooth status on your first device will automatically disconnect.
3. After your second device is successfully paired and connected, to enjoy multipoint, go to the Bluetooth menu on your first device to reactivate Bluetooth connection status. Both your devices are now connected.


## Wired Connection

For device players without Bluetooth functionality, use the included  $\frac{1}{8}$ " (3.5mm) audio cable to connect to the headphone's **audio** jack.

**Note:** Bluetooth functionality is automatically deactivated when **audio jack** is connected.

## Airline Audio

Connect your headphones to the airline audio jacks. Check jack type for proper connections.

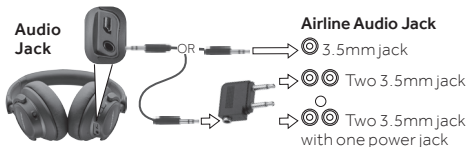

## Reset

In case the headphones buttons are not functioning properly during operation, press and hold  while you swipe down on the right ear cup.

## Listening Safely

Do not wear headphones while driving a vehicle or cycling. This can create a traffic hazard and could be illegal in some areas.

To protect your hearing:

- Do not listen at high volume. Extended high-volume listening can lead to permanent hearing loss.
- Set the volume to the lowest setting, then adjust to a comfortable level.
- Avoid increasing the volume. Your ears adapt to volume, so a level that does not cause discomfort could still damage your hearing.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Limited Warranty

Go to [www.radioshack.com/help](http://www.radioshack.com/help) for details.

RadioShack Customer Relations

300 RadioShack Circle, Fort Worth, TX 76102

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by General Wireless Operations Inc. is under license.

## RoHS

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



© 2016 General Wireless Operations Inc.  
All rights reserved. REALISTIC is a registered trademark used by General Wireless Operations Inc. dba RadioShack.  
radioshack.com

08A16  
3301750  
3301751  
Printed in China