



MONO PLUS BLUETOOTH® SPEAKER

4000765, 4000766, 4000767
User's Guide

We hope you enjoy your AUVIO Bluetooth Speaker with True Wireless stereo sound capability. Sleek, sturdy and water-resistant, this speaker is ideal for outdoors. It's also designed with a built-in mic and speakerphone so you can take calls as well as listen to music from your smartphone. Please read this user's guide before using your new speaker.

Package Contents

- Speaker
- User's Guide
- USB Charging Cable

Specifications

Battery.....Rechargeable 500mAh lithium polymer
 Battery Charging Voltage DC 5V
 Charging Timeapprox. 4 hours
 Play Time up to 5 hours
 Frequency Response..... (speaker) 105 Hz – 20 KHz
 Output Power.....3W
 Impedance.....4 Ohms
 S/N Ratio.....≥ 60 dB
 Driver 1.5 in" (38mm) neodymium
 Bluetooth Protocol..... V4.2 with A2DP, AVRCP, HFP Profile
 Operation Range.....33 ft. (10m)
 Water resistance.....IPX6
 Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

RoHS

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

FRONT & TOP VIEW

- Turn on/ off speaker
- Call functions on speakerphone
- Clear Bluetooth pairing
- Adjust volume



Mic

LEDs

- Blue** in Bluetooth/ call mode:
 - flashes quickly – pairing/ incoming call
 - flashes slowly – Bluetooth disconnected
 - lights steadily – connected; engaged in call.
- Red:** charging


BOTTOM VIEW

DC IN

Connect the included USB charging cable here to charge.

AUX

For line-in listening option.

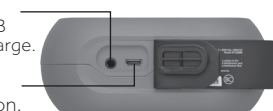

Controls Overview

To...	Button	Press
Turn on/ off speaker	[Power]	...and hold 2 sec
Start Bluetooth pairing	[Call]	...and hold 2 sec
Clear Bluetooth pairing	[Call]	...and hold 2 sec
Volume up/ down	+/-	...quickly, or press and hold

Calls


Answer/ end call	[Call]	×1
Reject an incoming call	[Call]	...and hold 2 sec
Switch to an incoming call and end the current call	[Call]	...and hold 2 sec

True Wireless (TW)

Activate TW on first speaker	[Power], -	...both buttons at same time
Activate TW on 2nd speaker	[Power], [Call]	...both buttons at same time
Swap left/ right channel	[Power], -	...both buttons at same time
Deactivate True Wireless	[Power], +	...both buttons at same time

Charge Your Speaker

- Lift the cover on the bottom to access the jacks. Then connect the supplied charging cable to the **DC IN** jack and a USB power source.

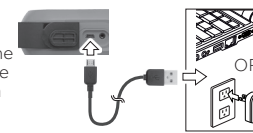

- LED lights red during charging and turns off when fully charged.
- 2. Unplug after charging, and firmly replace the cover to protect the jacks from water, dust or dirt.

Notes:

- You can charge the speaker and use it at the same time.
- When the battery is low, the LED flashes red slowly, and the speaker will eventually automatically turn off.

Lithium Battery Notes:

- Charge batteries on a fireproof surface away from flammable items or liquids. Follow the instructions for charging the speaker and do not charge longer than recommended.
- Recycle lithium batteries. Do not dispose of them in the trash. Do not burn or bury batteries. Do not puncture or crush. Do not disassemble.
- If the electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention.

Connecting to a Bluetooth Device

- Press and hold [Power] 2 seconds to turn on the speaker.
- The LED flashes blue quickly as your speaker searches for Bluetooth devices.
- When pairing to a device for the first time, press **and hold** [Call] **2 seconds** to start Bluetooth pairing.

- Activate your device's Bluetooth function (refer to your device's user's guide). When your device locates **AUVIO BTS300M**, select this from the device list. When paired, the indicator lights blue steadily.
- Use the controls on your device to play music. To adjust volume, you can use the speaker's +/- buttons **if paired to an iOS device**, or your device's controls.

Notes:

- The speaker will disconnect and power down from your device if they are too far apart, or left idle. To reconnect, move the speaker closer to the device within **5 minutes**.
- The last volume setting used on the speaker is memorized after switching off.
- Music playback is paused during call functions and resumes when the call is ended.
- **The speaker's volume +/- buttons function only for iOS devices. Android system devices excluded.**

Clear Bluetooth Pairing

Your speaker automatically reconnects to the most recently paired device when switched on. If you want to change to other Bluetooth devices, or in case of problems pairing, do the following:

- Press and hold [Call] for 2 seconds. The LED flashes quickly and the speaker starts searching for another Bluetooth device.

Using True Wireless Mode

To play your music **from your smartphone or other Bluetooth-enabled device, for best sound performance** you'll need an additional AUVIO 4000765, 4000766 or 4000767 speaker. There is no need to pair the second speaker.

True Wireless Activation

Make sure your first speaker is paired and playing music from only one Bluetooth device, when using True Wireless mode.

- Switch on your first speaker. Then press [Power] and [Call] simultaneously. The LED flashes quickly **and you hear a confirmation tone**.
- Switch on your second speaker** and press [Power] and volume - simultaneously. The LED flashes quickly, and you hear a confirmation tone.
- When True Wireless is successfully activated, the LEDs light steadily on both your speakers, and both speakers beep once simultaneously.
- To swap left/right channel sound on your two speakers, press [Power] and - simultaneously. **Differences in left/right sound may vary depending on how the music track was originally recorded.**
- To exit True Wireless immediately and **operate as 2 separate speakers**, press [Power] and + simultaneously on either one of the speakers. A double beep sounds, and music continues playing on the first speaker only. Remember to switch off the second speaker to save power.

Notes:

- **Smart Power Off:** During True Wireless playback, press [Power] on either speaker to switch off both speakers simultaneously.
- **Smart True Wireless:** Once activated, True Wireless is memorized by your speakers, even after you press [Power] and + to exit. True Wireless is the default playback mode when you next switch on the two speakers.
- **Troubleshooting TW Activation:** In case of difficulty activating, turn off each speaker. Then switch the first

speaker on again, followed by the second speaker, and start playing a song. Wait a few seconds to hear if True Wireless has been activated. If not, repeat **True Wireless Activation** and complete steps 1-3 above within 3 minutes.

Connecting with AUX

For device players without Bluetooth functionality, use an 1/8" (3.5mm) audio cable (not included) to connect to the speaker's **AUX** jack.

Note: Bluetooth functionality is automatically deactivated when **AUX** is connected.

Resetting the Speaker

In case the speaker's buttons are not functioning properly during operation, press both + and - at the same time for 5 seconds to reset **and switch off** the speaker. **Any previous TW activation will not be lost.**

Handling and Care

Always make sure the rubber flaps are securely fitted when not using the line in or charging jacks. This speaker is designed to be waterproof in compliance with IEC 60529 IPX6. After exposing to water, clean the speaker with a soft dry cloth and leave to dry in a well-ventilated place away from direct sunlight.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is

no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

1-Year Limited Warranty

Go to www.radioshack.com/help for details. RadioShack Customer Relations 300 RadioShack Circle, Fort Worth, TX 76102

www.radioshack.com

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by General Wireless Operations Inc. is under license.



© 2016 General Wireless Operations Inc. All rights reserved. AUVIO is a registered trademark used by General Wireless Operations Inc. dba RadioShack.

05A16
Printed in China

4000765
4000766
4000767