



YPHONE TM TM

User Guide

The YPHONE TM is a pocket-sized, wireless phone that works just like a regular cellular phone.

How it Works

The YPHONE TM works by accessing wireless Internet connections such as a wireless router in your home or office, or WiFi hotspots. This innovative wireless Internet phone provides portable, high-quality services.

Great Features

With the YPHONE TM, you can call anybody, around the world at a low fixed rate.

Copyright TCM – TCM Mobile LTD.

YPHONE™

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal.

SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELLING

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the phone where blasting is in

progress.

USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.

QUALIFIED SERVICE

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

ADDITIONAL SAFETY INFORMATION

CERTIFICATION INFORMATION (SAR)

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The 10-gram SAR level determined from the actual SAR assessment of the device was 0.0 W/kg and the 1-gram SAR level was also 0.0 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

Operating environment

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at

least 2,2 centimeters (7/8 inches) away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend that a minimum separation of 15.3 centimeters (6 inches) should be maintained between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to

avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device when the wireless device is turned on.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device to minimize the potential for interference.
- Turn the wireless device off immediately if there is any reason to suspect that interference is taking place.
- Read and follow the directions from the manufacturer of their implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same

compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust, or metal powders.


GETTING STARTED

General Information

The YPHONE™ provides various functions that are easy to use, such as Text-Messages, E-mail, Internet, Clock, Calculator, and Calendar.

1.0 YOUR Y PHONE - KEYS AND PARTS

1. Left selection key.
2. Right selection key.
3. Up scroll key.
4. Right scroll key.
5. Middle selection key.
6. Volume down key.
7. Volume up key.
8. End/Power(on/off) key.
9. Send key.
10. Down scroll key.
11. Left scroll key.

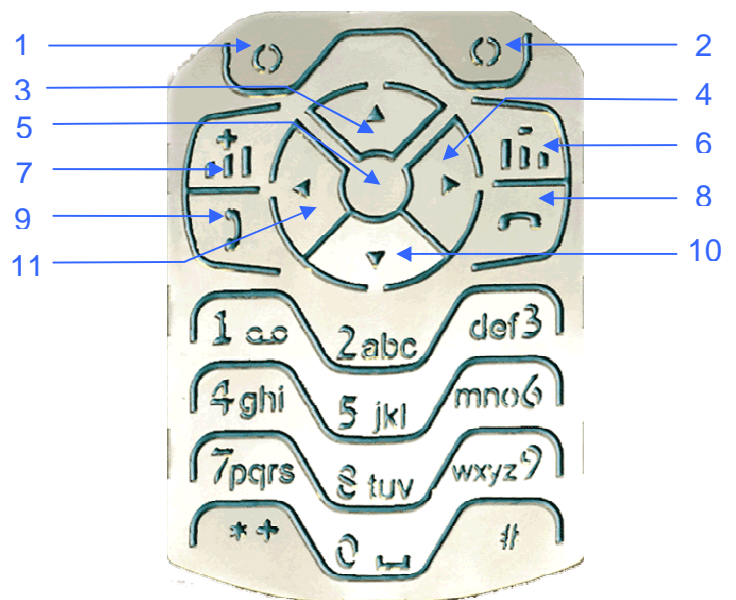

1.1 Installing and charging the battery -

Always switch the device off and disconnect the charger before removing the battery.

1.1.1 Installing and removing the battery:

Remove the back cover of the phone by pushing the back cover release slide (1), lift the cover (2).

Remove/insert the battery as shown (3). Place the back cover into its place (4). Make sure it clicks into place, so that the back cover release slide resumes its normal position (5).

1.1.2 – Charging The battery:

1. Connect the power cord to the charger.
You will hear it click into place.
2. Connect the charger to an AC wall outlet.
3. Connect the power cord from the charger to the base of the phone
The battery indicator bar will start scrolling.

Note: the phone can be used while charging.

4. When the battery is fully charged, the bar stops scrolling. Disconnect the charger from the AC outlet and then from the phone.

1.2 - Switching the phone on (or off) -

Press and hold the end key for a few seconds.

The indicators described below are shown when the phone is ready for use, with no characters keyed in. In this state, the phone is in 'standby mode'.



Your telephone number, the date and time and the network name is shown on screen.

1.3 Antenna

Your device has an internal antenna.


Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimizes the antenna performance and the battery life.

1.4 – Display


1.4.1 – Standby Display


When the phone is in standby mode the screen can include the following indicators and symbols:


1. Network mode indicator.

2. Network signal strength - 

3. Battery charge status:

a. The following icon indicates that you have a fully charged battery - 

b. The following icon indicates that the battery needs to be recharged - 

c. The following icon indicates that the battery is being charged - 

4. Clock.

5. Network name.

6. Date.


1.4.2 – Active Mode–

When the phone is in active mode the following symbols might be displayed:


 -Indicates that you have received a new message in your inbox.

 -Indicates that you have received a new e-mail.

 -Indicates that you have received new voice messages.


 - Indicates that you have activated the alarm.

 - Indicates an unsecured network (found in scan).

 - Indicates a secured network.

 - Indicates the phone is on ringer mode.

 - Indicates phone is in “silent” mode (ringer is turned off).

 - Indicates both ringer and vibrator are turned on.

 - Indicates vibrator is tuned on while ringer is silenced.

The main display will include:

1. Network mode indicator.
2. Network signal strength.
3. Battery charge status.
4. Indicators.
5. Network name.
6. Clock.
7. Main display.
8. The left selection key.
9. The right selection key – Menu key.

1.5 – Menu Shortcuts

Your Y-phone allows you to access applications without using the phone menu.

The following applications are accessible through shortcuts:

- To access the calendar press the right button on the five way scroller button.
- To access the Message editor press the left button on the five way scroller button.
- To see the most recent incoming calls press the “down” button on the five way scroller.
- To access the ringer profile options press the “up” button on the five way scroller.
- To access and edit the network profiles press the center button on the five way scroller.

2.0 Y-PHONE CALL FUNCTIONS

2.1.0 – Making a Call

1. Enter the phone number, including the area code. For international calls, enter the country code, the area code without the leading 0, if necessary, and the phone number.
2. To call the number, press the call key. To increase the volume in a call, press the volume up key and to decrease press the volume down key.
3. To end the call or to cancel the call attempt, press the end key, or close the phone.

2.1.1 - Making a call using the phone book directory

1. To open the Contacts list directory, press right menu key and go to contacts.
2. Scroll down through names until requested name is highlighted.
3. Press left select key to call or press Send to call.

2.2 Speed dialing

Speed dialing is a quick way to call frequently used numbers. You can assign speed dialing keys to 200 phone numbers. Assign a phone number to one of the speed-dialing keys, 3 to 9. To call the contact by Speed dialing, press the selected number's speed dial digits and the desired telephone number will be shown on screen.

2.3.0 Answering and ending a Call

2.3.1 Answering a call

In order to answer an incoming call you may follow either of the following steps:

1. Press the Send key.
2. Flip open the phone.

2.3.2 - Ending a call

In order to end a call you may follow either of the following steps:

1. Press the End key.
2. Close the phone flip.

2.3.3 – Ignoring an incoming call

To reject an incoming call, press the end key or close the phone.

2.4. Call waiting

To answer the waiting call during an active call, press the send/call key.

The first call is put on hold. To end the active call, press the send key.

To activate the Call waiting function, see section 2.4.2.6.

2.5 – Putting a call on Hold

To put a call on hold press the “send” button, in order to resume the call press

the send button once more.

2.6 – Forwarding a call

Incoming calls can be forwarded to another number under the following conditions:

- No answer – calls are forwarded if they are answered for 18 seconds.
- Busy – calls are forwarded if phone is not idle.
- “Do Not Disturb” – Calls are automatically forwarded. No indication of an incoming call is given.

2.7 – Transferring a call

- To transfer a call, press the “Send” key, then dial the new number and press the “Send” key again.
- To transfer immediately, press the “Cancel” key.
- To transfer after receiving reply, wait for the call to be answered, consult and then press “Cancel” key.
- To abort the transfer (if there is no reply), press the “Send” key to return to the original call.
- When transferring calls with consultation, you can switch back and forth between calls by pressing the “Send” key.

2.8 – Voicemail

When you are unable to answer a call, callers are forwarded to a voicemail service where they can leave you a message. To access your messages, call the number supplied by your service provider.

When you receive a new voice message, a message will pop up on screen –

“You have received a new voice message” To call the service press the left selection key, or press “cancel” (right selection key) to cancel.

3.0 – Y-PHONE MENU NAVIGATION

The main menu can be accessed by pressing the Menu key (right selection key). The menu will display all the Y-phone applications.

Menu options include:



3.1 - Profiles.



3.2 - Phone book.



3.3 - Messaging.



3.4 - Settings.



3.5 - Status.



3.6 - Call log.



3.7 - Accessories.



3.8 - Administration.

Operation Instructions:

- ❖ To choose an application, scroll to view (use the up, down, left and right keys on the five way scroller key to navigate). Each application is indicated by a different image, as the image is highlighted the name of the application will be displayed. Select the application by pressing the left selection key.
- ❖ To return to the first screen press the Cancel (right selection) key.



3.1 - Profiles

This is an application for finding and creating a connection with an available network. When a connection is made, the network name appears on the next screen.

Profile menu options:

1. Select Profile.
2. Edit Profile.
3. Add Profile.
4. Delete Profile.

Note: to activate, change and delete the profile use the Menu Operation Instructions.



3.2.0 – Phone book

In the phone memory you can save different types of phone numbers and short text items for a contact. The first number you save is automatically set as the default number.

Options in the Phone Book Menu:

- 3.2.1. Find.
- 3.2.2. Options.
- 3.2.3. Add Contact.
- 3.2.4. Delete All.

3.2.1 - Find

In the dialog window the name and internet address of the contact's name can be included. To find a contact's name, use the up and down keys on the five way scroller key to navigate. A status bar highlights the name, select the name, or press the central key on the five way scroller, the options menu will appear on screen.

❖ To return to the first screen, press the end key.

❖ To cancel, press the right selection key.

3.2.2 - Options

The contact's name will appear as the title of this sub-menu.

This sub-menu includes the following options:

3.2.2.1. Call.

3.2.2.2. Show Details.

3.2.2.3. Edit.

3.2.2.4. Delete.

3.2.2.1 - Call

Choosing the call option enables the caller to call any of the contact's inputted numbers directly.

If the contact information includes only one telephone number then pressing the call button will immediately connect the user with the contact. If the contact information includes more than one telephone number then the call menu will open in to a sub menu that will list all of the selected contact's available numbers. Use the up and down keys on the four way scroll button to see all the available telephone numbers. Use the select key or the enter key to make the call.

3.2.2.2 – Edit

After choosing the requested contact's name the edit section allows the user to edit the information saved.

Choosing the edit option for a contact will open a screen showing all the available information for the selected contact – Name, Home Number (default), Cellular Number, Email and Fax. Use the up and down buttons on the five way scroller buttons to select the detail you wish to edit. The area becomes highlighted when chosen. After editing the selected data, the information can be saved or deleted by pressing the left or right selection keys.

3.2.2.3 – Delete

Choosing this option will allow the user to delete a contact and/or any data connected with the chosen contact. Delete clears a contact's name from the phone book. You will be asked if you wish to delete the selected contact from the phone book – press left selection key to confirm or right selection key to cancel and keep the contact information.

3.2.2.4 - Add Contact

In the Contacts section, you can store and manage contact information, such as names, phone numbers and email addresses.

To add a contact's name, fill in the available fields and press the central key on the five way scroller to save. The contact information is saved in the phone memory, after which it is accessible in the Phone Book.

To clear the field press the left selection key ("Clear").

3.2.2.5 – Delete All

Selecting the delete all option will allow you to delete the entire phonebook contact list.

Warning: choosing the delete option will delete the entire phonebook and contact list information.

3.2.2.6 – Save to Server

This option allows you to make a back up file of your entire contact list. Selecting this option will cause the phone to send a copy of your entire contact list to the server for future use.

WARNING: Selecting this option when you have an empty contact list could cause your contact list to be deleted if you later choose to load contact list from server.

3.2.2.7 – Load from Server

Selecting this option causes the server to send you any contact list previously sent to the server. Thus ensuring that if you accidentally delete your contact list a back up is available.

WARNING: Selecting this option when you recently sent the server an empty contact list could cause your contact list to be deleted.



3.2.3 - Messages

The Messages menu includes all the messaging options – Text messages, Voice messages and Emails. Here you can manage your emails, access voice and text messages and create new messages.

3.2.3.1 – Text Messages

Here you can read incoming messages, create and delete messages and manage your inbox. All messages are organized into folders.

These options are available:

3.2.3.1.1 - New Message.

3.2.3.1.2 – Inbox.

3.2.3.1.3 – Drafts.

3.2.3.1.4 – Sent Messages.

3.2.3.1.5 – Outbox.

Each of the above options opens a sub-menu.

3.2.3.1.1 - New Message

This section allows you to create a text message multimedia message or email and to save it in a folder or send it.

3.2.3.1.1.1 - Message Editor

In the Message Editor the user will be able to create messages using the phone keypad. An indicator on the top right of the display shows when you are writing text using traditional text input.

Writing a message:

- Press a number key (-), repeatedly until the desired character appears.
- Punctuation marks and symbols – press the *, # , 1 and 0 keys in order to access punctuation marks and symbols.
- To switch between upper and lower cases continue pressing the number key until the correct case appears.
- To insert a number in letter mode, press and hold the number key.
- To switch between letter and number mode, press and hold.
- If the next letter is located on the same key as the present one, wait until the cursor and enter the chosen letter.
- To erase a character press “clear”. Press and hold to clear more than one character.

After completing the message, you may press the right button to cancel and return to previous screen, the left button in order to clear the field and the center key on the five way scroller button to send.

If you choose to send the message, you are asked if you wish to save your message in drafts, if so, press the yes button, or press no to continue to sending options.

3.2.3.1.1.1 – Sending Options

This screen includes empty fields which can be filled by the user – the user can send the message to up to seven numbers. This can be done in two ways, using the up and down keys on the five way scroller, highlight one of the empty fields manually fill each field with the selected phone number, or, select the “find” key which will open the phonebook and allow you to select a contact from the list. After selecting all the message destination numbers select the “send” key (central key on the five way scroller button) to send the message.

3.2.3.1.2 – Inbox

The inbox folder keeps all messages sent to the phone. A status bar highlights the title of the selected message. Navigate using the up and down keys on the five way scroller and press “select”(left button) to view chosen message.

To return to inbox press the right key.

When you receive a message, you will receive notification on the main screen – “Received New Message” the new message will appear as the first message in your inbox.

3.2.3.1.3 – Drafts

This folder contains message templates. Select the preferred message template from the available list by using the up and down keys on the five way scroller.

Press the “select” (left) key to use template or the right key to cancel.

3.2.3.1.4 – Sent Messages

This folder contains all the messages recently sent from the phone. Use the up and down keys on the five way scroller button to navigate and select the preferred message.

Press the “select” (left) key to use template or the right key to cancel.

3.2.3.1.5 – Outbox

The outbox folder is a temporary storage folder for messages that have not yet been sent by the user, once the messages are sent they are automatically removed from the outbox in to the “Sent” folder. Use the up and down keys on the five way scroller button to navigate and select the preferred message. Press the “select” (left) key to use template or the right key to cancel.

3.2.3.2 – Email Services

If you select this option and have not set up your e-mail account, please contact your “Y-phone” service provider in order to receive your email settings.

If you have set up your email account you will be able to access the following services:

3.2.3.2.1 – Open Mailbox

When you open the mailbox, the device asks if you want to connect to the mailbox (Connect to mailbox?).

To connect to your mailbox and retrieve new e-mail headings or messages, select the left “Yes” key or “No” to cancel.

Here you can view new and old email messages, you can also forward emails to an additional address.

3.2.3.2.2 – Create New Email

Here you can use the message editor to create new e-mail messages. Fill in the necessary fields – which address you wish to send to, how many addresses to include etc... use the up and down keys on the five way scroller button to move between the message fields. When you have completed your message, use the central button on the five way scroller to send or use the left selection key to clear fields. To cancel press the right (“cancel”) selection key.

WARNING: E-mail messages may contain malicious software or otherwise be harmful to your device or PC.

3.2.3.3 – Voicemail

When you receive a voice message, it will be forwarded to your voicemail inbox; here you can see the time of call and caller information.

To access messages use the up and down keys on the five way scroller button. To select the message press the left selection key or press the right “cancel key” to cancel. In the message window the message details will be listed, use the left selection key to go access the message options or use the right selection key to cancel and return to the previous window.

In the options window you can –

1. Call voice mail.
2. Delete message.

Use the up and down keys on the five way scroller button to scroll between options, and use the left selection key to make your selection. To cancel use the right (“cancel”) selection key.

For more information on voicemail services see chapter 2.8.



3.2.4 - Settings

This menu includes all the necessary options for your phone’s settings:

3.2.4.1 – Set Time

3.2.4.2 – Ring/Vibrator

3.2.4.3 – Ringer Type

3.2.4.4 – Wallpapers

3.2.4.5 – Brightness

3.2.4.6 – Call Waiting

3.2.4.7 – Block My Caller ID

3.2.4.8 – Refuse No Caller ID

3.2.4.9 – Speaker Volume

3.2.4.10 – Ring tone Volume

3.2.4.1 – Set Time

Using the number key pad enter the correct time and date.

- To save the settings, Press the select key. (Left button)
- To cancel the settings, press the right key.

3.2.4.2 – Ring/Vibrator

This menu allows the user to select the phone ring and vibrator settings the options are:



3.2.4.2.1 – Ring.



3.2.4.2.2 - Ring and Vibrate.



3.2.4.2.3 – Vibrate Only.



3.2.4.2.4 - Silent.

Use the up and down keys on the five way scroller button to navigate between the options. When preferred option is highlighted press the “Select” (left) key to save or press the right key to cancel.

3.2.4.3 – Ring tones

Select the ring tone of your choice for voice calls messages and alarms.

3.2.4.3.1 – Voice call Ring tones

Using the up and down keys on the five way scroller button navigate between the ringer type options, choose by pressing the “Select”(left) button or press right key to cancel.

3.2.4.3.2 – Message Tones

Using the up and down keys on the five way scroller button navigate between the ringer type options, choose by pressing the “Select”(left) button or press right key to cancel.

3.2.4.3.3 – Alarm Tones

Using the up and down keys on the five way scroller button navigate between the ringer type options, choose by pressing the “Select”(left) button or press right key to cancel.

3.2.4.4 – Wallpapers

Select a wallpaper for your phone screen by choosing from among the available wallpaper images and themes (may vary between models). Use the up and down keys on the five way scroller button to navigate between the available options, press “select” (left) key or right key to cancel, or choose preview option to preview selected wallpaper.

3.2.4.4.1 – Preview wallpaper

Selecting the preview option will open a new screen containing the chosen wallpaper, to go ahead with wallpaper choice press the “select” (left) key, or press the right key to cancel and return to wallpaper options.

3.2.4.5 – Brightness

Adjust the screen brightness by using the up and down keys on the five way scroller button. Press the “select” button to keep adjusted brightness level and return to previous menu, or press the right key to cancel adjustment and return to previous menu

3.2.4.6 – Call Waiting

If you have an incoming call while a call is already in progress, the network will notify you of a new call “waiting”. Press Yes to answer the call waiting, or No to deny the call. To return to previous call press the “send” key.

3.2.4.7 – Block My Caller ID

This network service allows you to block your phone number from the person you are calling. So that they will not be able to identify you. To select block my caller ID and return to previous screen press the “select” key or press the right key to cancel and return to previous menu.

3.2.4.8 – Refuse No Caller ID

This network service allows you to block incoming calls from unidentified numbers. To select Refuse No Caller ID and return to previous screen press the “select” key or press the right key to cancel and return to previous menu.

3.2.4.9 – Volume Control (Speaker Volume)

Adjust the volume by using the up and down keys on the five way scroller button. Press the “select” button to keep adjusted volume level and return to previous menu, or press the right key to cancel adjustment and return to previous menu.

3.2.4.10 – Ring tone Volume

Adjust the volume by using the up and down keys on the five way scroller button. Press the “select” button to keep adjusted volume level and return to previous menu, or press the right key to cancel adjustment and return to previous menu.



3.2.5 – Status

The status section deals with connection options and diagnostics. A few menu selection options are available:

3.2.5.1 Current Status

This screen shows the current status of the phone connections. Current Status shows an access point -The point where your phone connects to the Internet. To return to previous screen press right key.

3.2.5.2 Diagnostic Status

This screen shows the status of all phone connection configurations. Press the left “select” key to refresh the right set to zero or press the right key to return to the previous screen.



3.2.6 – Call Log

The phone registers missed, received, and dialed calls. In the Call Log, for each communication event, you can see the sender or recipient name, phone number

and access point.

The Call Log menu includes the following options:

3.2.6.1 - Missed Calls

3.2.6.2 - Received Calls

3.2.6.3 - [Dialed](#) calls

[3.2.6.1 - Missed calls](#)

Shows a list of recent incoming phone numbers or contact names from calls which were not answered.

You may choose one of the following options:

[3.2.6.1.1 – Show Details](#)

Show missed call details – shows phone number, contact name (if available) and time of call. To return to options press right selection key.

[3.2.6.1.2 – Save](#)

This option allows you to save a missed call number or detail in your contact's list. Fill in the fields and press the "select" (left) key. The contact card is saved in the phone memory after which it is available for viewing in the Phone Book. (See section 3.2.2.4)

[3.2.6.1.3 – Delete](#)

Selecting the delete option will erase the call number and/or contact name from the missed calls log.

Press the Left selection key to delete the information and return to previous menu, or the right selection button to cancel and return to previous menu.

[3.2.6.2 - Received Calls](#)

Shows a list of the phone numbers or contact names from which you have most recently received calls.

3.2.6.2.1 – Show Details

Show received call details – shows phone number, contact name (if available) and time of call. To return to options press right selection key.

3.2.6.2.2 – Save

This option allows you to save a received call number or detail in your contact's list. Fill in the fields and press the “select” (left) key. The contact card is saved in the phone memory after which it is available for viewing in the Phone Book. (See section 3.2.2.4)

3.2.6.2.3 – Delete

Selecting the delete option will erase the call number and/or contact name from the received calls log.

Press the Left selection key to delete the information and return to previous menu, or the right selection button to cancel and return to previous menu.

3.2.6.3 - Dialed Calls

Shows a list of phone numbers that you have most recently called or attempted to call.

3.2.6.3.1 – Show Details

Show dialed call details – shows phone number, contact name (if available) and time of call. To return to options press right selection key.

3.2.6.3.2 – Save

This option allows you to save a dialed number or detail in your contact's list. Fill

in the fields and press the “select” (left) key. The contact card is saved in the phone memory after which it is available for viewing in the Phone Book. (See section 3.2.2.4)

3.2.6.3.3 – Delete

Selecting the delete option will erase the call number and/or contact name from the dialed calls log.

Press the Left selection key to delete the information and return to previous menu, or the right selection button to cancel and return to previous menu



3.2.7 - Accessories

In this menu you can manage phone accessories including games and organizer utilities. This menu includes:

3.2.7.1 – Alarm Clock

3.2.7.2 – Calendar

3.2.7.3 – Calculator

3.2.7.4 – Games

3.2.7.1 – Alarm Clock

Three options are available to the user – alarm on, daily alarm, and alarm off.

3.2.7.1.1 – Alarm On

This option allows user to set a one time alarm – the alarm goes on and off at selected time and goes off. Use the up and down keys on the five way scroller button to adjust the alarm times. To turn off alarm press right selection key.

3.2.7.1.2 – Daily Alarm

This option allows user to set the alarm to go on and off at a selected time and repeat itself daily without further need for setting. Use the up and down keys on

the five way scroller button to adjust the alarm times. To turn off alarm press right selection key.

3.2.7.1.3 – Alarm Off

This option turns off and cancels all previous alarm settings – to set alarm to “off” press the left select key or press the right select key to cancel and return to previous menu.

3.2.7. 2 - Calendar

The calendar section allows you to keep track of appointments meetings and their time and date. You can also set a calendar alarm to remind you of upcoming events. The calendar is set according to the time and date settings entered in to the phone (see section 3.2.4.1).

- To select a different month or year use the up and down keys on the five way scroller button.
- To change the selected day, use the left and right keys on the five way scroller.
- To make an entry on the selected date press the left selection key, or press the right selection key to cancel and return to previous screen.

3.2.7.2.1 – Editor/Reminder

Through this option you can add a reminder to the selected date, simply write the requested reminder/appointment. If the selected date already has an entry then you will be able to edit or delete the entry. To return to the previous screen press the right selection key or press the left selection key to save and continue to “Set Time” sub menu.

3.2.7.2.1.1 – Set Time

This option allows you to set a time for the calendar entry/reminder, if chosen a

reminder will pop on the main screen on the selected date.

To set time use the five way scroller button, when time is set press the left selection key to save and return to main calendar menu or press the right selection key to cancel and return to previous menu.

3.2.7.3 - Calculator

Opens mathematical calculator. Use number keypad to enter numbers, use the five way scroller for the following computations:

Up: +

Down: -

Left: *

Right: /

Press left selection key to see result and right selection key to cancel and return to previous screen.

3.2.7.4 - Games

This menu allows you to navigate between the games available on this phone (games may vary). To select a game use the up and down keys on the five way scroller and press the left selection key. Press the right selection key to cancel and exit games menu.



3.2.8 – Administration

This menu handles the phone's administration and LCD settings.

It includes:

3.2.8.1 – Misc. Menu

This menu focuses on tCPUcpu settings and profiles and includes the following sub-menus:

3.2.8.1.2 – Profiles

3.2.8.1.3 – Software Version

Shows the software version details, press right selection button to return to previous menu.

3.2.8.2 – LCD Settings

This section deals with LCD settings. **Note:** After changing the LCD settings the phone will have to be restarted in order for the changes to take effect.

3.2.8.2.1 – Power Save

Press the left selection key to begin the power save mode, press the right selection key to cancel and return to previous menu.

3.2.8.2.2 – LCD Off

This sub menu enables the user to select the time period after which the LCD will be turned off. There are five options – one minute, two minutes, three minutes, four minutes and five minutes. Use the up and down keys on the five way scroller to navigate between the options and press the left selection key to make the selection. Press the right selection key to cancel and return to previous screen.

3.2.8.2.3 – Backlighting

This sub menu allows the user to select the backlighting options – keep the backlighting on at all times or for selected time periods. To navigate between options use the up and down keys on the five way scroller button and press the left selection key to save the selection. To cancel and return to the previous screen press the right selection key.

3.2.8.3 – Language Settings

This option allows the user to change the phone's display language. The language options are: English, French and Spanish.

To select/change the language use the up and down keys on the five way scroller in order to navigate between the options. Press the left selection key to select and change settings or press the right selection key to cancel and keep previous settings.

4.0 - TECHNICAL INFORMATION

Feature Specification

Frequency Range Lowband

2412-2462 MHz (TX)

2412-2462 MHz (RX)

Battery Voltage

3.7 Volt

Copyright TCM – TCM Mobile LTD.

This device TCM-YPHONE TM-01 (FCC ID No. VN9YP1) complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: changes or modifications to the equipment could void the user's authority to operate the equipment.

