

English - T5000096AAAA 02

by Alcatel



[www.tctmobile.com](http://www.tctmobile.com)

OT-C550a

OT-C560a

OT-C630a

OT-C635a

by Alcatel

## Table of contents .....

<b>Safety and use .....</b>	<b>4</b>
<b>General information.....</b>	<b>8</b>
<b>1. Your mobile .....</b>	<b>10</b>
1.1 Keys .....	11
1.2 Main screen icons.....	13
<b>2. Getting started .....</b>	<b>14</b>
2.1 Set-up .....	14
2.2 Switching your telephone ON .....	17
2.3 Switching your telephone OFF .....	17
<b>3. Calls .....</b>	<b>18</b>
3.1 Making a call.....	18
3.2 Receiving a call .....	19
3.3 Call handsfree .....	19
3.4 Available options during the call.....	20
3.5 Record dialogue .....	20
3.6 Handling multiple calls.....	21
<b>4. Menu.....</b>	<b>23</b>
4.1 Accessing the menu .....	23
4.2 Organising functions .....	23
<b>5. Extras .....</b>	<b>27</b>
5.1 Calculator .....	27
5.2 Money converter .....	27
5.3 Organizer .....	27
5.4 World time .....	29
5.5 Voice recording.....	30
5.6 Alarm clock .....	31
5.7 Auto Switch On/Off.....	31

<b>6. Media album .....</b>	<b>32</b>
6.1 Memory status.....	32
6.2 Sound album .....	32
6.3 Images album .....	33
6.4 Links.....	34
<b>7. Entertainment.....</b>	<b>35</b>
7.1 Games .....	35
7.2 JAVA .....	35
<b>8. WAP.....</b>	<b>36</b>
8.1 Homepage .....	36
8.2 Bookmarks .....	36
8.3 Go to URL .....	36
8.4 Settings .....	36
8.5 Push Inbox .....	38
8.6 Options.....	38
<b>9. Message .....</b>	<b>39</b>
9.1 Create message.....	39
9.2 Inbox .....	41
9.3 Drafts.....	44
9.4 Templates .....	44
9.5 Outbox .....	44
9.6 Settings .....	44
<b>10. Settings .....</b>	<b>47</b>
10.1 Time and date .....	47
10.2 Sounds.....	47
10.3 Security .....	47
10.4 Quick profiles .....	49
10.5 Autonomy.....	49
10.6 Display .....	49
10.7 Network .....	50
10.8 Shortcuts.....	50
10.9 Language .....	50

<b>11. Camera</b>	<b>51</b>
11.1 How to	51
11.2 Camera menu	52
11.3 Settings	54
11.4 Help	55
<b>12. Directory</b>	<b>56</b>
12.1 Directory	56
12.2 Delete all	57
12.3 Default directory	57
12.4 Status	57
12.5 Copy	57
12.6 Add a contact	58
<b>13. Call Information</b>	<b>59</b>
13.1 Call times	59
13.2 Call settings	59
13.3 Call list	61
<b>14. Organizer</b>	<b>62</b>
14.1 Creating a new event	62
14.2 Deleting old events	62
14.3 Managing events	63
14.4 Events views	63
<b>15. Shortcuts</b>	<b>64</b>
<b>16. Quick profiles</b>	<b>65</b>
16.1 Quick profiles	65
16.2 Sounds	65
16.3 Display	65
<b>17. Character table</b>	<b>67</b>
<b>18. Telephone warranty</b>	<b>69</b>
<b>19. Accessories</b>	<b>71</b>
<b>20. Troubleshooting</b>	<b>72</b>

## Safety and Use .....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained in this manual.

### • TRAFFIC SAFETY:

Given that studies, which show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area.
- check with your dealer or car manufacturer to make sure that the car's electronics devices are well shielded.

### • CONDITIONS OF USE:

You are advised to switch off your cellphone from time to time to optimise performance.

Switch the phone off before boarding an aircraft to avoid prosecution.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. When using the phone you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

Do not let small children use the phone without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to unfavourable environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -20°C to +55°C. Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.



Do not open or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not paint it.

Use only Alcatel batteries, battery chargers, and accessories that are compatible with your phone model (see page 71). T&A Mobile Phones Limited or its affiliates disclaim any liability for damage caused by the use of other batteries.

Your phone should not be disposed of in a municipal dump. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing videos games on your phone or enabling a flashing-lights feature on your phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15- minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15 minute-break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

**In European Union countries:**

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

**In non European Union countries:**

Items of equipment with this symbol are not to be thrown into ordinary bins if your country or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

• **PRIVACY:**

Please note that you must respect the laws and regulations in force in your country regarding taking photographs and recording sounds using your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

• **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off. Take precautions with the battery and do not attempt to open the battery (chemical substances may cause burns).

Do not pierce, disassemble nor cause a short-circuit in a battery.

Do not burn or dispose of a used battery in household waste or store it at temperatures above 60 °C.

Batteries must be disposed of in accordance with locally applicable environmental legislation.

Batteries should not be used for any other purpose than the one intended. Never use damaged batteries or not recommended by T&A Mobile Phones Limited and/or its affiliates.

• **CHARGERS:**

Mains powered chargers will operate within the temperature range: 0°C to 40°C.

The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. They should be used for this purpose only.

**Electrical characteristic of power supply** (depending on the country):

Travel charger:

Input: 100-240 V, 50/60 Hz, 100 mA

Output: 4.5 V, 350 mA

Battery: Lithium 3.7 V 650 mAh



• **RADIO WAVES:**

THIS MOBILE PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC) or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone. Before a phone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model phone when tested is:

OT-C550a: 1.09 W/kg for use at the ear and 0.96 W/kg for use close to the body.

OT-C560a: 0.87 W/kg for use at the ear and 1.3 W/kg for use close to the body.

OT-C630a: 1.17 W/kg for use at the ear and 0.72 W/kg for use close to the body.

OT-C635a: 1.34 W/kg for use at the ear and 0.6 W/kg for use close to the body.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 2 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.


Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

## General information .....

- **Website:** [www.tctmobile.com](http://www.tctmobile.com)
- **Wap address:** [wap.my-onetouch.com](http://wap.my-onetouch.com)
- **Hot Line Number:** see the "T&A Mobile Phones Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

Your telephone is a transceiver that operates on GSM networks with 850 and 1900 MHz bands.

The  marking indicates that your telephone complies with "1999/5/EC (R&TTE)" directive and that the accessories concerned comply with current EC directives. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: [www.tctmobile.com](http://www.tctmobile.com).



T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); and additional patents are pending worldwide

### Protection against theft <sup>(1)</sup>

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering \*, #, 0, 6, # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

### Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.


April 2006

<sup>(1)</sup> Contact your network operator to check service availability.


## Your mobile .....
  
### Keys in idle mode



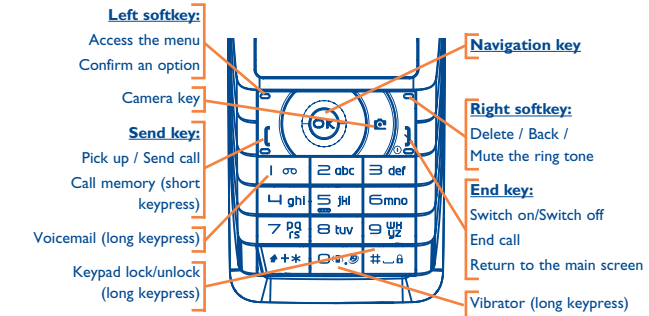



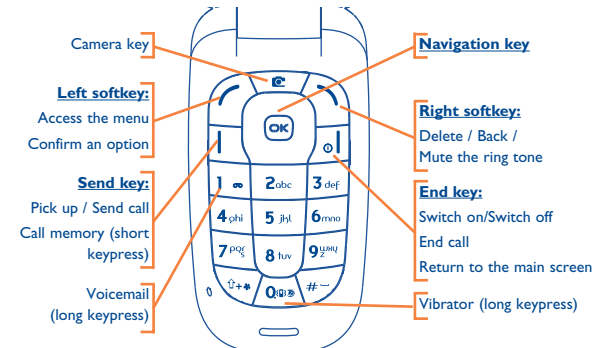



#### OT-C550a/560a






















#### OT-C630a/635a



## 1.1 Keys

-  (1) Switch ON/OFF the phone (long keypress) from the main screen
-  (2) Hang up
-  Reject an incoming call
-  Return to the main screen (long or short keypress)
-  (1) Call / Pick up
-  (2) Access the call memory (short keypress)
-  Scroll, adjust the volume during a call
-  (1) Left softkey:
-  (2) Options / Menu / Confirm
-  Display a message received

-  (1) Right softkey:
-  (2) Return to the previous screen (short keypress)
-  Mute the ringtone of an incoming call
-  In edition mode :
-  Delete a character (short keypress)
-  Delete all characters (long keypress)
-  Consult your voicemail (long keypress)
-   Change the capitalisation in the following order : Ab/ab/AB (short keypress)
-  Access Symbols table (long keypress)
-   Validates the active word and/or insert a Space (short keypress)
-  Accesses to the languages list (long keypress)
-   Switch between: T9/Multitap/123 (short keypress)
-  Enters the number 0 (long keypress)
-   abc to  Insert letters (short keypress) or digits (long keypress) in edition mode













(1) OT-C550a/560a.

(2) OT-C630a/635a.

(1) OT-C550a/560a.

(2) OT-C630a/635a.

## 1.2 Main screen icons <sup>(1)</sup>


-  **Battery charge level.**
-  **Vibrator mode:** your phone vibrates (but the alarms and low battery sound will be played anyway).
-  **Silence mode:** your phone neither rings, beeps nor vibrates (but the alarms and low battery sound will be played anyway).
-  **Unread message.**
-  **Message list is full:** your terminal cannot accept any new messages. You must access the message list and delete at least one message on your SIM card (see page 44).
-  **Missed call.**
-  Voicemail message arrived.
-  **Call forwarding activated:** your calls are forwarded (see page 60).
-  **Alarm programmed** (see page 31).
-  **Signal strength indicator.**
-  **Keypad lock.**
-  **National roaming.**

 
<sup>(1)</sup> The icons and illustrations in this guide are provided for informational purposes only.

# 2 Getting started .....

## 2.1 Set-up


### Inserting the SIM Card <sup>(1)</sup>

You must insert your SIM card in order to use your phone. To insert your SIM card, turn off your phone by holding down the  key.

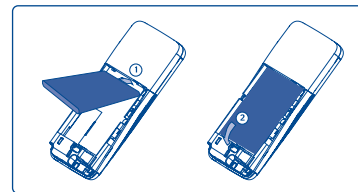

Fit the SIM card with the chip facing downwards. Slide the SIM card into its compartment. Push the SIM card with your finger to release it. Close the card holder and slide it into the locked position.

### Inserting and removing the battery

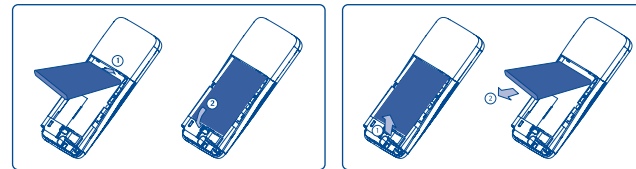 


Align the tab on top of the battery with the slot in the battery compartment of your phone. Press down the battery until the latch is securely in place.


<sup>(1)</sup> Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volts cards can no longer be used. Please contact your operator.



### Charging the battery


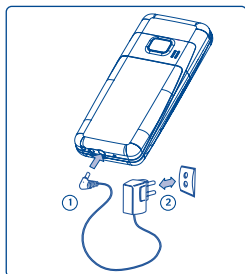 


Connect the charger

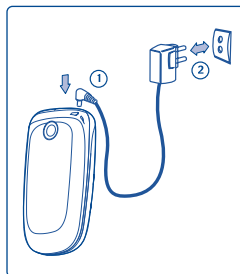 


- An animation will be on while charging.
- It may take several minutes before the charging starts.
- Do not force the plug into the socket.
- The battery icon will take several minutes before the level is shown.
- **Before** connecting to the charger, make sure the battery is inserted correctly.
- The mains socket must be near to the phone and easily accessible (avoid power extension cables).
- Before using your phone for the first time, fully charge your battery (approximately 3 hours). Only use Alcatel chargers. We recommend charging the battery once a day so that the phone operates at an optimum level. You are advised to fully charge the battery (🔋).

### Precautions during use



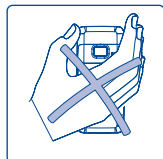 
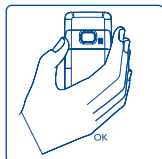 


Your telephone is equipped with a built-in antenna. For optimal reception and operation, do not touch the upper part of your telephone.


### Remove the back cover

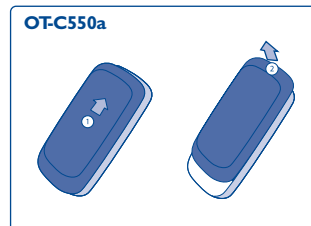 

### Replace the back cover

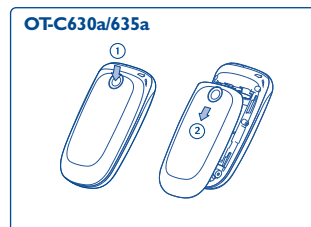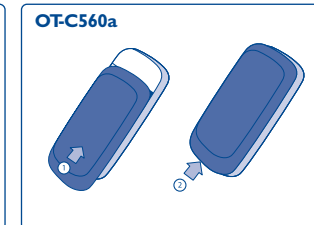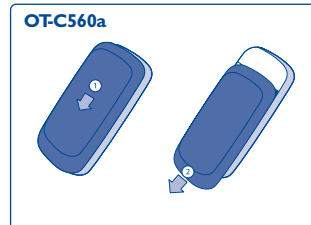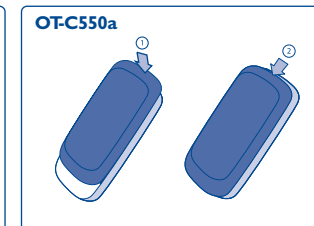    

## 2.2 Switching your telephone ON

Hold down the  key. A welcome animation is displayed for 2 seconds. Type your PIN code if necessary, then confirm with the left softkey.



If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone. It should be stored in a safe place when not needed.

## 2.3 Switching your telephone OFF



From the main screen, press the  key (long keypress).

# 3 Calls .....


## 3.1 Making a call

From the main screen, enter the phone number using the keypad.

Press  to dial and  or the right softkey to hang up.



To call a recently dialed/answered number, from the main screen, press  to view numbers in “incoming call”, “outgoing call” and “missed call” lists. Scroll and select the desired number or name and press  to send the call.

### Making an international call

Hold down the  key. When “+” is displayed, enter the country and area codes, then complete the number and send the call.

### Calling a number from the directory

Press  in idle mode to access the directory. Select the desired phone number and press .

In the product directory, for all contacts with more than one number, only the default number will be selected for the contact. To select a different number, press  or .

### 3.2 Receiving a call

- To pick up a call, press the **[** key.
- To reject a call, press the **⏏** key.
- To mute a ringing tone instead of answering a call, press **"Mute"**.
- To answer a new call during a call when the **"Call Waiting"** function is activated, press **[**. The first call is put on hold. To end the active call, press **⏏**.



If you have activated **"Call forward"**, the call is diverted to a number or voicemail.

If you have selected **"Any Key Answer"**, you can accept a call by pressing any key (except **⏏**).

### 3.3 Call handsfree

Dial the desired number then press **OK** or **"Options"**, then press **"Activate h/free"**, finally press **OK** or **"Select"**.

If you are already on the phone, hold down the **[** key to switch to handsfree mode and back.

### 3.4 Available options during the call

You can press **"Options"** or the **OK** key for some of the following functions in a call : **"Activate h/free"**, **"Record dialog"**, **"Call list"**, **"Directory list"**, etc.

**Activate h/free** • Use hands-free option.

**Mute/Unmute** • Activate/deactivate the microphone.

**Record dialog** • Record a conversation during a call.



You can adjust the sound level during a call pressing the **▼** or **▲** navigation key.

### 3.5 Record dialogue

To record a conversation during a call, select **"Record dialog"** and press **OK**. Press **OK** again or the left softkey to save and end recording. If you select **"Mute"** and then **"Record dialog"**, only the caller's voice is recorded.

## 3.6 Handing multiple calls <sup>(1)</sup>

### 3.6.1 Making a second call

You can make a second call during an active call or with a call on hold.

When first call is put on and the second number is dialed, you can press **OK** to access following options:

- Switch calls**
  - To toggle between calls (you can also press ▼ or ▲ to switch calls).
- Do you want to forward a call?**
  - To connect two calls. You are disconnected when the transfer is completed.
- Conference**
  - To introduce the caller into a conference call.

### 3.6.2 Answering a second call

When you receive a second call while being already in communication, the phone emits a beep alert and the screen displays **Call waiting**. You can then press **[** to answer the call (the first one is put on hold), press **]** to reject the call and press **OK** or the left softkey to open the options list.

If you select **“Accept call”**, you’ll answer the incoming call, or **“End call”** to end the current call, then answer the incoming call.



This service is limited to two current communications (one active and the other on hold).

<sup>(1)</sup> Contact your network operator to check service availability.

### 3.6.3 Answering a third call

If you are in a call and have one call on hold, you can also receive a third call. To do so, you must either end one of the calls or introduce the new caller to a conference.

Press **]** to reject the call or press **OK** or the left softkey to open the options list.

You can select **“Accept call”** to answer the incoming call, or **“End call”** to end the current call, then answer the incoming call. This service is limited to two current communications (one active and one on hold).

### 3.6.4 Multi-party call

It allows you to speak with up to five people at the same time.

Make a first call with someone, then a second one.

Press **OK** or the left softkey, select **“Conference”** in option list. Repeat the process until five members are connected.

Select **“Remove party”** to disconnect a member of the conference, or select **“Private call”** to have a private call with someone only (other members are put on hold).

Press **]** to disconnect all calls at once.



If there is an incoming call during the conference call with less than five members, you can accept this new call and add it to the conference. If five members are already connected, you can answer the call, but not add it to the conference.

## 4 Menu .....

### 4.1 Accessing the menu

From the main screen, press the **OK** key, the menu is displayed as a list with small icons beside each function.

Select the item you require using the navigation keys (**▼**, **▲**), then press again the left softkey to confirm.

### 4.2 Organising functions

For each of the listed functions, refer to the appropriate chapter in this User Guide.

**Directory:**

Access/create directory files and make calls from your directory.

**Settings:**

Set the time, date, language, security mode, answer mode, etc

**Messages:**

Read, write and send your messages. View your messages in your inbox, outbox. Adjust the settings and activate/deactivate SMS CB message reception.

**Camera:**

Access the camera function.

**WAP:**

Access WAP function.

**Entertainment:**

Play the 2 games embedded in your telephone.

**Media album:**

Access the picture and sound album.

**Extras:**

Access the Alarm and Calculator functions.

**Organizer <sup>(1)</sup>:**

Create, store and manage events.

**Shortcuts <sup>(1)</sup>:**

Configure shortcuts which you access more frequently.

**Profiles <sup>(1)</sup>:**

Settings of Profiles, Display and Sounds.

<sup>(1)</sup> OT-C630a/635a.

• **CALL INFO** 

- Call list
- Call settings
- Call times

• **DIRECTORY** 

- Delete all
- Add a contact
- Default directory
- Copy to phone
- <Delete All>
- Quick call
- Status

• **SETTINGS** 

- Sounds
- Quick profiles
- Display
- Time and date
- Language
- Autonomy
- Shortcuts
- Security
- Network

• **MESSAGES** 

- Create message
- Inbox
- Outbox
- Drafts
- Templates
- Settings

• **CAMERA** 

• **WAP** 

- Homepage
- Bookmarks
- Go to URL
- Settings
- Push inbox

• **ENTERTAINMENT** 

- Java
- Games

• **MEDIA ALBUM** 

- Images
- Sound
- Links
- Memory status

• **EXTRAS** 

- Organizer
- Alarm clock
- World time
- Calculator
- Money converter
- Auto. on/off
- Voice recording

• **ORGANIZER** <sup>(1)</sup> 

• **SHORTCUTS** <sup>(1)</sup> 


• **PROFILES** <sup>(1)</sup> 

- Profiles
- Sounds
- Display

<sup>(1)</sup> OT-C630a/635a.

# 5 Extras

## 5.1 Calculator

You can use this built-in calculator to perform basic calculations. Numbers are entered with the keypad and operators with the navigation keys indicated on the screen. Press and hold  to get the decimal point. Confirm with **OK** or **#\_0**.

## 5.2 Money converter

You can convert a sum from one currency into another using the exchange rate of your choice.

## 5.3 Organizer <sup>(1)</sup>

You can create, store and manage events in your organizer. When the organizer alert is “**On**”, a beep or a sound recorded alerts you when an event is due.

The organizer shares the mobile memory capacity with other features (directory, picture album, sound, etc.). Please check the memory available in your phone.

<sup>(1)</sup> OT-C550a/560a.

## 5.3.1 Creating a new event

Choose “<New>” in “Events”, then the type of event to create (Meeting, To Do, Holiday).

Enter time, starting/ending date of the event and name it.

Set a reminder and a frequency: alerts will be triggered at the chosen time.



Reminder only applies to Meeting and To Do events. It will be updated when changing time zones.

## 5.3.2 Deleting old events

You can delete past events. Enter the starting date and press **OK** twice to delete all events preceding this date.

To delete all events set in your organizer, enter a starting date several years ahead (e.g. 31st of December 2010) to make sure all events preceding this date are deleted at once.

## 5.3.3 Managing events

Select an event in the list and press **OK** or the left softkey to access following options:

- Delete** • Delete the selected event.
- Change** • Change the selected event.
- Change Sound** • Change the sound associated with the alarm type of the selected event.

Changing a repeating event will modify all instances of this event.

### 5.3.4 Events views

Events stored in your organizer can be displayed in “**Day view**”, “**Week view**” and “**Month view**”. Select a view format and press the left softkey, then use ▼ or ▲ to display the previous or next day, week or month.

## 5.4 World time

You can set and display both the local clock and remote clock in the foreign time zone of your choice.



Once you choose to display the local and foreign clock on your main screen, the image you selected as wallpaper will no longer be displayed there, but will be replaced with the standard International clock wallpaper.

### 5.4.1 World time

Press ▼ or ▲ to set the option “**On**” or “**Off**”. When “**On**”, you can display the zone of your choice.

### 5.4.2 Local settings

- Set time**
  - Set time by pressing the appropriate keys.
- Time zone**
  - Move ▼ or ▲ to select the time zone corresponding to your area.
- Daylight saving**
  - Set the daylight saving option “**On**” or “**Off**” for the local time zone.

### 5.4.3 Switch local/ foreign

Display local to foreign zone and vice-versa.

### 5.4.4 Foreign settings

- Time zone**
  - Move ▼ or ▲ to select the time zone of your choice.
- Daylight saving**
  - Set the daylight saving option “**On**” or “**Off**” for a foreign time zone.



Alarms, reminders, programmed events are time zone independent! If you set an alarm or an event at 9:00AM in time zone A, it will still ring or be due at 9:00AM if you change to time zone B.

## 5.5 Voice recording

 
You can make recordings of up to 12 minutes in length, depending on the memory status.

Select “**<New>**” to begin the recording. When finished, press the left softkey to stop and save recording. You can then either enter a name for the new sound file or accept the default name proposed by pressing **OK**.

Once a sound file is selected, it is played automatically in a loop. Press **OK** to access the options. You can “**Play recording**”, “**Rename**” or “**Delete**”, “**As ringtone**” or “**As SMS/MMS ringer**”.

A flashing warning sign indicates that your recording will soon reach the maximum authorized length. If you do not stop recording, a red envelope icon informs you that your recording is too long to be sent via MMS.





## 5.6 Alarm clock

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to three separate alarms and choose whether or not the alarm should repeat.

When the alarm rings, press any key to stop it (except if the snooze mode is on).

### Snooze

You can set the snooze mode “On” or “Off”.

 
When the alarm rings and the snooze mode is “On”:

- Press any key (except the right softkey) to stop the ringing temporarily. The alarm will ring again around 7 minutes later.
- Press the right softkey to stop the ringing and the alarm repetition.

The snooze mode is automatically deactivated after 9 alarm repetitions.

## 5.7 Auto Switch On/Off

You can set your mobile phone to switch itself on or off at pre-set times. It'll extend your phone's battery life, let you not be disturbed at given times and have your phone switch back on automatically.



# 6 Media album.....

It contains options related to the multimedia features of your mobile phone.

## 6.1 Memory status

 
You'll find the percentage of memory available in your phone. Various features share the memory capacity: pictures, sounds, recorded memos and voice tags for voice commands, stored messages, directory and organizer entries, games, etc.

You can only delete sounds or pictures in “My melodies” or “My images”. When “List full” appears when saving a new file you must delete an item to add a new file.

## 6.2 Sound album

Manage sound files stored in your mobile phone.

- View all**
  - Access all your sound files in a single list.
- Own melodies**
  - Access your downloaded sound files.
- Prot. melodies**
  - Access the list of copyright protected sample sounds.
- Recordings**
  - Access the list of sound recordings.



Select a sound file and press **OK** to access the following options:


- Send by**
  - Send the selected sound files via E-mail, MMS and VMS.
- As ringtone**
  - Set the selected sound as ringer.
- As SMS/MMS ringer**
  - Set the selected sound as message ringer.
- Rename**
  - Rename the selected sound files.
- Delete / Delete all**
  - Delete the selected sound file or all files at once.

### 6.3 Images album

Display and modify the images stored in your mobile phone.

- <Get more...>**
  - Download new image files.
- View all**
  - Access all your image files in a single list.
- My photos**
  - Access the photos taken with the phone's embedded camera.
- My images**
  - Access the images you have downloaded.
- Prot. images**
  - Access the list of copyright protected sample images.
- Icons**
  - Access the list of icons you have downloaded.

Select an image and press **▼** to view the image. Pressing **OK** to access options below:

- Send by...**
    - Send the selected image file via E-mail and MMS.
  - Set as wallpaper**
    - Set selected picture as wallpaper.
  - Modify**
    - Modify selected picture.
      - Add text: add text to the selected picture.
      - Add frame or icon: add a frame or an icon to the selected picture.
      - Undo: undo the last modification made on the picture or reset,
      - Send: send the selected picture via E-mail or MMS.
      - Save: save the picture with all the changes you have applied.
  - Rotate**
    - Rotate the selected image of -90 degrees, +90 degrees or +180 degrees.
  - View**
    - Display the selected file.
  - Properties**
    - Display its properties (size, format, resolution, etc.).
  - Rename**
    - Rename the selected image.
-  Pictures protected by copyright cannot be sent.

### 6.4 Links

Service provider may require you to use an Internet access point (IAP) for your default access point. The access point may be configured when you start your device.

## 7 Entertainment .....

### 7.1 Games

Brick game

### 7.2 JAVA

#### 7.2.1 Applications

- HeliMinator
- Rocket

#### 7.2.2 Settings

##### Network access

- List of network profiles available for games and applications. This list comprises the current WAP profiles and specific profiles for games and applications. To select a profile, go to the list, press **OK** and choose **"Select"**.

##### Auto launch

- To activate/deactivate automatically Java application launch.

## 8 WAP .....

You can access services supplied with your network, such as news, sports, weather, etc.

### 8.1 Homepage

This is a link to the first WAP site you access when launching a WAP session.

### 8.2 Bookmarks

You can store your favorite WAP site addresses, rename them and access them quickly from the list. Press the left softkey while browsing and then select **"Bookmarks"**.

### 8.3 Go to URL

Enter a WAP site address and connect directly when selecting it.

### 8.4 Settings

To access WAP sites, you must first configure a WAP connection profile.

#### 8.4.1 Select Profile

Select one of the available profiles, then define the connection settings for each of them.

### 8.4.2 Browser options

Activate or deactivate the downloading of images attached to WAP pages. Selecting “**Off**” will speed up the global down loading time of the pages browsed.

### 8.4.3 Rename profile

Rename selected profile.

### 8.4.4 Cache

Empty an area of the phone's memory where the pages browsed during a WAP session are stored.

### 8.4.5 Network

- Homepage**
  - Change name and address of the homepage.
- Network access**
  - Select one of the data profiles you have defined.
- Bearer**
  - Select the type of network used by the selected profile when launching a connection.
- Proxy address and Proxy port**
  - Define a gateway address and port number when launching a WAP connection using the selected profile.
- Security**
  - Display the list of installed security Certificates, Session information or the Current certificate.

## 8.5 Push Inbox

Read and manage messages automatically sent to you by network and/or your operator.

In some cases, a red "@" sign will be displayed on the screen to inform you that you have received a new push message.

## 8.6 Options

While browsing, press the left softkey to access following options:

- Homepage**
  - Access the default homepage.
- Back**
  - Go back to the previously browsed page.
- Forward**
  - Go to the next browsed page.
- Refresh**
  - Reload the currently browsed page from its original server.
- Set as homepage**
  - Save currently browsed WAP page as the default homepage.
- Save as ...**
  - Save images embedded in the pages that are displayed in the Picture album.
- Exit**
  - End a WAP session.
- Bookmarks**
  - Save this link as bookmark.
- Go to URL**
  - Go to URL input.
- Settings**
  - Go to WAP settings.
- Push Inbox**
  - Check push inbox.

## 9 Messages

You can create, send, receive, view, edit, and organize SMS, MMS and e-mail messages. You can also receive data, service messages and broadcast messages <sup>(1)</sup>.


### 9.1 Create message

#### 9.1.1 New Email

You can send emails to one or several recipients at a time, including with an attachment such as a JPEG picture.

- <Add contacts>**
  - Select the recipient(s) of your e-mail, provided that you have entered e-mail addresses for contacts saved in directory.

- Add media**
  - Design your message. Enter the subject and text, then press left softkey to access following options:
    - Add sound or Add graphic: attach a sound or a picture to your e-mail,
    - Send now: send it to the selected recipient(s),
    - Modify: redesign your e-mail.

 You can only attach one picture (JPEG, GIF or BMP) or one sound at a time. If you accept an incoming call while writing an e-mail, the menu is closed and the phone goes back to main screen when you hang up.

<sup>(1)</sup> Contact your network operator or internet service operator to check service availability.

#### 9.1.2 New SMS

To compose and send an SMS, select **"New SMS"**, then enter text. You can select **"<Add recipient>"** to add one recipient from the directory or enter a phone number directly. Select **"Add sound"** to attach a melody, **"Add graphic"** to attach an image or an animation, **"Input Language"** to change the language for typing.

#### 9.1.3 New MMS

When you select **"New MMS"**, you are first asked to enter the contact to whom you wish to send MMS. You can select one or more existing contacts or enter a new mobile phone number or a new email address.

Then you will be asked to **"Add media"**. You can add a Picture, add Text, add Sound, Send the message or access the MMS options. Use **▼** or **▲** to move from one option to the next and press **OK** or the left softkey to access the menu.

- New MMS**
  - Add a Picture, a Text and/or a Sound.
- Send**
  - Send MMS to selected recipient(s).

Following options are available when creating new MMS message:

- Add Slide**
  - Create a new slide and add it to your slide show.
- Edit subject**
  - Edit and change or enter the subject of your message.
- Next slide**
  - Move to the next/previous slide.
- Delete slide**
  - Delete selected page.

- Save as draft** • Save your message as a draft that you can edit, complete and send later on.
- Save as template** • Save your message as a template
- Preview MMS** • Preview the slide show you have created.
- Slide duration** • Change the value of slide duration.

#### 9.1.4 VMS

From the main screen, select “**Message**” then “**New VMS**” or select the recipients then to create VMS. You can send a VMS to one or more number at one time. Three ways to reply a VMS: SMS, MMS and VMS.

#### 9.1.5 Postcard <sup>(1)</sup>

You can access this menu from main screen, Camera feature, Album feature, Message function and Directory.

## 9.2 Inbox

### 9.2.1 Email

You can connect your mailbox and download the e-mail headers (sender and subject lines) from the server. You may then choose to retrieve the corresponding e-mails.

<sup>(1)</sup> Contact your network operator to check service availability.

### 9.2.2 SMS

It includes sent and received messages.

Press **OK** or the left softkey to access following options:

- Delete** • Delete selected message.
- Edit SMS** • Edit, modify and resend SMS to someone.
- Reply by SMS** • Reply to sender.
- Move to Spam box** • Move the selected message in the Spam Box.
- Add to black list** • Add sender's phone number to Firewall blacklist.
- Move to Archive** • Store messages in the phone memory.
- Forward to** • Forward selected message.
- Call handsfree** • Call sender of the message handsfree.
- Call back** • Call the sender of the message (operator-dependent).
- Store number** • Save the number of the sender if it is attached to the message.
- Extracted nb.** • Extract a number included in the message itself.
- Store melody** • Save the melody that was sent with the SMS.
- Store graphic** • Save the graphic and/or animation that was sent together with the SMS.

### 9.2.3 MMS

Your MMS inbox includes all read and unread MMS, Notifications, Delivery and Read reports. To read a message, select it and press **OK**. Press **OK** or the left softkey to access following options:

- Play message**
  - Switch back to automatic mode: the MMS is then played as a continuous slide show.
- Forward**
  - Forward selected MMS to someone else.
- MMS details**
  - Display the details of the selected message (size, data, etc.).
- Delete**
  - Delete selected MMS.

Once you have opened an MMS, press the left softkey to access following options:

- Play message**
  - Switch back to automatic mode: the MMS is then played as a continuous slide show.
- Next/previous slide**
  - Move to the next or previous slide. You can also press **▼** or **▲** when viewing the MMS in manual mode. Note that this option only appears if the MMS contains more than one slide.
- Save picture**
  - Detach the picture of the current slide and save it in the Picture album.
- Save sound**
  - To detach the sound of the current slide and save it in the Sound album.
- Close**
  - To close the MMS and go back to the list of options.

Do NOT delete notifications before you have retrieved the MMS, or you will not be able to retrieve the MMS. Notifications are automatically deleted once you have received the full MMS.

### 9.3 Drafts

You can save a message as draft manually. You can **Play, Edit, Send**, view **Details** and **Delete** drafts.

### 9.4 Templates

It includes all messages saved as templates. You can **Play, Edit** and **Delete** them.

### 9.5 Outbox

It includes sent and unsent messages. You can **Play, Delete, Send, Forward** or view the **Details** of all these messages.

Saved messages can only be sent from **Draft** or **Outbox**.



You can NOT recover an item (whether message, notification or report) you have deleted. Press **“Back”** to cancel deletion.

### 9.6 Settings

#### 9.6.1 My dictionary

You can enrich T9 dictionary used for writing messages. Select **“New”**, enter the word of your choice and simply press **OK** to save it.

### 9.6.2 SMS

Configure your SMS settings.

- SMS centre**
  - Select your default SMS center.
- Signature**
  - Add a signature at the end of your message.
- Validity period**
  - Select the time your messages are to be stored in the SMS center.
- Auto save SMS**
  - Messages sent in the Archive menu will be automatically saved.
- Reply path**
  - Transmit the number of your SMS message center together with the message.
- Delivery report**
  - Inform you via SMS whether your own SMS was received or not.

### 9.6.3 Email

#### Rename profile

Rename an account from its default name.

- Modify profile**
  - Modify the configuration of the settings of your profile.
- E-mail server**
  - Configure the settings of your e-mail service.
- Advanced**
  - Access advanced options.
- Network access**
  - Configure your connection to internet before consulting your e-mails.

### 9.6.4 MMS

Contact your operator to receive information described in the present section and enter them as given.

### 9.6.5 Broadcast SMS

Manage reception of SMS broadcasts regularly transmitted to all subscribers on the network.



# 10 Settings.....

You can change the settings related to each available option (sounds, time and date, security, etc.) and customize your phone.

## 10.1 Time and date

Set time and date after selecting your “**Time zone**” and activate “**Daylight saving**”.

## 10.2 Sounds <sup>(1)</sup>

Adjust the volume of your ringer, select a ringer tone and key tones, choose messages ringer, audio settings, animation sounds and set sounds/vibra alerts.

## 10.3 Security

This function allows you to access the features relating to the security of your mobile phone and data you store there.

### 10.3.1 Change codes

Change your PIN and PIN2 codes, as well as call Barring code.

If you enter a wrong PIN2 code 3 times, your SIM card is blocked. To unblock it, request the PUK2 code from your operator or retailer. If you enter an incorrect PUK code 10 times in a row, the SIM card will be blocked and unusable. If it happens, contact your operator or retailer.

<sup>(1)</sup> OT-C550a/560a.

### 10.3.2 Public names

Manage a specific names list called “**Public names**” list, and restrict calls to this list via “**Call restriction**” option.

This feature is subscription dependent and requires a PIN2 code.

- Public names**
  - Consult, edit and modify your Public Names list via a PIN2 code.
- Call restriction**
  - Restrict the calls to Public names list when Public only is selected.

### 10.3.3 Call barring

This function can limit the use of your phone to specific calls. It can be applied to incoming calls and/or outgoing calls.

It is network dependent and requires a specific call barring password supplied by your operator.

### 10.3.4 Information Privacy

Protect, with a code of your choice, your messages, directory or call information and prevent them from being read by someone else using your phone.

### 10.3.5 PIN protection

When On, you will be asked to enter your PIN code when switching your phone on.

You cannot change your PIN code if this option is Off.

## 10.4 Quick profiles <sup>(1)</sup>

A profile is a group of predefined settings that allows you to quickly adapt your phone to your environment.

## 10.5 Autonomy

It gives you a direct access to the features that consume the most energy and allows you to improve your battery life by quickly changing each setting. Deactivating most of the functions in the Autonomy menu will increase battery life.

## 10.6 Display <sup>(1)</sup>

### 10.6.1 Backlight intensity

Choose different levels of back light intensity.

### 10.6.2 Wallpaper

Set the wallpaper of the main screen “**On**” or “**Off**”. The wallpaper is not displayed in idle when the World time option is “**On**”.

### 10.6.3 Screen saver

If you activate this option, the screen saver will be displayed a little while after the main screen. You can choose a picture or an animation as your screen saver.

### 10.6.4 Contrast

Choose different levels of contrast.

<sup>(1)</sup> OT-C550a/560a.

## 10.6.5 Backlight

Backlight is activated when receiving incoming calls or messages and browsing menus.

## 10.7 Network

Contact your phone operator to have full information about GPRS availability over its network and for an appropriate subscription. You might also need to configure your phone with GPRS settings supplied by your operator.

## 10.8 Shortcuts <sup>(1)</sup>

You can configure shortcuts to the features and options you access most frequently.

### Voice command

Set up a direct access to a specific function by linking it to a voice tag. You can associate a voice command to most functions supported by hotkeys.

## 10.9 Language

Select a language for all menu texts.

<sup>(1)</sup> OT-C550a/560a.







## Camera.....

Your phone features a built-in digital camera. You can take pictures, store them in your phone or transfer them to your PC, use them as wallpaper or send them to your friends via MMS or E-mail.

### 11.1 How to...

Press the  key and camera application is automatically launched.

Please see following for detailed operations of various keys in camera mode.

	Zoom in / out
	Increase/decrease exposure compensation
	Take a picture
	Exit Camera mode and return to main screen
	Activate/deactivate self-timer
	Activate/deactivate burst mode
	Toggle through the image resolutions
Left softkey	Access options menu
Right softkey	Return to previous screen

Press the  key to take the picture. Pictures are saved automatically.

### Using self-timer

In Camera mode, press .


Adjust your picture and press  to start the countdown of 10 seconds (this value cannot be changed).

Press the left softkey to stop the timer and go back to preview mode.

A sound is played three seconds before the picture is taken, then again when it's actually shot.

### 11.2 Camera menu

#### 11.2.1 My photos

When you take a picture and save it, the file is stored in your “**My photos**” folder. Use up and down navigation keys to move through the list. To view full-screen image, press . Press the right softkey to access following options:

- Send by...**
  - Transfer an image to another device.
- Set as wallpaper**
  - Set the selected photo as wallpaper.
- Modify**
  - Launch image editing program.
- Properties**
  - Display Properties of the selected image: Name, Size (in Kb), Resolution and Format.
- Rotate**
  - Rotate an image.
- View**
  - Display the picture in full screen.
- Rename**
  - Rename an image file.
- Delete all**
  - Delete all files in your “**My photos**” folder.
- Delete**
  - Delete only the selected file from your “**My photos**” folder.

### 11.2.2 Slide Show

Launch a slide show of the contents in “**My photos**” folder.  
During the slide show, each photo will be displayed briefly on the screen.  
Press any key to end the slide show and return to the previous screen.

### 11.2.3 Continuous shoot

You can take a “burst” of 9 photos with one press of **OK** or **ⓧ** key.  
Note that to use continuous shoot, the resolution must be set to screen size.

When the camera finishes processing the images, they are displayed on screen as thumbnails. You may then press the left softkey to access following options:

- |                   |  |
|-------------------|--|
| <b>Save</b>       | • Pictures are saved automatically.      |
| <b>Send by...</b> | • Send the selected image by MMS, Email. |
| <b>Delete</b>     | • Delete selected image.                 |
| <b>Delete all</b> | • Delete all the images in the group.    |

When you save or delete an image from the group, it is removed from the thumbnail view and stored in the “**My photos**” folder.

### 11.2.4 Picture orientation

Choose how photos are displayed in your photo album so that they can be viewed correctly.

### 11.2.5 Frames

You can take photos with decorative frames. The Standard frames folder contains frames that were loaded on your mobile phone when you purchased it.

### 11.2.6 Color mode

You can apply a number of different visual effects to your images.

### 11.2.7 Night mode

When activated, it allows you to take pictures in low-light situations.

### 11.2.8 Self-Timer

You can take a time-delayed picture so that you can get into the frame as well. To use Self-Timer, select “**On**” in this menu, return to the viewfinder mode, frame your picture, and then press **OK**.

### 11.2.9 Brightness

Adjust the exposure compensation of your mobile phone’s screen.

## 11.3 Settings

### 11.3.1 Resolution

Choose the size of the photos you take. The options are:

- VGA (640 x 480)
- QVGA (320 x 240)
- Screen size - Wallpaper (128 x 160)

### 11.3.2 Picture quality

You can adjust the quality of the pictures taken with your camera: Low, Medium, High.

### 11.3.3 Sound settings

Set Alert and Shutter sounds.

### 11.3.4 Default settings

Reset all camera settings to their default values.


## 11.4 Help

It provides you with on-screen help in taking pictures with your mobile phone.



# 12 Directory

The directory allows you to store phone numbers and names either in the SIM memory and/or the phone memory. When entering new names, they will only be added to the directory you have selected.

## 12.1 Directory

You can manage the names, telephone numbers, and e-mail addresses of your contacts. You can also access the Names list directly from the main screen by pressing .

Press the key for the letter that you want to be displayed. The first contact starting with this letter is selected in the list.


You may also press the  key then enter the first letter of the contact name you are searching and press  to go directly to that name.

You can also use the “<Search>” item in the directory.

Select “**Show**” to access the list of numbers or files saved in this directory and “<New>” to create a new file.

Files stored in the directories can be personalized with a picture and/or a sound.

This function is only available in the product directory.

Select a contact and press  or the left softkey. When you have a call from this contact, the telephone will display/play his/her picture and/or sound associated with this contact.

## 12.2 Delete all

Delete all files at once. This option only applies to the product directory, not to the SIM directory.

## 12.3 Default directory

It allows you to select the directory you want to use (SIM or product). Press ▼ or ▲ to select a directory. Files in the selected directory can then be copied into the other, using the options “**Copy to SIM card**” or “**Copy to phone**”. Your phone only manages one directory at a time and will ignore all information relative to the other.

## 12.4 Status

Display the total number of files you have saved in each directory, of the total number available.

## 12.5 Copy

You may copy the content of your SIM card into your phone. If you cancel or abort the automatic copy of your SIM directory when you first switch on your phone, you can do it manually using this option.

Selecting this option twice will duplicate all the names.

## 12.6 Add a contact

### 12.6.1 Adding files in SIM directory

Select “<New>” in the list, enter the name and number of your choice, then the type of number assigned to the name (Phone, Fax or Data) and press **OK** to store this file in your directory.

A number is limited to 40 digits, depending on your SIM card. Entering international prefix, country and area codes allows you to dial a number from any location.

Choose a file in your SIM directory and press **OK** to access the options.

### 12.6.2 Adding files in product directory

Select “<New>” in the list, enter name (up to 20 Latin characters) and then select the Number type. Numeric fields can hold up to 40 digits and one “+” sign and alphanumeric fields (e-mail and note) feature up to 50 Latin characters. Each file can feature a maximum of 5 numeric fields.

Choose a file in your phone directory and press **OK** to access the options.

### 12.6.3 Adding picture and sound to contacts

Files stored in the product directory can be personalized with a picture and/or a sound.

Select a file and press **OK** or the left softkey “**Options**”. In the list, choose “**Select picture**” to add a picture from the Picture album and “**Select melody**” to open the list of ringers and add a melody.

## 13 Call Information .....

### 13.1 Call times

You can track the cost and duration of your calls. Most options mentioned below are subscription dependent.

#### 13.1.1 Data counters

GPRS counter allows you to monitor the amount of data received via GPRS sessions. This feature is subscription and network dependent.

#### 13.1.2 Call counters

It is used for keeping track of your incoming and outgoing GSM calls. Please note that GSM call counters do not include WAP connections.

### 13.2 Call settings

Set all the options related to call: call forwarding, call waiting, etc.

#### 13.2.1 Info at call ending

Set “**On**” or “**Off**” the systematic display of the length and/or cost of each call when hanging up.

#### 13.2.2 Call waiting

##### With GSM call

It applies to **All calls**, **Voice calls**, **Fax calls** and **Data calls**.

##### With GPRS call

Set “**On**” or “**Off**” the call waiting for voice incoming calls while a GPRS connection is ongoing.

#### 13.2.3 Caller ID

“**Show identity**” or “**Hide identity**” to your correspondent.

#### 13.2.4 Call Forward

Divert incoming calls to your mailbox or to a number (whether in your directory or not) and apply to: **Data calls**, **Voice calls** and **Fax calls**.

##### Unconditional

- Divert all incoming calls.

##### Conditional

- Choose when you want to divert incoming calls: If no reply, If not reachable or If busy.

##### Status

- Display the status of all call forwarding.

#### 13.2.5 Voicemail box <sup>(1)</sup>

Enter your voice mailbox numbers (if not available on your SIM card). In some cases, you might have to enter two numbers: one to listen to your mailbox, the other to forward calls.

<sup>(1)</sup> Contact your operator for more information.

### 13.2.6 IP prefix

Set the prefix provided by your operator (up to 10digits can be stored) in order to make IP calls.

### 13.2.7 Auto redial

If the person you are calling is busy, when On, your phone will automatically redial the number until a successful connection is made or until the maximum number of attempts is reached (10).

## 13.3 Call list

It provides you with the list of outgoing and incoming calls, attempts at auto redialing and call details.

- Reset**
  - Reset the whole list at once and delete all listed calls.
- Missed calls**
  - List phone numbers of missed calls.
- Received calls**
  - List phone numbers of Received calls.
- Outgoing calls**
  - List phone numbers of Outgoing calls.

# 14 Organizer <sup>(1)</sup> .....



You can create, store and manage events in your organizer. When the organizer alert is “On”, a beep or a sound recorded alerts you when an event is due.

The organizer shares the mobile memory capacity with other features (directory, picture album, sound, etc.) Please check the memory available in your phone.

## 14.1 Creating a new event

Choose “<New>” in “Events”, then the type of event to create (Meeting, To Do, Holiday).

Enter time, starting/ending date of the event and name it.

Set a reminder and a frequency: alerts will be triggered at the chosen time.



Reminder only applies to Meeting and To Do events. It will be updated when changing time zones.

 
## 14.2 Deleting old events

You can delete past events. Enter the starting date and press **OK** twice to delete all events preceding this date.

To delete all events set in your organizer, enter a starting date several years ahead (e.g. 31st of December 2010) to make sure all events preceding this date are deleted at once.

<sup>(1)</sup> OT-C630a/635a.





### 14.3 Managing events

Selecting an event in the list and press **OK** or the left softkey to access following options:

- Delete**
  - Delete the selected event.
- Change**
  - Change the selected event.
- Change Sound**
  - Change the sound associated with the alarm type of the selected event.

Changing a repeating event will modify all instances of this event.

### 14.4 Events views

Events stored in your organizer can be displayed in “**Day view**”, “**Week view**” and “**Month view**”. Select a view format and press the left softkey, then use **▼** or **▲** to display the previous or next day, week or month.



## 15 Shortcuts <sup>(1)</sup> .....



 
You can configure shortcuts to the features and options you access most frequently.

### Voice command

Set up a direct access to a specific function by linking it to voice tag. You can associate a voice command to most functions supported by hotkeys.



<sup>(1)</sup> OT-C630a/635a.



## 16 Quick profiles <sup>(1)</sup> .....



### 16.1 Quick profiles

A profile is a group of predefined settings that allows you to quickly adapt your phone to your environment.

### 16.2 Sounds

Adjust the volume of your ringer, select a ringer tone and key tones, choose messages ringer, audio settings animation sounds and set sounds/vibra alerts.

### 16.3 Display

#### 16.3.1 Backlight intensity

Choose different levels of back light intensity.

#### 16.3.2 Wallpaper

Set the wallpaper of the main screen “**On**” or “**Off**”. The wallpaper is not displayed in idle when the World time option is “**On**”.

#### 16.3.3 Screen saver

If you activate this option, the screen saver will be displayed a little while after the main screen. You can choose a picture or an animation as your screen saver.

#### 16.3.4 Contrast

Choose different levels of contrast.

#### 16.3.5 Backlight

Backlight is activated when receiving incoming calls or messages and browsing menus.

<sup>(1)</sup> OT-C630a/635a.

## 17 Character table .....

To enter a word in normal mode, press the key corresponding to the desired letter several times until the letter appears.

Key	Upper case	Lower case
0	., - ? ! ' @ : 1	., - ? ! ' @ : 1
2 abc	A B C 2 Ä Å Æ Ç	a b c 2 ä å æ ç
3 def	D E F 3 È É Ê Ë Ì	d e f 3 è é ê ë ì
4 ghi	G H I 4 Ğ Ğ Î Ï	g h i 4 ğ ğ î ï
5 jkl	J K L 5 Ķ Ļ Ľ	j k l 5 ķ Ļ ļ
6 mno	M N O 6 Ñ Ñ Ò Ó Ø	m n o 6 ñ ñ ò ó ø
7 pqr	P Q R S 7 Ŗ Ŗ Š Š	p q r s 7 ŕ ŕ š š
8 tuv	T U V 8 Ţ Ţ Û Ü Ü	t u v 8 ț ț û ü ü
9 wxyz	W X Y Z 9 Ý Ž Ž Ž	w x y z 9 ý ž ž ž
□□□	Switch between: T9/Multitap/123 (short keypress) Enters the number 0 (long keypress)	
✦✦✦	Change the capitalisation in the following order : Ab/AB/ab (short keypress) Access Symbols table (long keypress)	
#_â	Validates the active word and/or insert a Space (short keypress) Accesses to the languages list (long keypress)	

This table is given for information purposes only. It may vary depending on the language and the model.

The predictive mode allows you to type your messages more quickly without the need to press the same key several times.

Simply press once the key corresponding to the letter you need, and the phone will suggest the most common words from the dictionary.

The word may change as you type - don't worry about what's on the screen until after you finish the word. Confirm the suggested word by pressing the #\_â key.

If the finished word is wrong, use the □□□ key to cycle through other words in the dictionary. If your word is missing, add it using the normal mode (ABC).

### Symbols bar

Hold down the ✦✦✦ key to display the symbols bar.

Press the ▲ key to go left,

Press the ▼ key to go right.

Press the left softkey to confirm and insert the symbol.

	1	2	3	4	5	6	7
A	@	;	:	,	.	!	?
B	(	)	?	i	ı	+	=
C	-	*	<	>	\	~	“
D	☉	#	§		¥	£	\$
E	€	฿	%	&	-	/	^
F	{	}	[	]	/	/	/

## 8 Telephone warranty .....

Congratulations on choosing this mobile phone - we hope that you will be completely satisfied with it.

Your phone is guaranteed against any deviation from technical specifications for a period of twelve (12) months from the date specified on your original invoice <sup>(1)</sup>.

The warranty terms defined in the manual also apply to the battery and accessories but for a period of six (6) months <sup>(2)</sup> from the date of purchase shown on your original invoice.

Under the terms of this warranty, you must inform your vendor (or any maintenance centre approved by T&A Mobile Phones Limited or its affiliates, which are listed on our website [www.tctmobile.com](http://www.tctmobile.com)) without delay, of any defect and present the invoice given to you at the time of purchase. The vendor or maintenance centre will decide whether to replace or repair, as appropriate, all or any part of the telephone or accessory found to be defective; this warranty covers the cost of parts and labour but excludes any other costs. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

Servicing under the terms of this warranty, especially repair, modification or replacement of products, shall entitle to a THREE (3) month warranty unless there are statutory provisions to the contrary.

This warranty shall not apply to damage or defects to your telephone and/or accessory caused by:

- 1) failure to follow the instructions for use or installation,
- 2) failure to comply with technical and safety standards applicable in the geographical area where the equipment is used,
- 3) improper maintenance of batteries and other sources of energy, and of the overall electric installation,
- 4) accidents or consequences of theft of the vehicle in which the telephone is transported, acts of vandalism, lightning, fire, humidity, infiltration of liquids, inclement weather,

<sup>(1)</sup> The warranty period may vary if overriding statutory provisions are applicable in your country.

<sup>(2)</sup> The life of a rechargeable Alcatel telephone battery in terms of conversation time, standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your Alcatel phone during the first six months after purchase and for approximately 200 more recharges.

 
- 5) connecting or integrating the phone into equipment not supplied or not recommended by T&A Mobile Phones Limited or its affiliates, without their express written consent for such,,
- 6) any servicing, modification or repair performed by individuals not authorised by T&A Mobile Phones Limited or its affiliates, the vendor or the approved maintenance centre,
- 7) use of the equipment for a purpose other than that for which it was designed,
- 8) normal wear,
- 9) malfunctions caused by external causes (e.g., radio interference from other equipment, power or telephone line voltage fluctuations),
- 10) modifications made to the equipment even if required by changes in regulations and/or modification of network parameters,
- 11) faulty connections resulting from unsatisfactory radio transmission or caused by the absence of radio relay coverage.

In accordance with the applicable law, T&A Mobile Phones Limited or its affiliates guarantee your product against hidden defects (defects inherent in the design, manufacture, etc.).


The above provisions constitute the only claims enforceable against the manufacturer and vendor in the event of defects in the phone or accessory.

There are no express warranties, whether written or oral, other than this printed limited warranty. All implied warranties, including without limitation the implied warranties of merchantability or fitness for a particular purpose, are limited to the duration of this limited warranty. In no event shall T&A Mobile Phones Limited or its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to loss of profits, commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.


## 19 Accessories <sup>(1)</sup> .....

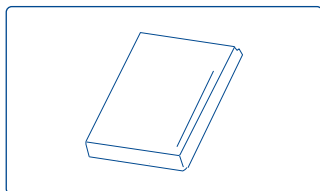

 Battery  
BC 500023 <sup>(2)</sup>  
BC 5000157 <sup>(3)</sup>

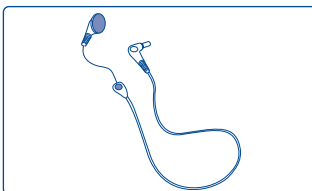

Headset  
M13

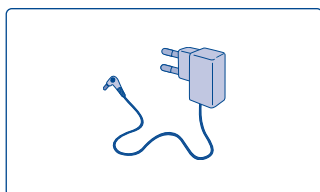 

Charger  
C55



Only use your telephone with Alcatel batteries, chargers and accessories compatible with your model.


<sup>(1)</sup> Depending on availability.

<sup>(2)</sup> OT-C550a/560a.

<sup>(3)</sup> OT-C630a/635a.


## 20 Troubleshooting.....

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge the battery (  ) for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.

and carry out the following checks:

### My mobile phone does not switch on

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

### My phone does not respond since several minutes

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

### My screen is difficult to read

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

### My mobile phone turns off by itself

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level
- Check that the function "Auto OFF" is not activated (see page 31).

#### **My mobile phone does not charge properly**

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet hissing sound.
- Make sure charging is carried out under normal conditions (0°C +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible

#### **My mobile phone does not connect to a network**

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 50)
- Try connecting at a later time if the network is overloaded

#### **SIM card error**

- Make sure the SIM card was correctly inserted (see page 14)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

#### **Unable to make outgoing calls**

- Make sure you have dialled a valid number and pressed the **[ ]** key
- For international calls, make sure you have entered the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 48)

#### **Unable to receive incoming calls**

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 60)
- Make sure that you have not barred certain calls

#### **The caller's name does not appear when a call is received**

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

#### **The sound quality of the calls is not optimal**

- You can adjust the volume during a call by means of the **▼** or **▲** keys
- Check the radio reception icon **[ ]**

#### **I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service
- Check to be sure this feature does not require an Alcatel accessory.

#### **When I select a number from my directory, the number is not dialled**

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

**I am unable to create a file in my directory**

- Make sure that your directory is not full; delete some files or save the files in the product directory

**My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability

**I can't access my voicemail**

- Make sure your operator's voicemail number is correctly entered in "Call Services/Voicemail"
- Try later if the network is busy

**I am unable to send and receive messages**

- Check your phone memory as it might be full, if necessary, delete some messages
- Contact your network operator to check service availability, see the messages settings
- Verify the server centre number with your operator
- The server centre may be saturated; try again later

**The << - >> icon is displayed**

- You are outside the network coverage area

**I have already entered 3 incorrect PIN codes**

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

Alcatel logo and Alcatel name are trademarks of Alcatel used under license by T&A Mobile Phones Limited.

All rights reserved © Copyright 2006  
T&A Mobile Phones Limited.

T&A Mobile Phones Limited reserves the right, in the customer's interest, to alter material or technical specification without prior notice.