

www.glamphone.com

ELLE

IS A TRADEMARK, OWNED BY HACHETTE FILIPACCHI PRESSE S.A., PARIS, FRANCE.
MANUFACTURED AND DISTRIBUTED BY T&A MOBILE PHONES LIMITED UNDER
LICENSE FROM HACHETTE FILIPACCHI PRESSE S.A., PARIS, FRANCE

English - T5001779AAAA 01

N3 COLLECTION 2007
BLUETOOTH JEWEL

GlamPhone
ELLE
by Alcatel

Introduction

T&A Mobile phones would like to thank you for purchasing this mobile.

Power music player/video player

- With playlist, lyrics display and equalizer
- Full screen video playback
- Watch the show on 2.0" TFT screen

Unlimited video recording

- Shoot video clips as long as you want ⁽¹⁾

USB mass storage

Simply a USB key.

Webcam

The best companion for PC instant messaging.

Bluetooth

- Bluetooth 2.0
- A2DP profile (Bluetooth stereo)

⁽¹⁾ Depending on battery and free memory.

Table of contents

Safety and use5

General information.....10

1. Your mobile12

- 1.1 Keys13
- 1.2 Main screen icons15

2. Getting started17

- 2.1 Set-up.....17
- 2.2 Power on your phone19
- 2.3 Power off your phone20

3. Calls21

- 3.1 Making a call.....21
- 3.2 Calling your voicemail21
- 3.3 Receiving a call22
- 3.4 During the call23
- 3.5 Conference calls24
- 3.6 Line switching25

4. Menu.....26

5. Call log28

- 5.1 Call memory28
- 5.2 My numbers28
- 5.3 Billing29
- 5.4 Call settings29

6. Directory32

- 6.1 Consulting your directory32
- 6.2 Creating a file.....34
- 6.3 Available options.....34

7. Messages	36
7.1 Messages: Text/Multimedia message	36
7.2 Voice message	39
7.3 Photo message.....	39
7.4 Video message.....	39
7.5 Voicemail.....	39
7.6 Settings	39
8. My settings.....	41
8.1 Ringtones	41
8.2 Color	42
8.3 Slider settings.....	42
8.4 Theme	43
8.5 Antenna off mode.....	43
8.6 Equalizer	43
8.7 Display	44
8.8 Clock	45
8.9 Keys	45
8.10 More settings.....	46
9. Tools	49
9.1 Bluetooth™	49
9.2 Organizer	50
9.3 Alarm.....	51
9.4 Calculator	51
9.5 Converter	52
9.6 Memory status.....	52
9.7 Voice memo	53
10. My shortcuts	54
11. WAP	55
11.1 Homepage.....	55
11.2 Bookmarks	55
11.3 Recent pages	55
11.4 Go to URL	55
11.5 Profiles.....	55

12. Media album	57
12.1 My audios	57
12.2 My images	58
12.3 My videos	58
12.4 My creations.....	58
12.5 Unknown files	58
12.6 Memory card.....	59
12.7 Managing audios, images, videos and creations	60
12.8 Formats and compatibility	61
12.9 Memory status.....	61
13. Photo & Video	62
13.1 Access	62
13.2 Photo	62
13.3 Video	64
14. Music player.....	67
14.1 Music player	67
14.2 Settings	68
14.3 Playing with lyrics	68
15. Games & Applications	69
15.1 Launch an application.....	69
15.2 Java settings	69
15.3 Java downloading.....	69
16. Making the most of your mobile.....	71
16.1 PC suite.....	71
17. Latin input mode/Character table	72
18. Telephone warranty	76
19. Accessories	78
20. Troubleshooting	79



Safety and use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from cellphone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10°C to +55°C.

Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your cellphone yourself.

Do not drop, throw or bend your cellphone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by T & A Mobile Phones Limited and its affiliates and are compatible with your phone model (see Accessories List, page 78). T&A Mobile Phones Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your phone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.


Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

 
 
Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.

 Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by T & A Mobile Phones Limited and its affiliates.





• **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

• **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off. Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60 °C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by T&A Mobile Phones Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

• **CHARGERS**

Mains powered chargers will operate within the temperature range of: 0 °C to 40 °C. The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

Travel charger:
 Input: 100-240 V, 50/60 Hz, 0.15 A
 Output : 5 V, 400mA
 Battery: Lithium 700 mAh

• **RADIO WAVES:**

 
THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

 
Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone. Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested for use at the ear is 0.44 W/Kg and for use close to the body is 1.1 W/Kg. While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.





Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it

• LICENCES

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by T&A Mobile Phones Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.



 
 
T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); and additional patents are pending worldwide.



ELLE is a trademark, owned by Hachette Filipacchi Presse S.A., Paris, France. Manufactured and distributed by T&A Mobile Phones Limited under license from Hachette Filipacchi Presse S.A., Paris, France.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



General information

 
- **Website:** www.tctmobile.com
- **Hot Line Number:** see "T&A Mobile Phones Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.tctmobile.com

Your telephone is a transceiver that operates on GSM networks with 850, 1800 and 1900 MHz bands.

CE This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.tctmobile.com.




Protection against theft ⁽¹⁾

Your cellphone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering ***#06#** and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your cellphone to be blocked preventing a third person from using it, even with a different SIM card.

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

 Your mobile

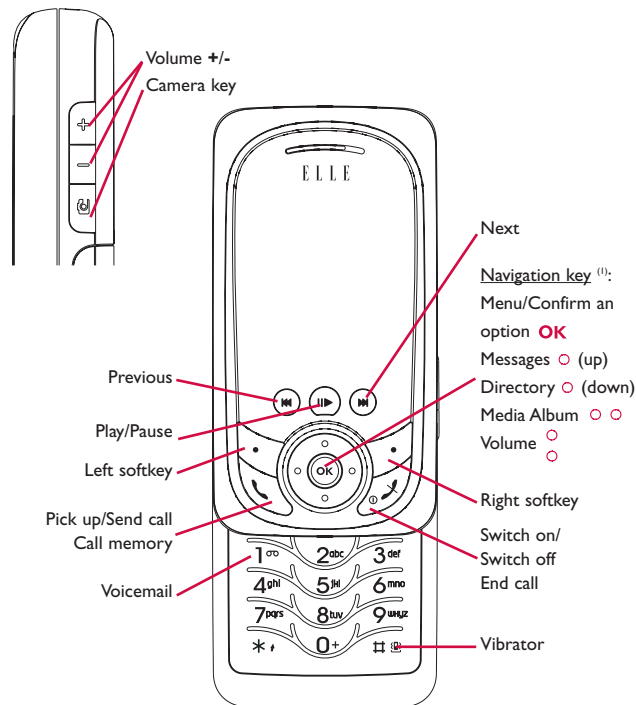

February 2007

⁽¹⁾ Contact your network operator to check service availability.

⁽¹⁾ Depending on your network operator.

1.1 Keys



Navigation key
Confirm an option (press the middle of the key)



Pick up
Send a call
Access call memory (Redial) (short keypress)



Switch on/Switch off the telephone (long keypress)
End call
Return to the main screen



Left softkey



Right softkey



Access your voicemail (long keypress)



In Edit mode:
- Short keypress: change input methods
- Switch from T9 predictive mode to Normal mode
- Long keypress: access the Symbols table



From main screen
- Short keypress: #
- Long keypress: activate/deactivate the vibrator
In edit mode:
- Short keypress: ␣ (space)
- Long keypress: add a word



Short keypress: Play/pause
Long keypress: go to the Music player screen and play the current song.



(in the playing mode) Short keypress: previous/next song

Side keys:



Camera key






























Volume up (Zoom in)



Volume down (Zoom out)

1.2 Main screen icons ⁽¹⁾

-  **Battery charge level**
-  **Vibrate alert:** your phone vibrates, but neither rings nor beeps except for the alarms (see page 42).
-  **Bluetooth status** (Blue - Activated).
-  **Bluetooth status** (Connected to an audio device).
-  **Headset connected.**
-  **Keypad locked.**
-  **Call forwarding activated:** your calls are forwarded (see page 30).
-  **Alarm clock programmed** (see page 51).
-  **Level of network reception.**
-  **Voicemail message arrived.**
-  **Unanswered calls.**
-  **WAP alerts** ⁽²⁾.
-  **Roaming.**

-  **Memory card scanning in progress.**
-  **Memory card scanning completed.**
-  **Double line** ⁽¹⁾: indicates the selected line.
-  **GPRS active.**
-  **Music player active.**
-  **USB cable connected.**
-  **Reception of a message in progress.**
-  **Sending a message.**
-  **Silence mode:** your phone neither rings, beeps nor vibrates except for the alarms (see page 42).
-  **Message unread**
-  **Message list is full:** your terminal cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
-  **Preferred tariff areas** ⁽¹⁾.
-  **Antenna off mode.**
-  **A2DP connected.**

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

⁽²⁾ Depending on your network operator.

 
⁽¹⁾ Contact your network operator to check service availability.

2 Getting started

2.1 Set-up


Inserting and removing the SIM card ⁽¹⁾

You must insert your SIM card to make phone calls.

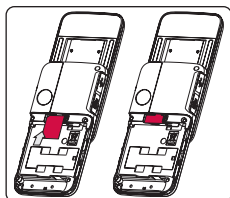


Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

 Installing the battery

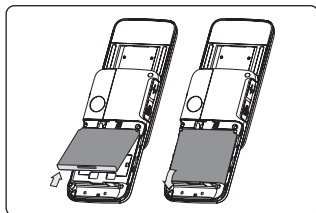

Insert and click the battery into place, then close the telephone cover.

 
Removing the battery

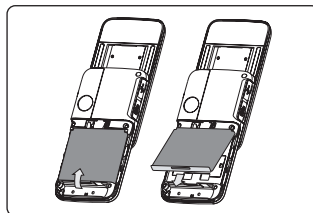

Unclip the cover, then remove the battery.

⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

 Charging the battery

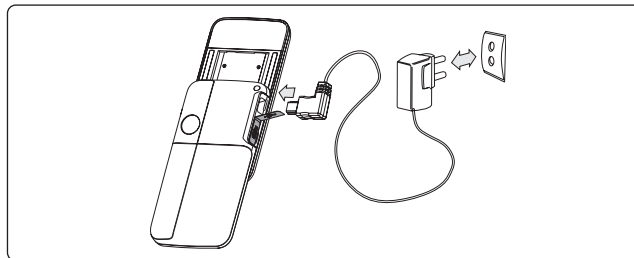


Connect the battery charger

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (▣▣▣).




The charge is complete when the animation stops. Only use Alcatel chargers.

 Remove the back cover

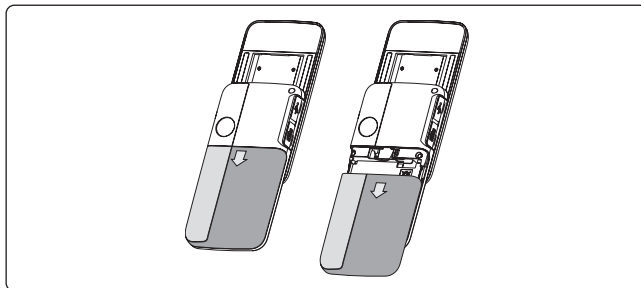

2.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary and then confirm with the **OK** key. The main screen is displayed.



If you don't know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone and store your card in a safe place when not in use.

If cell broadcast messages are displayed, use the **OK** key to browse through them in full or press the right softkey to return to the main screen.

While the phone is searching for a network, "**Searching/Emergency**" will be displayed.


In the power on screen, you also have access to "**Media album**", "**Photo&Video**" and "**Music player**" functions even if no SIM card inside.


2.3 Power off your phone


Hold down the  key from the main screen.

3 Calls.....


3.1 Making a call

Dial the desired number then press the  key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the  key.

 To enter characters “+”, “W” (for tonewait) or “P” (used to store a number with extension number), hold down the **0+** key (the following characters will scroll by: 0, +, P, W).


Making an emergency call

If your phone is covered by the network, dial **112** and press the  key to make an emergency call (or any other number provided by your operator). This works even without a SIM card and without typing the PIN code or unlocking the keypad.



3.2 Calling your voicemail ⁽¹⁾



Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the **1*** key.


If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to “**My numbers**” (see page 28).

 To use your voicemail service from abroad, contact your network operator before leaving.


3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.


If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.

 The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

Press the right softkey once while the telephone is ringing. Answer the call by pressing the  key.

Rejecting a call

Press the  key once or the right softkey twice.

⁽¹⁾ Contact your network operator to check service availability.

3.4 During the call

Available functions

During a call, you can use your directory, your diary, short messages, etc. without losing your correspondent by pressing the key.

Call on hold

Ongoing call

Handsfree

WARNING: move the handset away from your ear while using the “handsfree” option because the amplified volume might cause hearing damage.

Directory

Messages

Organizer

Services ⁽¹⁾

Voice memo (record your current call).

Besides, you can switch the audio speech from handset to BT device when connected.

Adjusting the volume

You can adjust the sound level during a call using the key or the side keys.

Handling two calls

- Answering a second call (Ensure that “**Call waiting**” is activated, see page 29).
- To call a second party during a call, dial the number directly.

3.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to 5). If you are on a double call, press “**Options**” and select “**Conference**” then confirm with the **OK** key. If a third call comes in, answer it by pressing the key and speak with your new correspondent.

This correspondent becomes a member of the conference if you press “**Options**” and select “**Joint conf.**”, and then confirm by pressing **OK**. Pressing disconnects the current call.

To end the conference call, press “**Options**” and select “**End conf.**”.

⁽¹⁾ Contact your network operator to check service availability.

⁽¹⁾ Contact your network operator to check service availability.

3.6 Line switching ⁽¹⁾

Your SIM card can contain two distinct telephone numbers. Under “**Call log**”, choose “**Line switching**” and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use the two lines.



The services programmed on the default line do not impact those selected on the other line.

4 Menu

From the menu interface, you may directly access features by pressing the corresponding key (number keys and *† and ‡Ⓜ keys) ⁽¹⁾.

1. GAMES & APPS

2. MEDIA ALBUM

- My audios
- My images
- My videos
- My creations
- Unknown files
- Memory card
- Memory status

3. TOOLS

- Bluetooth
- Organizer
- Alarm
- Calculator
- Converter
- Memory status
- Voice memo

4. PHOTO & VIDEO

- Camera
- Video
- My creations

5. DIRECTORY

6. MESSAGES

- Messages
- Voice message
- Photo message
- Video message
- Voicemail
- Settings

7. CALL LOG

- Call memory
- My numbers
- Billing
- Call settings

⁽¹⁾ Contact your network operator to check service availability.

⁽¹⁾ Only available in “**Board**” mode.

8. MY SETTINGS

- Ringtones
- Color
- Slider
- Theme
- Antenna off mode
- Equalizer
- Display
- Clock
- Keys
- More settings...

9. MY SHORTCUTS

*. SERVICES

- VAS ⁽¹⁾
- Data account
- Service dial number

0. MUSIC PLAYER


- Playlist
- Album
- Artist
- Genre
- All songs
- Recently played
- My star list
- Update songs




#. WAP

- Homepage
- Bookmarks
- Recent pages
- Go to URL
- Profiles

5 Call log

5.1 Call memory

You can access your call memory by pressing the  key from the main screen. Choose the icon of the desired list:

-  Unanswered calls
-  Outgoing calls (Redial)
-  Answered calls

Select a number of the call memory and press the “Options” softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

5.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm by pressing **OK**. Your telephone number is usually written on your SIM card.

⁽¹⁾ Contact your network operator to check service availability.

5.3 Billing

You can access different items with this option:

- Account**
 - You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice.
- Duration**
 - You can view the total duration of all outgoing calls or reset it.
- GPRS counter**
 - Management of the volume of data communications charged for (in kilobytes).
- Beep duration**
 - You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by **OK**).

5.4 Call settings ⁽¹⁾

You can access a number of items with this option:


5.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

⁽¹⁾ Contact your network operator to check service availability.

5.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.
- If busy, no reply or unreachable.

5.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

Outgoing calls • The following configurations are possible:

- All calls
- All outgoing calls are barred.
- International calls
- Outgoing international calls are barred.
- International except home
- Outgoing international calls except those to your country of subscription are barred.

Incoming calls • The following configurations are possible:

- All calls
- All incoming calls are barred.
- Roaming
- Incoming calls are barred when you are abroad.

Cancel all barring • Deactivate all call barring.

Change barring PW • Change the original PW for activating call barring.

5.4.4 Line switching ⁽¹⁾



Line switch between line 1 and line 2.

5.4.5 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.





6 Directory.....

6.1 Consulting your directory

To access the **directory** from the main screen, press the  key ⁽¹⁾ downwards or press the **OK** key and select the  icon from the menu.

You can also customise a quick access to your contact with the keypad customisation (see page 46).

You have 4 directories:

-  SIM directory
-  General
-  Phone directory
-  Group

In addition to the directories already provided, you can create up to 5 groups (maximum 100 entries per group).

⁽¹⁾ Depending on your SIM card.

⁽¹⁾ Depending on your network operator.

Searching for a name by its first letter

You can search for the person's name by pressing the key associated with the first letter of his/her name.



Read a file

Select a name from your directory, then press **OK** to read the file.

Sending Vcard via Bluetooth

Selecting the Vcard you wish to transfer ("**Options**\Send vCard\By Bluetooth").

Making the call






 
 





Press the  key once the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Mobile, Home, Office, etc.) using the  key. Press the **OK** key to make the call.



Information in the directory and the diary may be sent to and received from a computer using the PC suite (see page 71).

6.2 Creating a file

Select the directory in which you wish to create a file, press the "**Options**" softkey, select "**Create file**" then **OK**.

When you create a new contact in the product directory, at least one of the following fields must be filled in:  Name,  Group,  Mobile,  Home,  Ringtone,  Image,  Video,  Work,  Fax,  Email,  Birthday,  Company.

You can move from one field to another using the  key.



If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 21).

6.3 Available options

From the list of names in SIM directory, General directory or Group you can access the following options via left softkey:

- View**
 - View a complete file: name, numbers, address, e-mail, etc.
- Create file**
 - Create a file (name, numbers, address, e-mail, etc.) in the desired directory.
- Create text/multimedia message**
 - Send an SMS/MMS to a contact you selected from the directory.
- Edit**
 - Modify the contents of a file: name, number, ringtone, image, etc.
- Delete**
 - Delete the selected file.

- Delete all** • Delete all the files in the current directory.
- Copy all** • Copy the whole directory to the SIM or General directory only if there is sufficient memory.
- Send vCard** • Exchange data via MMS or Bluetooth (see page 49).
- Settings** • More information and setting.
- Create group** • Create a group of files.
- Delete group** • The group and its files will be completely deleted.
- Associate/ Not associate** • If the original one in SIM or General directory is modified, the one in a group will be updated accordingly, otherwise not.

7 Messages.....

You can create, edit and receive SMS and MMS with this cellphone.

MMS is a message whereby you can send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.



The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered (see page 40).

7.1 Messages: Text/Multimedia message ⁽¹⁾

7.1.1 Create message

From the main menu select "**Messages**" to create text/multimedia message.

You can type a message but you can also modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "**Options**" to access all the messaging options.

⁽¹⁾ Depending on your network operator.