

1 Your phone

Keys in idle mode

- Left softkey:** Access Option/Menu/Confirm, Display a message received
- Send key:** Answer / Send call, Call memory (short keypress), Voicemail (long keypress), Insert a smart punctuation
- Right softkey:** Delete/Back/Mute the ring tone, Toggle among the menus (Same as left softkey/quick access)
- End key:** Power on /Power off (long keypress), End call, Return to the main screen, Reject a call
- Keypad lock/unlock (long keypress)**
- Vibrator (long keypress)**
- Validate selected word**
- Add a word**

Navigation key:
▲: Messages
▼: Directory
Scroll/adjust volume during a call
◀: Alarm
▶: Mode FM Radio ⁽¹⁾
○: Same as left softkey/quick access

Right softkey:
Delete/Back/Mute the ring tone

End key:
Power on /Power off (long keypress)
End call
Return to the main screen
Reject a call

Keypad lock/unlock (long keypress)

Vibrator (long keypress)
Validate selected word
Add a word

OT-S 120A
OT-S 121A
OT-S2 10A
OT-S211A
OT-V2 12A
ALCATEL
mobile phones

⁽¹⁾ OT-S121A/OT-S211A/OT-V212A.

8 Directory

You may store up to 255 entries in the phone's directory.

8.1 Directory menu

View: access your contact list (alphabetical order).
Create: enter number and name of a new contact.
Delete: delete the selected contact.
Copy: copy the selected contact from the SIM memory to the cellphone memory and vice versa.
Caller group: group contacts by category.
Select Dir.: select the SIM directory, Cellphone directory or both at the same time.
Memory status: check the number of contacts and available memory.
My number: enter your own mobile number for future reference.
Speed Dial: set up speed dial for each key from 2_{nd} to 9_{th}.

8.2 Create a contact

▼ select "create" and enter number and name of a new contact.

8.3 Viewing your saved directory contacts

Select "Dir." then "View" to access your contact list.

Available options in the contact list

Once you have selected a name, press [right softkey] to access the following options: Call number/Send message/Details/Modify/Delete/Copy/Caller group/Search number.

Caller group

You can group contacts by category and select a unique ringtone. For each group, you can select the following options: Modify/Ringtone/SMS alert/Members/Add member/Delete all.

10 Display

10.1 Wall paper ⁽¹⁾

Select the image you wish to be displayed as the idle screen.

10.2 Colors ⁽¹⁾/Reverse ⁽²⁾

Choose different colors for the presentation of the screen.

10.3 Backlight

Select the length of time the backlight will be displayed: 7s, 15s, 20s, 30s.

⁽¹⁾ OT-S210A/OT-S211A/OT-V212A.
⁽²⁾ OT-S120A/OT-S121A.

2 Getting started

2.1 Remove the back cover

2.2 Inserting and removing your SIM card

To insert your SIM card, turn off your cellphone by holding down the [power] key.

Remove the back cover and battery to view the SIM card slot. Fit the SIM card with the chip (the gold connectors) facing downwards. Slide the SIM card into its compartment noting the correct placement in relation to the angled corner. Push the SIM card with your finger to release it.

2.3 Inserting and removing the battery

To insert the battery be sure the metal connections are aligned properly and insert the top section first and press down gently. If there is resistance, do not force the battery and check for proper placement. To remove the battery, use your fingernail to gently pull up on the bottom of the battery as shown.

2.4 Charge the battery

NOTICE: If the battery is completely discharged, it may take up to 20 minutes before the charging indicator appears on the display or any calls can be made.

⁽¹⁾ Contact your network operator to check service availability.
⁽²⁾ Depending on your operator's network.

9 Sounds

From the main menu, select "Sounds" and select one of the following options in order to customize your phone.

9.1 Mode

Ringtone: only the tone is played.
Vibrate: the cellphone will vibrate only (but the alarms and low battery sound will still function).
Vibrate & ring: vibrator and tone at the same time.
Vibrate then ring: vibrator then tone.
Vibrate.BEEP.RING: vibrator then warning beep, then tone.
Silence: no sound, no beep (but the alarms and low battery sound will be played anyway).

9.2 Volume

Adjust your phone's volume up or down.

11 Settings

11.1 Clock

Set time and date, time format, display (show or hide the clock).

11.2 Languages

Select your language preference for phone menu and messages.

11.3 Dictionary

Create, modify or delete a word in your personal dictionary. When creating an SMS, the word is predicted and displayed if in Predictive Mode (T9).

11.4 Auto keypad lock

You may setup automatic locking of your phone's keypad to prevent undesired calls when the handset is not in use by selecting an auto-lock time increment between 5 and 40 seconds after usage. You can set it to "off" if you prefer to lock it manually.

11.5 Auto power

11.6 Answer mode

11.7 Factory reset

⁽¹⁾ Contact your network operator for more information.

3 Menu.....

Select the menu of selection you would like by using the navigation keys (▲, ▼), then press the left softkey to confirm.

Directory: Access/create directory files and make calls from your directory.

Messages: Read, write and send SMS messages in your inbox or outbox. View your messages in your inbox, outbox. Adjust the settings and activate/deactivate SMS CB ⁽¹⁾ message reception.

Sounds: Change the mode, volume, ringtones, SMS, power on/off sounds, key beep.

Display: Change the main screen wallpaper, colors/reverse, power on/off display, screensaver and contrast.

Settings: Set the time, date, language, security mode, answer mode, etc

Call services: Access functions such as: voicemail number, call memory, call settings, network, forward and call barring.

Games: Your phone includes 2 embedded games to play.

Tools: Access the Alarm and Calculator functions.
Services ⁽²⁾: Access Operator services.

⁽¹⁾ Contact your network operator to check service availability.
⁽²⁾ Depending on your operator's network.

12 Call services.....

12.1 Call memory

From the main screen, press [left softkey] and your cellphone displays your call history. Each call is displayed with an icon indicating the type of call.

Select a telephone number in the list and press [left softkey] to redial it or press [right softkey] to access the following options:
Details: display information on the selected call.
Save number: store the number in your directory.
Send message: create an SMS.
Call number: call the selected number.
Modify: modify the number, then call it or save it.
Delete: delete the number selected.
Delete all: delete the entire list.

12.2 Call settings ⁽¹⁾

Minute alert/Call waiting/Auto redial/Billing/Duration/Amount/Hide my ID/Reject with SMS.

12.3 Call services ⁽¹⁾

Network/Call forwarding/Call barring.

⁽¹⁾ Contact your network operator for more information.

- Voice mail message received
- Missed call
- Call forwarding activated: your calls are forwarded
- Alarm programmed
- Roaming indicator
- Home network indicator
- Signal strength indicator
- Keypad lock
- FM Radio (optional)

5 Tools

5.1 Alarm

Even when the phone is powered off, the alarm will still ring.

⚙ + [right softkey] = "snooze": The alarm will ring again after 5 minutes.
 ⚙ + [power] = "stop"

5.2 Calculator

5.3 FM Radio

If FM radio is available ⁽¹⁾

- ▲ : increase volume
- ▼ : decrease volume
- ◀ : switch to the previous station in automatic search mode
- ▶ : switch to the next station in automatic search mode
- : Switch between auto and fixed in Search Mode
- [power] - 9_{key} (long keypress): save a station, or go to saved stations

⁽¹⁾ OT-S121A/OT-S211A/OT-V212A.

⁽¹⁾ Contact your network operator for more information.

6 Calls

6.1 Make a call

Dial number then press [call]. To hang up, press [end key].

If you make a mistake, press [left softkey]. Press and hold the key to delete all digits.

Make an emergency call

Dial 911 or other local emergency number and press [call]. Emergency calls can be performed at anytime without your SIM card or PIN code. Once the call has been made, the screen will display: "SOS".

Make an international call

Hold down [power] + [right softkey] until "+" is displayed. Enter the country and area code followed by the number then press [call] key to start the call.

Call a number from the directory

Press [down arrow] to access the directory.

Select the desired phone number and press [call].

6.2 Incoming call

To answer an incoming call press [call]. You can also reject a call by pressing [end key].

6.3 Available functions during a call

Access available functions during a call by pressing [right softkey].

6.4 Calling your voicemail ⁽¹⁾

Press and hold the [power] key until connected.

⁽¹⁾ Contact your network operator for more information.

⁽¹⁾ Contact your network operator for more information.

7 Messages

Press [left softkey] and select "Messages".

7.1 Create an SMS

"Messages" → "create" → Abc → [right softkey] and choose your action:
Send: send the message to a recipient.
Send to many: send the message to a group of contacts you select.
Send to email: send a message to an email address ⁽¹⁾.
Saves: save the message in the unsent box and send it later.
Templates: use or modify an existing message.
Discard: discard the message.
Predictive (T9): select this mode to have predictive text enabled for faster word completion.
123: switch to numeric mode.
T9 help: help menu for predictive mode.

7.2 Read an SMS

In the inbox, read and unread messages are shown with different icons. Press [left softkey] to reply to an SMS quickly.

The outbox includes sent and unsent messages.

7.3 Inbox/Outbox

Select a message and select an option: Reply/Delete/Forward message/Archive/Modify/Extract number/Call number.

⁽¹⁾ Contact your network operator for service availability.

⁽¹⁾ Contact your network operator for service availability.

13 Games

13.1 Russia

The object of this game is to complete as many complete lines of bricks as possible.

Key functions:

13.2 Bricks ⁽¹⁾

The object of this game is to break as many bricks as possible with a bat and ball.

3 lives per game. Miss a ball = lose a life
 Bonus depending on the position in which the ball hits the bricks.

Key functions:

⁽¹⁾ OT-S210A, OT-S211A, OT-V212A do not include this game.

⁽¹⁾ Contact your network operator for more information.

11 Settings

ALCATEL is a trademark of Alcatel-Lucent and used under license by TCT Mobile Limited.

All rights reserved © Copyright 2008 TCT Mobile Limited.

TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

⁽¹⁾ Contact your network operator for more information.

