

5.3 Billing

You can access different items with this option:

- Amount**
 - You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice.
- Duration**
 - You can view the total duration of all outgoing calls or reset it.
- GPRS counter**
 - Management of the volume of data communications charged for (in kilobytes).
- Beep duration**
 - You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by **OK**).

5.4 Call settings ⁽¹⁾

You can access a number of items with this option:

 
5.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

⁽¹⁾ Contact your network operator to check service availability.

5.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.
- If busy, no reply or unreachable.

5.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

Outgoing calls • The following configurations are possible:

- All calls
- All outgoing calls are barred.
- International calls
- Outgoing international calls are barred.
- International except home
- Outgoing international calls except those to your country of subscription are barred.

Incoming calls • The following configurations are possible:

- All calls
- All incoming calls are barred.
- Roaming
- Incoming calls are barred when you are abroad.

Cancel all barring • Deactivate all call barring.

Change barring PW • Change the original PW for activating call barring.

5.4.4 Line switching ⁽¹⁾


Line switch between line 1 and line 2.

5.4.5 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.

6 Directory

6.1 Consulting your directory

To access the **directory** from the main screen, press the **:** key ⁽¹⁾ downwards or press the **OK** key and select the  icon from the menu.

You can also customize a quick access to your contact with the keypad customisation (see page 47).

You have 4 directories:

 SIM directory

 General

 Phone directory

 Group

In addition to the directories already provided, you can create up to 5 groups (maximum 100 entries per group).

⁽¹⁾ Depending on your SIM card.

⁽¹⁾ Depending on your network operator.

Searching for a name by its first letter

You can search for the person's name by pressing the key associated with the first letter of his/her name.

Read a file

Select a name from your directory, then press **OK** to read the file.

Sending Vcard via Bluetooth

Selecting the Vcard you wish to transfer ("**Options**\Send vCard\By Bluetooth").

Making the call

Press the **C** key once the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Cellphone, Home, Office, etc.) using the **:** key. Press the **OK** key to make the call.



Information in the directory and the diary may be sent to and received from a computer using the PC suite (see page 73).

6.2 Creating a file

Select the directory in which you wish to create a file, press the "**Options**" softkey, select "**Create file**" then **OK**.

When you create a new contact in the product directory, at least one of the following fields must be filled in: Name, Group, Cellphone, Home, Ringtone, Image, Video, Work, Fax, Email, Birthday, Company.

You can move from one field to another using the **:** key.



If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 21).

6.3 Available options

From the list of names in SIM directory, General directory or Group you can access the following options via left softkey:

- | | |
|---------------------------------------|--|
| View | • View a complete file: name, numbers, address, e-mail, etc. |
| Create file | • Create a file (name, numbers, address, e-mail, etc.) in the desired directory. |
| Create text/multimedia message | • Send an SMS/MMS to a contact you selected from the directory. |
| Edit | • Modify the contents of a file: name, number, ringtone, image, etc. |
| Delete | • Delete the selected file. |

- Delete all**
 - Delete all the files in the current directory.
- Copy all**
 - Copy the whole directory to the SIM or General directory only if there is sufficient memory.
- Send vCard**
 - Exchange data via MMS or Bluetooth (see page 51).
- Settings**
 - More information and setting.
- Create group**
 - Create a group of files.
- Delete group**
 - The group and its files will be completely deleted.
- Associate/
Not associate**
 - If the original one in SIM or General directory is modified, the one in a group will be updated accordingly, otherwise not.

7 Messages

You can create, edit and receive SMS, MMS, Postcard ⁽¹⁾, email ⁽¹⁾ and IM (Messenger) ⁽¹⁾ with this cellphone.

MMS is a message whereby you can send video clips, images, photos, animations and sounds to other compatible cellphones and e-mail addresses.

7.1 Messages: Text/Multimedia message ⁽²⁾

7.1.1 Create message

From the main menu select "**Messages**" to create text/multimedia message.

You can type a message but you can also modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "**Options**" to access all the messaging options.

You can save your messages that you send often to **Drafts** or **Templates**.











An SMS message of more than 160 characters (the number of characters depends on the languages you writing in) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

⁽¹⁾ Depending on your network operator and product availability.


⁽²⁾ Depending on your network operator.

7.1.2 Inbox

All received messages (read and unread) are stored in the same Inbox.

When viewing your messages, you will find the following status icons, depending on the type of message:  unread SMS in phone,  unread SMS in SIM card,  read SMS in phone,  read SMS in SIM card,  unread MMS in phone,  read MMS in phone,  message reception in progress and  message sending in progress.

Receiving and reading SMS/MMS

When you receive a new message, the following message is displayed: “**X new message!**”, a beep sounds, the  icon shows up, a line with the number of messages appears on the screen. Select this line and press **OK** to read it directly from the main screen.

Once you have read the message, the following options are given: **Reply**, **Forward** the message to another person, **Edit**, **Delete**, **Delete all** and extract number or URL (**Use number/Use URL**).

7.1.3 Unsent

All failed to be sent messages.

7.1.4 Sent

All sent messages.

7.1.5 Drafts

All drafts messages.

7.1.6 WAP alerts

Store WAP push messages.

7.1.7 Empty folder

Delete all messages in “**Inbox/Unsent/Sent/Drafts**”.

7.1.8 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined text messages.

7.2 Voice message

Record voice and send as MMS.

7.3 Photo message

Take a photo and send as MMS.

7.4 Video message

Take a video and send as MMS.

7.5 Email ⁽¹⁾

- Send and Receive** • To connect the email server in order to launch sending/receiving mails manually.
- Create Email** • To create a new email.
- Inbox** • Folder of all received emails.
- Unsent** • Folder of all emails failed to be sent out.
- Sent** • Folder of all sent emails.
- Drafts** • Folder of all draft emails.
- Template** • A list of predefined messages.
- Delete all** • To delete all the mails in the folder which you select.
- Email profile** • To edit or activate your email settings.

7.6 Messenger ⁽¹⁾

Messenger (IM, also called "Chat") is one of the most popular services on the Internet after e-mails. The presence feature allows users to check when their friends are online and communicate with them in near real-time.

You can now "chat" with your cellphone.

7.6.1 Log in

You may let your Messenger service start up automatically when you switch on the phone. You may also choose to login the service automatically with the user data you stored in the phone.

⁽¹⁾ Depending on version, this feature may not be available.

7.6.2 Presence

IM enables a user to see the connection status or presence of other users.

The presence includes a combination of network status information (online or offline) and user specified status information (available or busy).

An important privacy protection feature of Messenger is the ability to block another user at any time. Blocked users cannot see your presence neither send you unsolicited IM (SPIM: the word for IM spam).

In one glance you can know the presence of your friends thanks to the IM buddy list: it is the list of contacts with whom you may chat. You can manage your IM buddy list: add a new contact (using a cellphone number or the messenger ID), or search for a contact.

You can also create groups of contacts in order to well manage your contact list.

7.6.3 Always on

Cellphone IM works the same way as on a PC: you can still receive IM messages, even if the IM application is not on the screen. An IM icon in the status bar shows you whether IM is on or off. The icon shows:

- if you are online and available,
- if you are online and busy,
- if there are unread IM

No icon means that you are not connected.

7.6.4 Receiving and reading IM

When you receive a new IM notification (a new IM, an information message...),

- an IM message is displayed: "You have received an IM message from...", "You have received an invitation from..."
- you have a specific sound alert for IM (to modify or deactivate the audible signal, refer to IM parameters below),
- in the status bar, the IM icon is updated,
- a line with the number of conversations with different friends (whatever the number of IMs) or information messages appears on the idle screen. Select this line and press **OK** to access it from the main screen.

You can also create a private chatroom and invite your online contacts to chat together.

7.6.5 IM parameters

You can update the IM server parameters in the same way as for a WAP profile.

7.7 Voicemail

All vocal messages received.

7.8 Settings

7.8.1 Text messages

Profile settings • Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.

General setting • Delivery report, request for acknowledgement of delivery report On/Off. Reply path ⁽¹⁾ show reply path.

Memory status • Memory used on the phone.

Preferred storage • Select default message storage, SIM or phone.

Pref. Bearer • Bearer preference.

7.8.2 Multimedia messages

Edit • Set edit mode, image size and signature.

Sending • Set the values for validity period, Read report, etc.

Retrieve • Set the values for Home network, Roaming network, etc.

Filter • Set criteria for filtering.

Profiles • Follow the same procedure as for setting your WAP connection.

Memory status • Memory used on the phone.

7.8.3 CB SMS ⁽¹⁾

Receive mode • Enable to receive broadcast SMS.


Read message • Store the received messages.

Languages • Language selection.

Channel setting • Add/Edit channels.

⁽¹⁾ Depending on your network operator.







 


8 My settings

From the main screen, select the icon menu  and select the function of your choice in order to customize your telephone.


8.1 Ringtones

8.1.1 Available functions

To modify the sound settings, select an option using the **••** key:

-  Select a melody from the list using the **:** key then confirm by pressing **OK** (see page 69).
-  Mode (normal, discreet, vibrate...).
-  Adjust the volume using the **:** key.
-  Select the type of key beep.
-  Select a melody for a new incoming message.
-  Select a melody for an alarm or appointment.
-  Power on beep.
-  Power off beep.
-  Slider beep.

8.1.2 Mode

You may set your phone ringtone to Normal, Discreet (ring with beep), Vibrate (all sounds are replaced by vibrations except for alarms), Vibrate and ring, Vibrate then ring, Beep and vibrate, Silence (no sounds except for alarms, the  icon will be displayed).



Ringtones sound with increasing volume.

8.2 Color

This function enables you to customize the graphic style and the colors of your telephone.

8.3 Slider

8.3.1 Slider open answer

You can decide whether you want to automatically answer the call when you slide open the phone. The default setting is **"On"**.

8.3.2 Slider close options

You can decide whether you want to continue or stop the running application when you slide close the phone. The default setting is **"Stop application"**.

8.4 Theme

The “**Theme**” menu allows you to customize your telephone to suit your own taste. You can modify several customizable items at the same time.

When using the telephone for the first time, a default “**Theme**” is activated.

Even if you choose a Theme, you can still modify the elements in it one by one. You can reactivate any Theme at any time.

When changing a Theme, an installation screen appears until the eight elements are installed.



The installation of the Theme can be stopped and cancelled if you receive an incoming call or if you press the right softkey; the previous choice of Theme is kept.

8.5 Antenna off mode

Antenna off mode, under which you will have no voice call, Bluetooth or messaging functions, can be used to increase music playback time.

8.6 Equalizer

You can choose and adapt the different music style preset.

8.7 Display

8.7.1 Main screen

The main screen is displayed when you switch on your telephone.

You can access the main functions from the main screen either with the navigation key or by pressing **OK** and by selecting the icons displayed on the screen ⁽¹⁾.

By selecting “**Main screen**” you can customize it by replacing the default image or animation displayed on your telephone.



When you receive an event (incoming call, SMS/MMS, notifications, etc.) the icon, type and number of events will be displayed on your main screen allowing you to consult them directly.

8.7.2 Screen saver

If you activate this option, the screen saver will be displayed a little while after the main screen. You can choose a picture, an animation or a video as your screen saver.

⁽¹⁾ Depending on the operator.

8.7.3 Power On/Off ⁽¹⁾

You can customize your welcome animation or image that appears when you switch on your phone.

You can also customize your OFF screen with an image or animation.

8.7.4 Menu display

- Board**
 - All the main menu icons displayed on one screen.
- Image**
 - One full-screen icon displayed at a time.
- List**
 - Main menus displayed line by line.

8.8 Clock

It allows you to have settings of date and time, including 12/24h format. Also you can set the daylight saving adjustment.

8.9 Keys

8.9.1 Softkeys

These keys have predefined functions, which vary from one model to another (operator services, games access, or Games & Applications, ...). You can customize ⁽²⁾ them, assigning the functions you wish to each key.

⁽¹⁾ Depending on the model.

⁽²⁾ Depending on your network operator.

8.9.2 Keypad

By customising your keys, you can call someone or access a function directly from the main screen.

To program a key on your keypad, select “**Keypad**” and choose the key that you wish to program.

- “**Speed dial**”: activate this option to program numbers with contacts. And then in the idle mode keep pressing number to dial directly.
- “**Keys**”: activate this option to program the functions.

8.10 More settings...

8.10.1 Auto lock

Lock the keypad

Its keypad will be automatically locked after you slider close the phone.

Unlock the keypad


Open the slider.

The keypad will be unlocked automatically on receiving a call or plugging in the charger.

8.10.2 Backlight

It allows you to reduce brightness for better performance of batteries and save power during periods of expected inactivity. You may also customize its duration, Immediate, 10s, 30s and 1min.

8.10.3 Languages ⁽¹⁾

Display language for messages (select using ). The "Automatic" option selects the language according to the home network (if available).

8.10.4 Dictionary

You have a dictionary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your dictionary, you can add, modify or erase words by using the "Options" softkey.

8.10.5 Input method ⁽²⁾

Please see chapter "Latin input mode", page 74. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

8.10.6 Security

Activate PIN • The SIM card protection code is requested each time as the phone is powered on if this code is activated.

Change PIN • Change PIN code.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Depending on the language.

Change PIN2

• A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).

Activate phone code

• It is requested each time as the phone is powered on if this code is activated.

Change phone code

• Change phone password, its initial one is 1234.

Fixed dialed number

• It allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

8.10.7 Networks

Network selection

• Depending on the option selected, the network search mode will be:

• Automatic

• The first network searched for is the network you used last.

• Manual

• The choice of the network connection is left up to the user.

Preferred networks

• List of networks to which you wish to be connected in order of priority (update this list using **OK**).

GPRS

connection ⁽¹⁾

• Two modes available:

• When needed

• GPRS mode active depending on connection requirements.

• Always

• GPRS mode continuously active.

⁽¹⁾ Depending on network availability.

9 Tools

9.1 Bluetooth™ ⁽¹⁾

Access this feature by selecting “**Tools**” from the main menu, then “**Bluetooth**”.


To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the “**Tools\Bluetooth\Activation\On**” option. Then enter the “**Device list**” menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the Bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

From the list, press the “**Options**” softkey to connect/disconnect, rename, search for new devices or delete an unconnected one from the list.

 Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your phone.


⁽¹⁾ You are highly recommended to use SOUTHWING SH315 and i.Tech Clip II's Bluetooth headset, which have been tested and proved fully compatible with EL05.

Available functions

- Data transmit** • Exchange files with another bluetooth device.
- Handle a call** • Initiate or receive a phone call with a Bluetooth headset.
- Listen to music** • Support A2DP profile.

Settings

- **Visibility:** Select whether you want to hide (“**Hidden**”) or show to all (“**Shown to all**”) your phone.
- **My phone's name:** you may change your phone name, which is visible to the others.

 Always activate Bluetooth in your phone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your phone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your cellphone are in this range and set as “**Visibility**”.

Your phone is Bluetooth™ v1.1, v1.2 and v2.0 compatible.

9.2 Organizer

Once you enter this menu from “**Tools**”, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

Available options:

- Create** • Create an appointment.
- View appointments** • See all the created appointments.
- Jump to date** • Input the required date and it will be immediately highlighted.

9.3 Alarm

Your cellphone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

- Repeat** • You may select Once (default)/Every day/Days.
- Snooze** • The alarm will repeat at regular intervals.

9.4 Calculator

You can use it to perform basic calculations. Hold down the **⌘** key to get the decimal point. Confirm with the **OK** key or the left softkey.

9.5 Converter**9.5.1 Unit**

You can use the Weight and Length conversion by selecting the unit you wish to convert via **••**, then press **•** (up) to input the digits. Finally confirm with **OK** key or left softkey.

9.5.2 Currency

The currency converter allows you to:

- Convert a currency directly into euros and vice versa ⁽¹⁾.
- Convert between international currencies, both currencies must be selected by **••** keys. You are requested to input the appropriate exchange rate.

9.6 Memory status

It will indicate how much space is used and how much is currently free on your phone and memory card (if any).

9.6.1 Phone

View available memory space.

Your phone's memory is shared among several functions: directory, scheduler, messages, voice messages, images, melodies, games, applications and video clips.

⁽¹⁾ For the former European national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.



9.6.2 Memory card (MicroSD card)

 
View the memory available on your MicroSD card.



You are advised to save large files (like videos, songs,...) on your MicroSD card. File name with up to 35 characters will be supported.

9.7 Voice memo



This feature enables you to record a call by selecting “**Voice memo**” while communicating. To record a sound, select “**Voice memo**”, then “**New record**”.



10 My shortcuts..... ELLE

Access the shortcuts already programmed.

  To program new shortcuts: select “**My shortcuts**” if you want to create a quick access to a function, Directory, or WAP Bookmarks, etc.





WAP

11.1 Homepage

Launch the WAP browser with the homepage of the default profile.

11.2 Bookmarks

Access your favorite sites.

11.3 Recent pages

Pages which you recently browsed.

11.4 Go to URL

Enter the URL of WAP site.

11.5 Profiles

11.5.1 Edit profile

Edit existing profile or create new profile.

11.5.2 Browser options

Set the value for timeout and auto loading of image.

11.5.3 Push message settings

Enable or disable receiving service message from WAP.

11.5.4 Clear cache

 
 
Empty the phone's cache memory.

11.5.5 Clear cookies

Clear cookies from website.

11.5.6 Trusted certif.

Certificates of trusted sites.



12 Media album


You will have an access to all audio and visual files stored in phone or memory card in Media Album.

12.1 My audios

Choose an audio for the ON/OFF screen, for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

The **"My audios"** album contains the following folders ⁽¹⁾:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds,
- General: contains all audio files stored in phone or memory card.

 DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.


12.2 My images

You can select an image or a photo as main screen or the ON/OFF screen. You may also change it, send it by MMS or Bluetooth or assign it to a contact in the directory.

 The images will be displayed in alphabetical order.

12.3 My videos

The **"My videos"** album contains all video clips embedded and downloaded in phone or memory card.

 In My audios, My images and My videos: only files transferred via PC suite will be saved in the pre-defined folder and recognized by the music player. However, the files copied to other directories are still accessible in **"Media album\Memory card"**.

12.4 My creations

This feature stores all the photos and videos captured by your cellphone.

12.5 Unknown files

Store files of unsupported format.

Thumbnails are displayed for preview. In addition, you can use **"Mark"** function, to select multiple files.

 
12.6 Memory card

You will have access to all files stored in memory card here.



When a memory card is inserted for the first time, it will be scanned and the default folders will be created.

Insert the memory card: Open the rubber cap, place the MicroSD card with gold finger downwards and insert it into the slot:

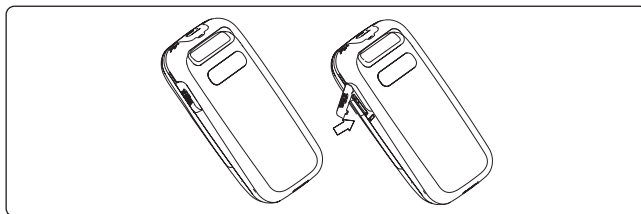

Remove the memory card: Open the rubber cap and gently push the memory card until unlocked. Take out your MicroSD card and close the cap.


Available options

- Create folder** • Create more folders.
- Delete folder** • Remove folders.
- Rename folder** • Rename folder's name.
- Empty folder** • Delete all files in one folder.
- Memory card** • To format it or to query its memory status.

12.7 Managing audios, images, videos and creations

According to the item chosen, you can access some of the functions below:

View

- View the selected image. If you want to view all the pictures in your folder in a slideshow hold down  on the current picture.

Play

- Play the selected video.

Send ⁽¹⁾

- Send the audio/image/video.

Delete

- Delete the audio/image/video selected (Not applicable for embedded items).

Set as

- - Image->main screen, screen saver, switch ON/OFF, assign it to a contact.
- - Sound->ringtone, message beep, switch ON/OFF, assign it to a contact.
- - Video->Screen saver, switch ON/OFF or assign it to a contact.

Modify

- Modify an image ⁽²⁾.

Download

- Download new items.

Rename

- Rename the audio/image/video.

Sort

- Sort the files by name, type, time and size.

⁽¹⁾ Files marked with  cannot be sent.

⁽²⁾ Only applies to images that can be cleared but not for copyrighted files.

- Move to phone/ memory card** • Move a file from the product memory to the memory card and vice-versa.
- Properties** • Display part of the ID3 Tag content of an MP3 file.
- Activate** • DRM file option.
- Copy to phone/ memory card** • Copy a file to the phone memory or the memory card.
- Delete** • Delete the files except the embedded ones.
- Delete all** • Delete all the files except the embedded ones.
- List view** • View the files in the type of list.
- Slideshow ⁽¹⁾** • Show the images continuously.
- Capture** • Access “**Camera & Video**” function directly.
- Mark/Unmark** • Mark/Unmark a click on a file for further operation.
- Mark/Unmark all** • Mark/Unmark a click on all files.
- Delete marked** • Delete all the marked files.

12.8 Formats and compatibility ⁽²⁾

- Sounds: mp3, m4a, aac, midi, wav, amr
- Images: jpg, gif
- Videos: 3gp, mp4

12.9 Memory status

See page 54.

⁽¹⁾ Only applies to images that can be cleared but not for copyrighted files.

⁽²⁾ Depending on product and market.



13 Camera & Video

 
Your cellphone is fitted with a 1.3 MegaPixel camera for taking photos and shooting videos that you can use in different ways

- store them in your “**Media album**”.
- send them in a multimedia message (MMS) to a cellphone or an email address.
- customize your main screen (see page 46).
- select them as incoming call image to a contact in your directory.
- transfer them by data cable or microSD card to your computer.
- modify your photos through adding frames (see page 66).

13.1 Access


To access the function from the main screen:

- press the  key
- press the **OK** key to access the menu and select the  icon.

If you access the camera via the menu, you will be in Portrait mode. If you access it via the  key, you will be in landscape mode.


13.2 Camera

13.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object or landscape in the viewfinder and press **OK** or  to take the picture and the pictures will be automatically saved. But if you don't want it, you may directly delete it by pressing right softkey “**Delete**”.

13.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by using the following shortcuts:

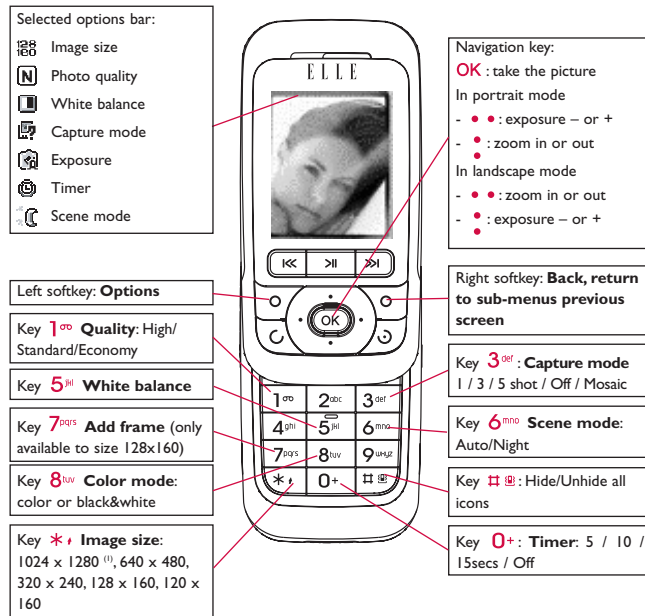 

From the photo shot screen, press the “Options” softkey not only to access: “Image size”, “Capture mode”, “Quality”, “Timer”, “White balance”, “Color mode”, “Add frame”, but also following ones:

- Media album** • Go to the media album feature.
- Storage** • You may choose saving location if MicroSD card is inserted.
- Restore default** • Make all settings recover as default value.
- Hotkeys** • List all hotkeys.

13.2.3 Options available after taking the photo

Once you have taken a photo, you can **Send** your photo, assign it to a contact or a main screen, etc, or **Delete** it, **Modify** it (see below), or access your **Media album**.

13.2.4 Modifying images

Access the “Media album\My creations” after taking a photo, and then select “Modify”.

 
13.3 Video

You can record unlimited length of video clip as long as the battery sustains and there is sufficient memory.



We strongly advise you to change the default folder to “Memory card” to store the photos you will take and videos you will record.

13.3.1 Video setting while in framing mode

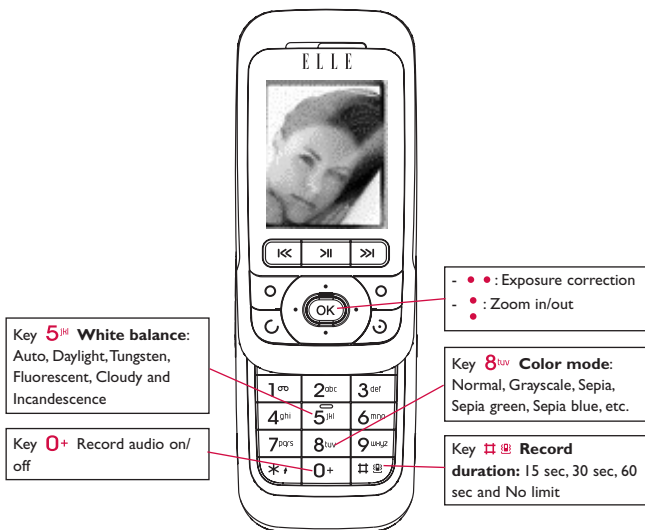

13.3.2 Framing mode

When you enter the "Video" function, you are in Framing mode. Use the cellphone screen as a viewfinder and press the "Options" softkey for White balance settings, to activate or deactivate the sound, to choose the color, to access the "Media album" or the "Camera", and to change the default folder.

13.3.3 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by pressing the **OK** or **☐** key.



If you receive a call in recording mode, video recording will be stopped and pop up to inquiry whether to save it.

13.3.4 Playing mode

In the list of "My creations", press "Options" to **Play** the video and choose **List View** (from thumbnail view), **Send**, assign it (**Set as**) to a contact or to the main screen.

Press **••** keys to adjust its playing speed.

Press ***+** key to shift between portrait and landscape mode.