



ALCATEL
mobile phones
www.alcatel-mobilephones.com

OT-V607A

ALCATEL
mobile phones

Introduction

TCT Mobile Limited would like to thank you for purchasing this cellphone.

Power music player/video player

- With playlist, lyrics display and equalizer
- Full screen video playback
- Watch the show on 1.8" TFT screen

Unlimited video recording

- Shoot video clips as long as you want ⁽¹⁾

USB mass storage

Simply a USB key.

Webcam


The best companion for PC messenger.

Table of contents

Introduction	1
Safety and use	5
General information.....	10
1. Your cellphone	12
1.1 Keys	13
1.2 Main screen icons	15
2. Getting started	17
2.1 Set-up.....	17
2.2 Power on your phone	19
2.3 Power off your phone	20
3. Calls	21
3.1 Making a call.....	21
3.2 Calling your voicemail	21
3.3 Receiving a call	22
3.4 During the call.....	23
3.5 Conference calls	24
3.6 Line switching (ALS).....	25
4. Menu.....	26
5. Call register.....	28
5.1 Call memory	28
5.2 My numbers	28
5.3 Billing	29
5.4 Call settings	29
6. Directory	32
6.1 Consulting your directory	32
6.2 Creating a file.....	33
6.3 Available options.....	34

⁽¹⁾ Depending on battery and free memory.

 7. Messages	35	12. Media album	53
7.1 Messages: Text/Multimedia message	35	12.1 My audio	53
7.2 Voice message	37	12.2 My images	54
7.3 Photo message.....	37	12.3 My videos	54
7.4 Video message.....	37	12.4 My creations.....	54
7.5 Voicemail.....	37	12.5 Unknown files	54
7.6 Settings	37	12.6 Memory card.....	55
8. My settings.....	39	12.7 Managing audio, images, videos and creations	56
8.1 Ringtones	39	12.8 Formats and compatibility	57
8.2 Color	40	12.9 Memory status.....	57
8.3 Clamshell.....	40	13. Camera & Video	58
8.4 Theme	41	13.1 Access	58
8.5 Antenna off mode.....	41	13.2 Camera	58
8.6 Equalizer	41	13.3 Video	60
8.7 Display	42	14. Music	63
8.8 Clock	43	14.1 Music	63
8.9 Keys	43	14.2 Settings	64
8.10 More settings.....	44	14.3 Playing with lyrics	64
9. Tools	47	15. Games	65
9.1 Organizer	47	16. Making the most of your cellphone	66
9.2 Alarm.....	47	16.1 PC suite.....	66
9.3 Calculator	47	17. Latin input mode/character table	67
9.4 Converter	48	18. Telephone warranty	71
9.5 Memory status.....	48	19. Accessories	73
9.6 Voice memo	49	20. Troubleshooting	74
10. My shortcuts	50		
11. WAP	51		
11.1 Homepage.....	51		
11.2 Bookmarks	51		
11.3 Recent pages	51		
11.4 Go to URL	51		
11.5 Profiles.....	51		



Safety and use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Recent studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. The use of these devices may be prohibited or restricted in certain areas. Do not use your phone's stereo or music feature with a headphone.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the cellphone from time to time to optimize its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the phone you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

Do not let small children use your cellphone without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C to +55°C (the max value depends on product ie. housing or paint).

Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List page 73). TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your phone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

 
- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15 minute break hourly.
- Play in a well lit room.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders.



Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.



• **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

• **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off. Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60 °C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your cellphone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at www.recyclewirelessphones.com

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

• **HOME POWERED CHARGERS:**

Home powered chargers will operate within the temperature range of: 0°C to 40°C. The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

110V charger (used in Mexico / USA):

Input: 100-240 V, 50/60 Hz, 0.15 A

Output: 5 V(5,V), 400mA

Battery: Lithium 3.7V/750 mAh

• **RADIO WAVES:**

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

 
The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone. Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested for use at the ear is 0.743 W/Kg and for use close to the body is 1.21 W/Kg.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

• LICENCES

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; European Pat. Nos. 0 842 463 (96927260.8), I 010 057 (98903671.0), I 018 069 (98950708.2); and additional patents are pending worldwide.

General information

 
 
 
- **Website:** www.alcatel-mobilephones.com
- **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatel-mobilephones.com

Your cellphone is a transceiver that operates on GSM networks with 850, 1900 MHz bands.

CE This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your cellphone can be obtained through our website: www.alcatel-mobilephones.com.



Protection against theft ⁽¹⁾

 
Your cellphone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your cellphone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your cellphone is stolen. This number allows your cellphone to be blocked preventing a third person from using it, even with a different SIM card.

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your cellphone or specific operator services.

⁽¹⁾ Contact your network operator to check service availability.

Your cellphone

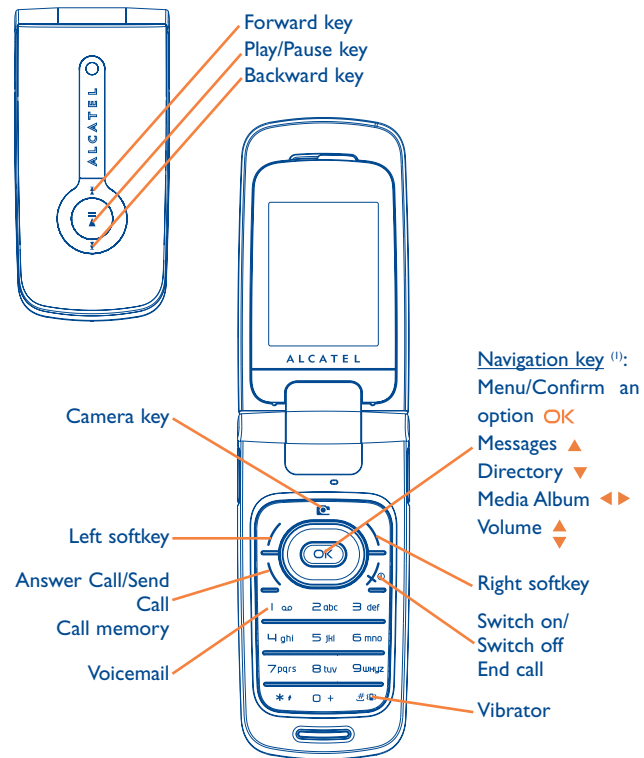

⁽¹⁾ Depending on your network operator.

1.1 Keys



Navigation key
Confirm an option (press the middle of the key)



Answer Call
Send Call
Access call memory (Redial) (short keypress)



Switch on/Switch off the cellphone (long keypress)
End call
Return to the main screen



Left softkey



Right softkey



Access your voicemail (long keypress)



In Edit mode:
- Short keypress: change input methods
- Switch from T9 predictive mode to Normal mode
- Long keypress: access the Symbols table



From main screen
- Short keypress: #
- Long keypress: activate/deactivate the vibrator
In edit mode:
- Short keypress: ␣ (space)
- Long keypress: add a word



Camera key
Short keypress: take a photo
Long keypress: go to the Music player screen and play the recent song.

















Short keypress: Play/pause
Long keypress: go to the Music player screen and play the recent song.












(in the playing mode) Short keypress: previous/next song
Long keypress: backward/forward

When there is an incoming event, the music keys are flashing.

1.2 Main screen icons ⁽¹⁾

-  **Battery charge level.**
-  **Vibrate alert:** your phone is in vibrate mode. Ringer is silenced except for alarm (see page 40).
-  **Headset connected.**
-  **Call forwarding activated:** your calls are forwarded (see page 30).
-  **Alarm clock programmed** (see page 47).
-  **Voicemail message received.**
-  **Unanswered calls.**
-  **WAP alerts** ⁽²⁾.
-  **Roaming.**
-  **Memory card scanning in progress.**
-  **Memory card scanning completed.**
-  **Line switching** ⁽²⁾; indicates the selected line.
-  **GPRS active.**
-  **Music player active.**

-  **Level of network reception.**
-  **USB cable connected.**
-  **Receiving a message in progress.**
-  **Sending a message.**
-  **Silence mode:** your phone is in silent mode. Ringer and vibrator are silenced except for alarm (see page 40).
-  **Message unread**
-  **Message list is full:** your messages are full. You must delete at least 1 old message to receive a new message.
-  **Preferred tariff areas** ⁽¹⁾.
-  **Antenna off mode.**

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

⁽²⁾ Depending on your network operator.

 
⁽¹⁾ Contact your network operator to check service availability.

2 Getting started

2.1 Set-up


Inserting and removing the SIM card ⁽¹⁾

You must insert your SIM card to make phone calls.

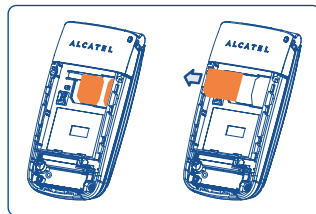

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

 
Installing and removing the battery

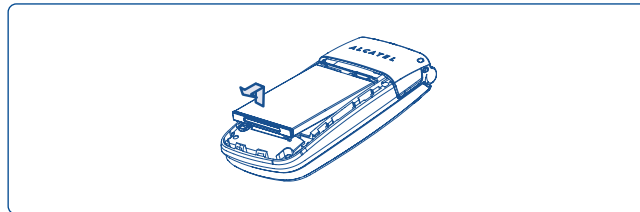

Insert and click the battery into place, then close the cellphone cover. Unclip the cover, then remove the battery.

⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

 Charging the battery

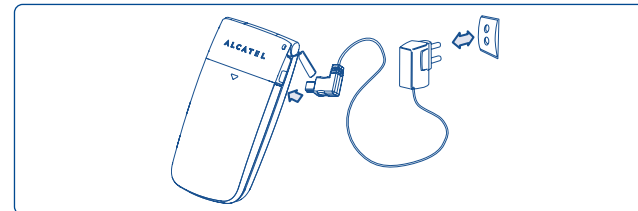


Connect the battery charger

- Charging may take about 20 minutes to start if the battery is dead.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The power outlet must be near the phone to avoid using extension cords when charging.
- When using your cellphone for the first time, charge the battery fully (approximately 3 hours).





 The charge is complete when the animation stops. Only use Alcatel chargers.

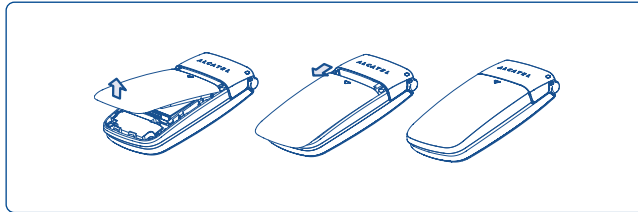Removing the back cover



2.2 Power on your phone

Hold down the  key until the cellphone powers on, type in your PIN code if necessary and then confirm with the  key. The main screen is displayed.



If you don't know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your cellphone and store your card in a safe place when not in use.

If messages are displayed, use the  key to browse through them in full or press the right softkey to return to the main screen.

While the phone is searching for a network, "Searching/Emergency" will be displayed.


In the power on screen, you also have access to "Media album", "Camera & Video" and "Music" functions even if your SIM card is not inserted.

2.3 Power off your phone

Hold down the  key from the main screen.


3 Calls

3.1 Making a call


Dial the desired number then press the  key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the  key.




To enter characters “+”, “W” (for tonewait) or “P” (used to store a number with extension number), hold down the  + key (the following characters will scroll by: 0, +, P,W).

Making an emergency call

If your phone is covered by the network, dial **911** and press the  key to make an emergency call (or any other number provided by your operator). This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.2 Calling your voicemail ⁽¹⁾

Your voicemail is an optional feature offered by your provider to accept voice messages if you are unable to answer a call. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the  key.



⁽¹⁾ Contact your network operator to check service availability.



If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to “**My Numbers**” (see page 28).



To use your voicemail service from abroad, contact your network operator before leaving.

3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.

If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.

If the flip is open

- To answer a call, press the  key.


If the flip is closed

- To answer a call, open the flip (if clamshell open answer option is activated, see page 40).



The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting ringer when ringing

Press the right softkey once while the cellphone is ringing. Answer the call by pressing the  key.

Rejecting a call

Press the  key once or the right softkey twice.

3.4 During the call

Available functions

During a call, you can use your directory, your diary, short messages, etc. without losing your correspondent by pressing the  key.

 Call on hold

 Ongoing call

 Handsfree

WARNING: move the handset away from your ear while using the “handsfree” option because the amplified volume might cause hearing damage.

 Directory

 Messages

 Organizer

 Services ⁽¹⁾

 Sound recorder (record your current call).

⁽¹⁾ Contact your network operator to check service availability.



Adjusting the volume



You can adjust the sound level during a call using the  key.

Handling two calls

- Answering a second call (Ensure that “**Call waiting**” is activated, see page 29).
- To call a second party during a call, dial the number directly.

3.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to 5). If you are on a double call, press “**Options**” and select “**Conference**” then confirm with the  key. If a third call comes in, answer it by pressing the  key and speak with your new correspondent.

This correspondent becomes a member of the conference if you press “**Options**” and select “**Joint conf.**”, and then confirm by pressing . Pressing  disconnects the current call.

To end the conference call, press “**Options**” and select “**End conference**”.

⁽¹⁾ Contact your network operator to check service availability.

3.6 Line switching (ALS) ⁽¹⁾

Your SIM card can contain two distinct cellphone numbers. Under “**Call register**”, choose “**Line switching**” and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use the two lines.



The services programmed on the default line do not impact those selected on the other line.

⁽¹⁾ Contact your network operator to check service availability.

4 Menu ⁽¹⁾

From the menu interface, you may directly access features by pressing the corresponding key (number keys and * + and # (D) keys) ⁽²⁾.

1. GAMES

2. MEDIA ALBUM

- My audio
- My images
- My videos
- My creations
- Unknown files
- Memory card
- Memory status

3. TOOLS

- Organizer
- Alarm
- Calculator
- Converter
- Memory status
- Voice memo

4. CAMERA & VIDEO

- Camera
- Video
- My creations

5. DIRECTORY

6. MESSAGES

- Messages
- Voice message
- Photo message
- Video message
- Voicemail
- Settings

7. CALL REGISTER

- Call memory
- My numbers
- Billing
- Call settings

⁽¹⁾ There may be certain differences between this menu tree and phone's operation, depending on your operator.

⁽²⁾ Only available in “**Board**” mode.

8. MY SETTINGS

- Ringtones
- Color
- Clamshell
- Theme
- Antenna off mode
- Equalizer
- Display
- Clock
- Keys
- More settings...

9. MY SHORTCUTS

*. SERVICE ⁽¹⁾

- VAS
- Data account
- My One Touch
- Service dial number

0. MUSIC


- Playlist
- Album
- Artist
- Genre
- All songs
- Recently played
- My star list
- Updated songs




#. WAP

- Homepage
- Bookmarks
- Recent pages
- Go to URL
- Profiles

5 Call register

5.1 Call memory

You can access your call memory by pressing the  key from the main screen. Choose the icon of the desired list:

-  Unanswered calls
-  Outgoing calls (Redial)
-  Answered calls

Select a number of the call memory and press the “Options” softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

5.2 My numbers

Type in or modify your cellphone number or the number to access your voicemail and confirm by pressing **OK**. Your cellphone number is usually written on your SIM card.

⁽¹⁾ Contact your network operator to check service availability.

5.3 Billing ⁽¹⁾

You can access different items with this option:

- Amount**
 - You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice.
- Duration**
 - You can view the total duration of all outgoing calls or reset it.
- GPRS counter**
 - Management of the volume of data communications charged for (in kilobytes).
- Beep duration**
 - You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by **OK**).

5.4 Call settings ⁽¹⁾


You can access a number of items with this option:

5.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

5.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.
- If busy, no reply or unreachable.

5.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

Outgoing calls • The following configurations are possible:

- All calls
- All outgoing calls are barred.
- International calls
- Outgoing international calls are barred.
- International except home
- Outgoing international calls except those to your country of subscription are barred.

Incoming calls • The following configurations are possible:

- All calls
- All incoming calls are barred.
- Roaming
- Incoming calls are barred when you are abroad.

Cancel all barring • Deactivate all call barring.

Change barring PW • Change the original PW for activating call barring.

⁽¹⁾ Contact your network operator to check service availability.

5.4.4 Line switching ⁽¹⁾



Line switch between line 1 and line 2.

5.4.5 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.





6 Directory

6.1 Consulting your directory

To access the **directory** from the main screen, press the  key ⁽¹⁾ downwards or press the **OK** key and select the  icon from the menu.

You can also customize a quick access to your contact with the keypad customization (see page 43).

You have 4 directories:

-  SIM directory
-  General
-  Phone directory
-  Group

In addition to the directories already provided, you can create up to 5 groups (maximum 100 entries per group).

⁽¹⁾ Depending on your SIM card.

⁽¹⁾ Depending on your network operator.

Searching for a name by its first letter

You can search for the person's name by pressing the key associated with the first letter of his/her name.

Read a file

Select a name from your directory, then press **OK** to read the file.

Making the call

Press the **** key once the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Cellphone, Home, Office, etc.) using the **◆** key. Press the **OK** key to make the call.



Information in the directory and the diary may be sent to and received from a computer using the PC suite (see page 66).

6.2 Creating a file

Select the directory in which you wish to create a file, press the **"Options"** softkey, select **"Create file"** then **OK**.

When you create a new contact in the product directory, at least one of the following fields must be filled in: Name, Group, Cellphone, Home, Ringtone, Image, Video, Work, Fax, Email, Birthday, Company.

You can move from one field to another using the **◆** key.



If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 21).

6.3 Available options

From the list of names in SIM directory, General directory or Group you can access the following options via left softkey:

View

- View a complete file: name, numbers, address, e-mail, etc.

Create file

- Create a file (name, numbers, address, e-mail, etc.) in the desired directory.

Create text/ multimedia message

- Send an SMS/MMS to a contact you selected from the directory.

Edit

- Modify the contents of a file: name, number, ringtone, image, etc.

Delete

- Delete the selected file.

Delete all

- Delete all the files in the current directory.

Copy all

- Copy the whole directory to the SIM or General directory only if there is sufficient memory.

Send vCard

- Exchange data via MMS.

Settings

- More information and settings.

Create group

- Create a group of files.

Delete group

- The group and its files will be completely deleted.

Associate/ Not associate

- If the original one in SIM or General directory is modified, the one in a group will be updated accordingly, otherwise not.

7 Messages.....

You can create, edit and receive SMS, MMS or a Postcard ⁽¹⁾, with this cellphone.

MMS is a message whereby you can send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.

7.1 Messages:Text/Multimedia message ⁽²⁾

7.1.1 Create message

From the main menu select "**Messages**" to create text/multimedia message.

You can type a message but you can also modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "**Options**" to access all the messaging options.

You can save your messages that you send often to **Drafts** or **Templates**.











An SMS message of more than 160 characters (the number of characters depends on the languages you writing in) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

⁽¹⁾ Depending on your network operator and product availability.


⁽²⁾ Depending on your network operator.

7.1.2 Inbox

All received messages (read and unread) are stored in the same Inbox.

When viewing your messages, you will find the following status icons, depending on the type of message:  unread SMS in phone,  unread SMS in SIM card,  read SMS in phone,  read SMS in SIM card,  unread MMS in phone,  read MMS in phone,  message reception in progress and  message sending in progress.

Receiving and reading SMS/MMS

When you receive a new message, the following message is displayed: "**X new message!**", a beep sounds, the  icon shows up, a line with the number of messages appears on the screen. Select this line and press **OK** to read it directly from the main screen.

Once you have read the message, the following options are given: **Reply**, **Forward** the message to another person, **Edit**, **Delete**, **Delete all** and extract number or URL (**Use number/Use URL**).

7.1.3 Unsent

All messages in which delivery failed.

7.1.4 Sent

All sent messages.

7.1.5 Drafts

All drafts messages.

7.1.6 WAP alerts

Store WAP push messages.

7.1.7 Empty folder

Delete all messages in "Inbox/Unsent/Sent/Drafts".

7.1.8 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined text messages.

7.2 Voice message

Record voice and send as MMS.

7.3 Photo message

Take a photo and send as MMS.

7.4 Video message

Take a video and send as MMS.

7.5 Voicemail

All voice messages received.

7.6 Settings

7.6.1 Text messages

Profile settings • Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.

General setting • Delivery report, request for acknowledgement of delivery report On/Off. Reply path ⁽¹⁾ show reply path.

⁽¹⁾ Depending on your network operator.

Memory status • Memory used on the phone.

Preferred storage • Select default message storage, SIM or phone.

Prof. Bearer • Bearer preference.

7.6.2 Multimedia messages

Edit • Set edit mode, image size and signature.

Sending • Set the values for validity period, Read report, etc.

Retrieve • Set the values for Home network, Roaming network, etc.

Filter • Set criteria for filtering.

Profiles • Follow the same procedure as for setting your WAP connection.

Memory status • Memory used on the phone.

7.6.3 CB SMS ⁽¹⁾

Receive mode • Enable to receive broadcast SMS.

Read message • Store the received messages.

Languages • Language selection.

Channel setting • Add/Edit channels.

⁽¹⁾ Depending on your network operator.