


1 Your cellphone.....

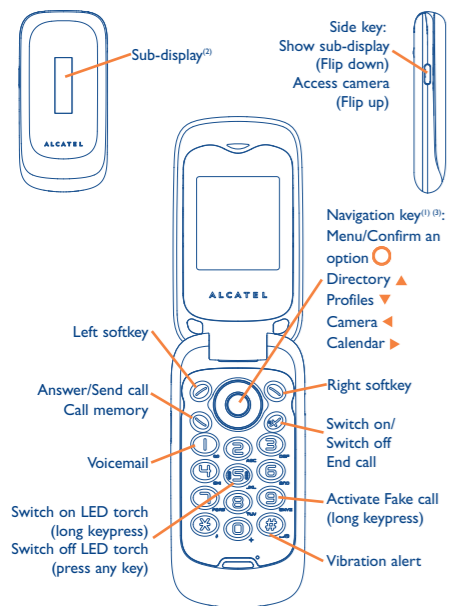

- 1.1 Keys**
- Navigation key ⁽¹⁾
Confirm an option (press the middle of the key)
Access wallpaper settings (long keypress)
 - Answer
Send a call
Access call memory (Redial) (short keypress)
 - Switch on/Switch off the cellphone (long keypress)
End call
Return to the main screen
 - Left softkey
 - Right softkey
 - Access your voicemail (long keypress)
 - In Edit mode:
- Short keypress: change input methods
- Long keypress: access the Symbols table
 - From main screen
- Short keypress: #
- Long keypress: activate/deactivate the vibrator
In Edit mode:
- Short keypress: (space)
- Long keypress: add a word

⁽¹⁾ Depending on your network operator.
⁽²⁾ Display events (call, SMS, MMS, alarm...) or current status.
⁽³⁾ Disabled when "Homescreen" is on.

OT-565A
ALCATEL
mobile phones

English - CJB31FIALAAA ⁽¹⁾ Depending on your network operator.

6 Settings

From the main screen, select the icon menu and select the function of your choice in order to customize your cellphone: Color, Clamshell, Display, Clock, Keys, Home screen ⁽¹⁾, More settings...

6.1 Home screen

From home screen, you can quickly access the features that you use the most.

When activated, press keys to scroll up/down application shortcuts one by one, and press keys to access a list of available actions of the selected applications. To close the list, press key.

This feature is activated by default. To exit this function, you can set it off from "Settings\Home screen\OFF".

7 Bluetooth™ (1)

Access this feature by pressing the key to enter the main menu, then selecting "Bluetooth".

8 Tools

8.1 Calendar

Once you enter this menu from "Tools", there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

8.2 Alarm

Your cellphone has a built-in alarm clock with a snooze feature.

8.3 Calculator

Hold down the key to get the decimal point. Confirm with the key or the left softkey.

8.4 Fake call

This program enables you to call yourself by simulating a caller number/name, ringtone, contact photo at a scheduled time. It helps you to politely escape from social situations at any time you wish. This call can be rejected by key.

Settings

- Predefined settings of Caller name/number, Call time, Ringtone, Image (Contact photo).

Activate

- Activate a fake call by "Tools\Fake call\Activate" or by a long press of the key on the main screen. The call will then be made at the predetermined time.

8.5 Converter

Unit converter and Currency converter.

8.6 Voice memo

This feature enables you to record a call by selecting "Voice memo" while communicating. To record a sound, select "Voice memo", then "New record".

8.7 Memory status

It will indicate how much space is used and how much is currently free on your cellphone or memory card (if any).

1.2 Main screen icons

- Battery charge level.**
- Vibration alert:** your cellphone vibrates, but neither rings nor beeps except for the alarms.
- Bluetooth status** (Blue - Activated).
- Headset connected.**
- Call forwarding activated:** your calls are forwarded.
- Alarm clock programmed.**
- Level of network reception.**
- Voicemail message arrived.**
- Missed calls.**
- WAP alerts ⁽¹⁾.**
- Roaming.**
- FM radio is on.**
- SIM card unavailable.**
- Memory card scanning in progress.**
- Memory card scanning completed.**
- Line switching ⁽¹⁾:** indicates the selected line.
- GPRS connection status** (Blue - Activated).
- Shown only in no ciphering mode while calling, sending/receiving SMS.
- Reception of a message in progress.**
- Sending a message.**
- Silence mode:** your cellphone neither rings, beeps nor vibrates except for the alarms.
- Message unread.**
- Message list is full:** your terminal cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
- Flight mode.**

⁽¹⁾ Depending on your network operator.

8.8 My shortcuts

Access the shortcuts already programmed. To programme new shortcuts: select "My shortcuts" if you want to create a quick access to a function, Directory, or WAP Bookmarks, etc.

9 WAP

Access Wap options: Homepage, Bookmarks, Recent pages, Go to URL, Offline pages and Profiles.

10 File manager

You will have an access to all audio and visual files stored in cellphone or memory card in File manager.

10.1 My audios

Choose an audio for the ON/OFF screen, for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

10.2 My images

You can select an image or a photo as wallpaper, ON/OFF screen, or assign it to a contact in the directory.

10.3 My creations

This feature stores all the photos captured by your cellphone.

10.4 Unknown files

Store files of unsupported format.

2 Getting started

2.1 Set-up

 
Removing the back cover.



Installing the back cover



Installing the battery



Removing the battery



Inserting the SIM Card



Removing the SIM Card



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out. Please power off your cellphone before you remove the SIM card.

2.2 Power on your cellphone

Hold down the key until the cellphone powers on.

2.3 Power off your cellphone

Hold down the key from the main screen.

10.5 Memory card

You will have access to all files stored in memory card here.

Removing the memory card



Installing the memory card



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

10.6 Formats and compatibility

- Sounds: mp3, midi, wav, amr
- Images: jpg, gif, bmp

11 Music player

Access this feature from the main menu by selecting "Multimedia player". You will have full flexibility of managing music both on your cellphone and memory card.

3 Calls

3.1 Making a call

Dial the desired number then press the key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the key.

Making an emergency call

If your cellphone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.2 Calling your voicemail ⁽¹⁾

To access your voicemail, hold down the key.

3.3 Receiving a call

When you receive an incoming call, press the key to talk and then hang up using the key.

3.4 Available functions during the call

During a call, you can use your directory, your diary, short messages, etc. without losing your correspondent by pressing the key.

4 Directory

4.1 Consulting your directory

To access the **directory** from the main screen, press the key and select the icon from the menu.

4.2 Adding a contact

Select the directory in which you wish to add contact, press the "Options" softkey, select "Add contact".

5 Messages

5.1 Create message

From the main menu select "Messages" to create text/multimedia message. You can type a message and you can also modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "Options" to access all the messaging options. You can save your messages that you send often to **Drafts**.

⁽¹⁾ Contact your network operator to check service availability.

⁽¹⁾ Depending on your network operator.

Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your cellphone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

